

SONY®




Hi8 CAMCORDER

EVW-300P

SERVICE MANUAL

Vol. 1 (1st Edition)

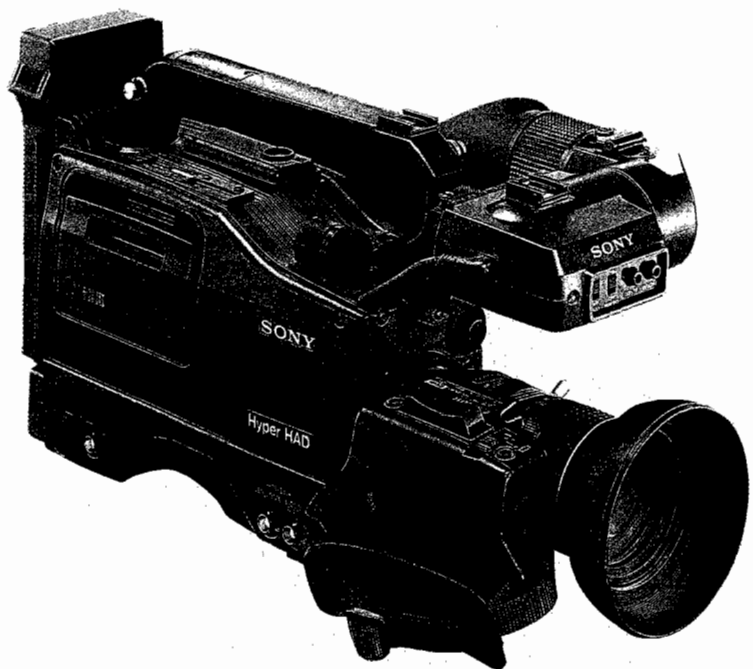

Hi8
Hyper HAD™

SAFETY RELATED COMPONENT WARNING

Components identified by shading and  marked on the schematic diagrams and parts list are critical to safe operation. Replace these components with SONY parts whose part numbers appear as shown in this manual or in supplements published by SONY.

このマニュアルに記載されている事柄の著作権は当社にあり、説明内容は機器購入者の使用を目的としています。従って、当社の許可なしに無断で複製したり、説明内容（操作、保守等）と異なる目的で本マニュアルを使用することを禁止します。

The material contained in this manual consists of information that is the property of Sony Corporation and is intended solely for use by the purchasers of the equipment described in this manual.

Sony Corporation expressly prohibits the duplication of any portion of this manual or the use thereof for any purpose other than the operation or maintenance of the equipment described in this manual without the express written permission of Sony Corporation.

Le matériel contenu dans ce manuel consiste en informations qui sont la propriété de Sony Corporation et sont destinées exclusivement à l'usage des acquéreurs de l'équipement décrit dans ce manuel.

Sony Corporation interdit formellement la copie de quelque partie que ce soit de ce manuel ou son emploi pour tout autre but que des opérations ou entretiens de l'équipement à moins d'une permission écrite de Sony Corporation.

Das in dieser Anleitung enthaltene Material besteht aus Informationen, die Eigentum der Sony Corporation sind, und ausschließlich zum Gebrauch durch den Käufer der in dieser Anleitung beschriebenen Ausrüstung bestimmt sind.

Die Sony Corporation untersagt ausdrücklich die Vervielfältigung jeglicher Teile dieser Anleitung oder den Gebrauch derselben für irgendeinen anderen Zweck als die Bedienung oder Wartung der in dieser Anleitung beschriebenen Ausrüstung ohne ausdrückliche schriftliche Erlaubnis der Sony Corporation.

TABLE OF CONTENTS

1. SERVICE INFORMATION

1-1. Cabinet Removal and Installation	1-1
1-2. Servicing of Mechanical Deck Block	1-3
1-2-1. Mechanical Deck Removal	1-3
1-2-2. Mechanical Deck Extension	1-4
1-2-3. SS-50/50P Board Extension	1-4
1-2-4. Removal and Installation of Cassette Compartment Assembly	1-5
1-3. Servicing of Printed Circuit Boards	1-5
1-3-1. Removal of AU-162/162P Board	1-5
1-3-2. Removal of VO-43/43P Board	1-6
1-3-3. Removal and Insertion of Board (AT-70, ES-4/4P, IE-33/33P, PR-159/159P Boards)	1-6
1-4. Modification When Installing DXF-50/40A Series	1-7
1-5. Location of Main Parts	1-8
1-5-1. Location of Main Mechanical Parts/Components	1-8
1-5-2. Location of Printed Circuit Board	1-10
1-6. Printed Circuit Board	1-13
1-7. Connectors	1-13
1-8. Connector Input/Output Signal	1-14
1-9. Spare Parts	1-15
1-10. How to Operate the Unit Without Cassette Tape (Muting of the Tape Beginning/End Sensors)	1-16
1-11. Cassette Tape Removal Procedure When Normal Ejection is not Possible	1-17
1-11-1. Using the SELF DIAG mode	1-17
1-11-2. Cassette Tape Removal in Case of Power Supply Trouble	1-18
1-12. Fixtures	1-19
1-13. Diagnostic mode	1-21
1-14. FP-40/40P Board Self Diagnosis	1-34
1-15. Battery End/Near End Voltage Setting	1-36
1-16. Rec Pause Position Adjustment	1-37
1-17. Note on SS-50/50P Replacement	1-37
1-18. Board Switch Settings	1-38
1-19. System Configuration	1-47
1-20. Level Check Sheet	1-50

2. PERIODIC CHECK AND MAINTENANCE

2-1. Maintenance After Repairs	2-1
2-1-1. Cleaning of Rotary Upper Drum	2-1
2-1-2. Cleaning of Tape Path System	2-1
2-1-3. Cleaning of Drive System	2-1
2-2. Periodic Check	2-1
2-3. Hours Meter	2-2
2-4. Smear Grease	2-3
2-5. Apply Oil	2-4
2-6. How to Use Cleaning Tape	2-5
2-7. Others	2-5

3. REPLACEMENT OF MAJOR PART

Preparation for Replacement of part	3-1
3-1. Replacement of HC Roller Assembly	3-2
3-2. Replacement of Guide Guard Assembly	3-3
3-3. Replacement of DC Motor (Capstan Motor)	3-4
3-4. Replacement of S and T Brakes	3-5
3-5. Replacement of LB Brake and Shaft Holding Pin	3-6
3-6. Replacement of LB Release Arm	3-7
3-7. Replacement of RK Stopper and Stopper Arm	3-7
3-8. Replacement of Pinch Arm Assembly and TG-7 Arm Assembly	3-8
3-9. Replacement of TG-2 Assembly	3-9
3-10. Replacement of S Reel Table Assembly	3-10
3-11. Replacement of T Reel Table Assembly	3-10
3-12. Replacement of Tension Regulator Band Assembly and Tension Regulator Arm Assembly	3-11
3-13. Tension Regulator FWD Position Preset	3-13
3-14. Replacement of Drum Assembly and Condensation Sensor	3-14
3-15. Replacement of Rotary Upper Drum and Lower Drum	3-16
3-16. Replacement of Eject Lever, Switch Lever Assembly and Pinch Sub Arm Assembly	3-17
3-17. Replacement of Timing Belt (L), RC Gear Assembly, Loading Lever Assembly, Timing Belt (S) and Connecting Gear Assembly	3-18
3-18. Replacement of Idler Pulley, TS Brake Assembly, LB Gear Assembly and RK Gear Assembly	3-20
3-19. Replacement of UL Gear, UL Brake, UL Arm and LB Leaf Spring	3-21
3-20. Replacement of Coaster (Right) Assembly and Drive Gear (Right) Assembly	3-22
3-21. Replacement of Coaster (Left) Assembly and Drive Gear (Left) Assembly	3-23
3-22. Replacement of Loading Motor, Brake Release Arm, Wheel Gear and Worm Assembly	3-25
3-23. Replacement of CCD Unit	3-26
3-23-1. Replacement of CCD Unit	3-26
3-23-2. Replacement of LENS Connector	3-27

4. TORQUE AND BACK TENSION ADJUSTMENT

4-1. FWD Back Tension Adjustment	4-1
4-2. Check of Reel Torque	4-1

5. TAPE PATH ADJUSTMENT

Alignment Information	5-1
-----------------------------	-----

5-1.	Preparation for Adjustment	5-3
5-2.	Tracking Adjustment	5-4
5-3.	Tracking Fine Adjustment	5-4
5-4.	No. 2 Guide Adjustment	5-5
5-4-1.	No. 2 Guide (TG-2) Height Preset	5-5
5-4-2.	No. 2 Guide (TG-2) Adjustment	5-6
5-5.	No. 7 Guide (TG-7) Adjustment	5-7
5-6.	Check of CUE and REV Waveforms	5-8
5-7.	Check after Adjustment	5-8
5-7-1.	Tracking Check	5-8
5-7-2.	Recovery Check of Waveform	5-9
5-7-3.	Tape Running Check	5-10
5-8.	Switching Position Adjustment	5-10

6. CAMERA ALIGNMENT

6-1.	Preparation	6-1
6-1-1.	Equipment Required	6-1
6-1-2.	Connection	6-2
6-1-3.	Switch Setting Before Adjustment	6-3
6-1-4.	Note on Adjustment	6-3
6-1-5.	Adjustment Item	6-3
6-2.	CCD Drive System Adjustment	6-4
6-2-1.	G/R/B V Substrate Voltage Adjustment	6-4
6-2-2.	G/R/B RG Voltage Adjustment	6-4
6-3.	SYNC Signal System Adjustment	6-5
6-3-1.	Sub-carrier Frequency Adjustment	6-5
6-4.	Encoder System Adjustment	6-5
6-4-1.	Color-Bar 75%/100% Adjustment	6-5
6-4-2.	Carrier Balance Adjustment	6-6
6-4-3.	Color-Bar Size Adjustment	6-6
6-4-4.	Int CB Y Adjustment	6-7
6-4-5.	Color Vector Adjustment	6-7
6-4-6.	Matrix Adjustment	6-8
6-5.	Video Process System Adjustment	6-9
6-5-1.	1H Out Balance Adjustment	6-9
6-5-2.	2H Out Balance Adjustment	6-10
6-5-3.	1H GAIN Adjustment	6-11
6-5-4.	2H GAIN Adjustment	6-12
6-5-5.	G-ch/B-ch/R-ch Input GAIN Adjustment	6-13
6-5-6.	G-ch GAIN/GAMMA/PED Adjustment	6-14
6-5-7.	R-ch/B-ch GAIN/PED Adjustment	6-15
6-5-8.	G-ch Black Set and Pedestal Adjustment	6-16
6-5-9.	R-ch/B-ch Black Set and Pedestal Adjustment	6-16
6-5-10.	Knee Adjustment	6-17
6-5-11.	Pre Knee Adjustment	6-18
6-5-12.	PR White Clip Adjustment	6-18
6-5-13.	Aliasing Adjustment	6-19
6-5-14.	Aperture Crispening Adjustment	6-20
6-5-15.	Y _H Level Adjustment	6-21
6-5-16.	DTL Crispening Adjustment	6-22
6-5-17.	DTL Aliasing Adjustment	6-23
6-5-18.	H/V Ratio Adjustment	6-24
6-5-19.	Detail Level Adjustment	6-25

6-5-20.	ES White Clip Adjustment	6-26
6-5-21.	Zebra Level Adjustment	6-26
6-5-22.	Auto Iris Adjustment	6-27

7. VTR ELECTRICAL ALIGNMENT


7-1.	Preparation	7-1
7-1-1.	Equipment Required	7-1
7-1-2.	Adjustment Fixture	7-1
7-1-3.	Connection	7-2
7-1-4.	Initial Setting and Adjustment	7-2
7-1-5.	Color Bar Signal	7-3
7-2.	Servo System Adjustment	7-4
7-2-1.	PWM Oscillation Frequency Adjustment	7-4
7-3.	Audio System Adjustment	7-4
7-3-1.	Audio AGC Adjustment	7-4
7-3-2.	Audio AFM EE Level Adjustment	7-4
7-3-3.	PCM Master Clock Adjustment	7-5
7-3-4.	PCM Playback VCO Free-Frequency Adjustment	7-5
7-3-5.	Audio PCM D/A Converter Level Adjustment	7-5
7-3-6.	Audio PCM NR Decode Level Adjustment	7-5
7-3-7.	Audio PCM A/D Converter offset Adjustment	7-6
7-3-8.	PCM 1 EE Level Adjustment	7-6
7-3-9.	PCM 2 EE Adjustment	7-6
7-3-10.	PCM 1 REC Level Adjustment	7-7
7-3-11.	PCM 2 REC Level Adjustment	7-7
7-3-12.	Line AU-1 Monitor out Level Adjustment	7-7
7-3-13.	Line AU-2 Monitor out Level Adjustment	7-7
7-3-14.	PCM 1 meter Adjustment	7-8
7-3-15.	PCM 2 meter Adjustment	7-8
7-3-16.	AFM meter Adjustment	7-8
7-3-17.	Battery meter Adjustment	7-9
7-3-18.	Audio AFM Carrier Frequency Adjustment	7-9
7-3-19.	AFM Deviation Adjustment	7-9
7-3-20.	PCM REC Current Adjustment	7-10
7-4.	Video System Adjustment	7-10
7-4-1.	PB RF Frequency Adjustment	7-11
7-4-2.	REC Y Adjustment	7-11
7-4-3.	Y/C Sep Frequency Adjustment	7-12
7-4-4.	IR Adjustment	7-13
7-4-5.	Emphasis Level Adjustment	7-13
7-4-6.	Chroma Emphasis Adjustment	7-14
7-4-7.	Chroma Jog Phase Adjustment	7-14
7-4-8.	Burst Adjustment	7-15
7-4-9.	Hi8 mode PB Y Level Adjustment	7-15
7-4-10.	STD mode PB Y Level Adjustment	7-16
7-4-11.	PB Y Level Adjustment	7-16
7-4-12.	EE Line out Level Adjustment	7-16
7-4-13.	PB Line out Level Adjustment	7-17

7-4-14. Low Band mode Y FM Carrier	
Adjustment	7-17
7-4-15. Low Band mode Y FM Deviation	
Adjustment	7-18
7-4-16. Hi8 mode Y FM Carrier Adjustment	7-18
7-4-17. Hi8 mode Y FM Deviation Adjustment	7-18
7-4-18. REC Video REC Current Level	
Adjustment	7-19
7-4-19. REC Chroma REC Current Adjustment	7-20
7-4-20. REC AFM REC Current Adjustment	7-21
7-4-21. Chroma Cancel Balance Adjustment	7-22
7-4-22. C Correlation Phase Adjustment 1	7-22
7-4-23. C Correlation Phase Adjustment 2	7-22
7-4-24. C Correlation Phase Adjustment 3	7-23
7-4-25. EE Video out Chroma Level Adjustment	7-23
7-4-26. PB Chroma Level Adjustment	7-23

SER

1-1. CABINET REMOVAL AND INST

Battery Case

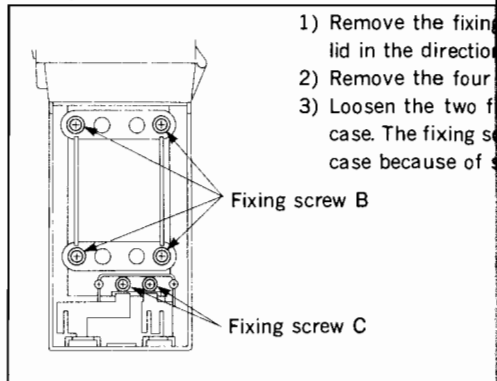

- 1) Remove the fixing lid in the direction of the arrow.
- 2) Remove the four fixing screws from the case. The fixing screws cannot be removed from the case because of the stoppers.
- 3) Loosen the two fixing screws from the case. The fixing screws cannot be removed from the case because of the stoppers.

Fixing screw B

Fixing screw C


the side panel (right) assembly. The fixing screws cannot be removed from the side panel (right) assembly because of stoppers. Remove the SW-484 board. Remove the SW-485 board. Disconnect the switch from the harness from frame. Disconnect the connectors CN1 and CN2 of the Board. Disconnect the connectors CN1 and CN2 of the Board.

Side Panel (Left) Assembly

- 1) Remove the cassette lid.
- 2) Loosen the four fixing screws and remove side panel (left) assembly. The four fixing screws cannot be removed from the side panel (left) assembly because of stoppers.
- Install first the side panel (left) assembly and then install the cassette lid.

Cassette Lid

- 1) Turn on the power and press the EJECT button. The cassette lid will be opened.
- 2) Remove the two screws (+B2×8) and remove the cassette lid while pushing it down.
- Install first the side panel (left) assembly and then install the cassette lid.
- Put the two claws of the cassette lid to the holes and install the cassette lid while pushing it up.

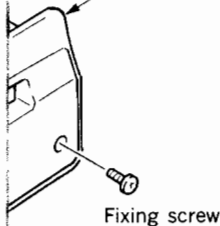

Fixing screw

g screw

1-2-2. Mechanical Deck Extension

Fixtures: SS Extension Flexible Card Wires

JH-099 (26P) (J-6360-990-A) two


JH-100 (14P) (J-6361-000-A) one

1. Remove the mechanical deck according to section 1-2-1.
2. Insert the extension flexible card wires as shown below, ensuring that they go as far as the base of the mating connectors on the SS-50/50P board, then push down each connector locking piece as shown in Fig. 1 until the connector locks.

● SS-50/50P board	● SS extension flexible card wire
CN106	JH-099
CN101	JH-100
CN107	JH-099

Note: When inserting the flexible card wires, ensure that the insulated part (white part) of each flexible wire is on the side nearer you.

3. Connect each extension flexible card wire to flexible harness FL-125 on the MB-381/381P board, in sequence from the top.

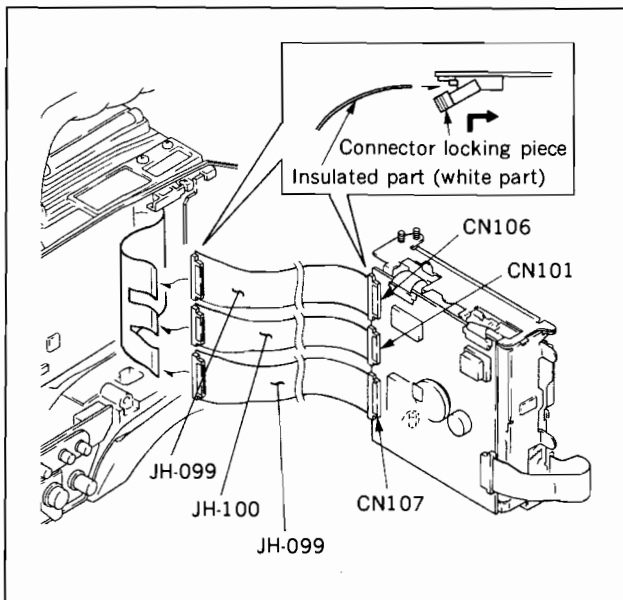

1-2-3. SS-50/50P Board Extension

Fixtures: SS Extension Flexible Card Wires

JH-099 (26P) (J-6360-990-A) two

JH-100 (14P) (J-6361-000-A) one

JH-101 (13P) (J-6361-010-A) one

JH-102 (11P) (J-6360-020-A) one


Extend the SS-50/50P board as follows when it is necessary to check the soldering side of the SS-50/50P board or the rear of the mechanical deck.

1. Extend the mechanical deck according to section 1-2-2.
2. Disconnect the two connectors CN1 and CN2 of the flexible card wire from the SS-50/50P Board.
3. Remove the two screws, then open the SS-50/50P board.
4. Insert the extension flexible card wires to the base of the mating connectors on the SS-50/50P board, as shown below.

● SS-50/50P board	● SS extension flexible card wire
CN001	JH-101
CN002	JH-102

Note: When inserting the flexible card wires, ensure that the insulated part (white part) of each flexible wire is on the component side.

5. Connect the SS extension card wire JH-101 to the connector of the flexible card wire FP-89.
6. Connect the SS extension card wire JH-102 to the connector of the flexible card wire FP-90.

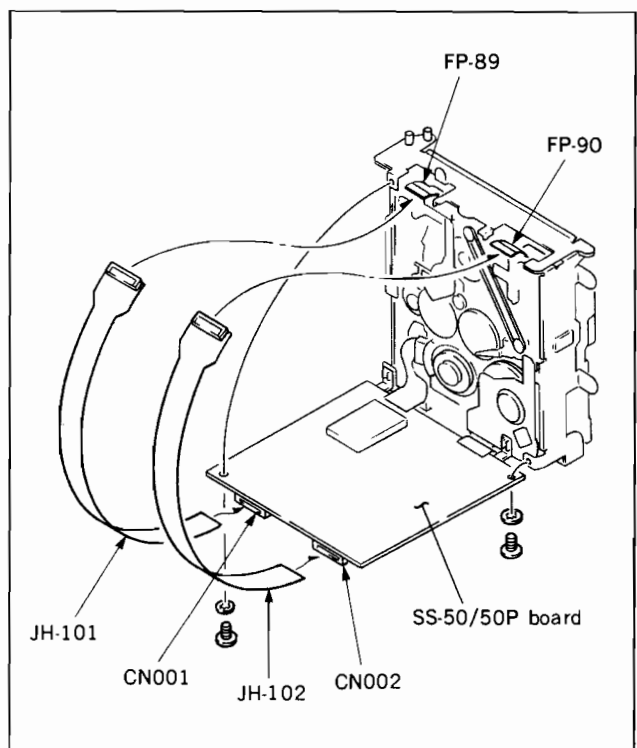

[illegible]

1. Remove the side panel (left) according to section 1-1.
2. Remove the two fixing screws, then remove the cassette compartment assembly in the direction of the arrow.



-
- A part
- EJECT lever
- Loading motor side
- B part


- ### 1-3-1. Removal of AU-162/162P Board

-
- Diagram illustrating the connection of the AU-162/162P board to the main unit. The board is shown being inserted into a slot, and a screw is shown being tightened to secure it. Labels include 'Hinge', 'CN1', 'CN2', 'Hinge', and 'AU-162/162P board'.

- EVW-300 (UC)
EVW-300P (EK)

1-3-2. Removal of VO-43/43P Board


1. Remove the AU-162/162P board according to section 1-4-1.
2. Disconnect the two connectors CN1 and CN2 of the flexible card wires from the VO-43/43P Board.
3. Remove two fixing screws and open the VO-43/43P Board.
4. Raise the VO-43/43P board, then remove support screw (B) from the receptacle (lower).
5. Pull out support screw (A) and the stopper screw of the VO-43/43P board from the receptacle (upper).

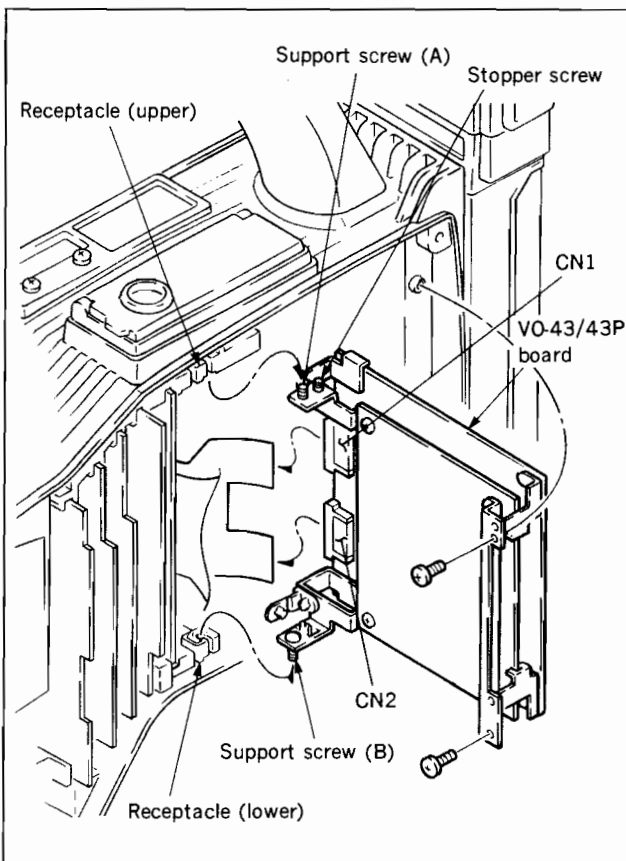

1-3-3. Removal and Insertion of Board (AT-70, ES-4/4P, IE-33/33P, PR-159/159P Boards)

Removal

1. Loosen the four screws, and open the side panel (right).
2. Grasp the board with the fingers, avoiding the components mounted on it, then pull it out while moving it gently up and down.

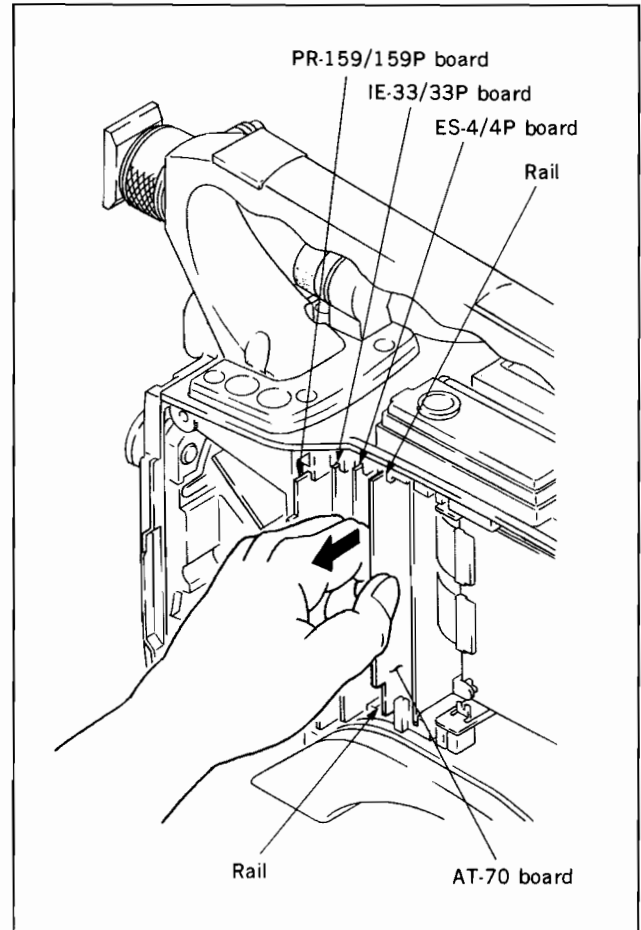

Installation

1. Align the edges of the board with the upper and lower rail grooves, then push in the board as far as it will go.


1-4. MODIFICATION WHEN INSTALLING DXF-50/40A SERIES

It is necessary to carry out the following modification when installing the DXF-50/40A series viewfinder.


Parts to be obtained

- Shoe (3-664-218-11) one
- Leaf spring (3-664-228-00) one
- Stopper screw (3-664-213-00) one
- Screw +K3×6 (7-682-247-04) four

1. Remove the two screws, then remove the handle lid.

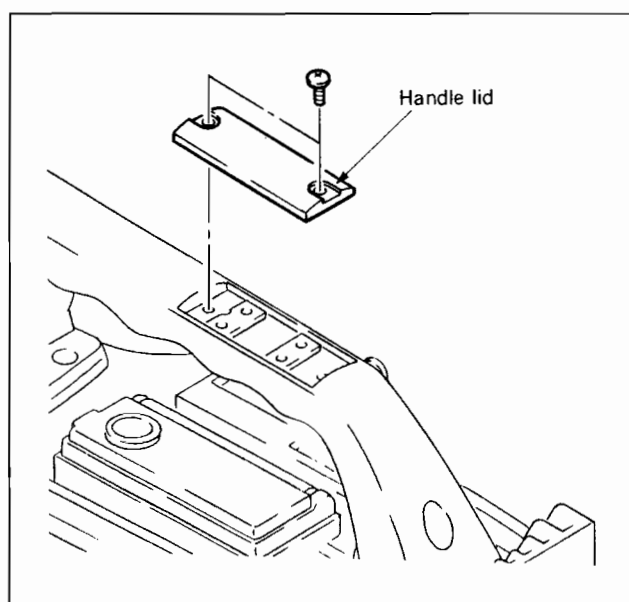


2. Install the shoe using the four screws (+K3×6), then install the leaf spring with the stopper screw.

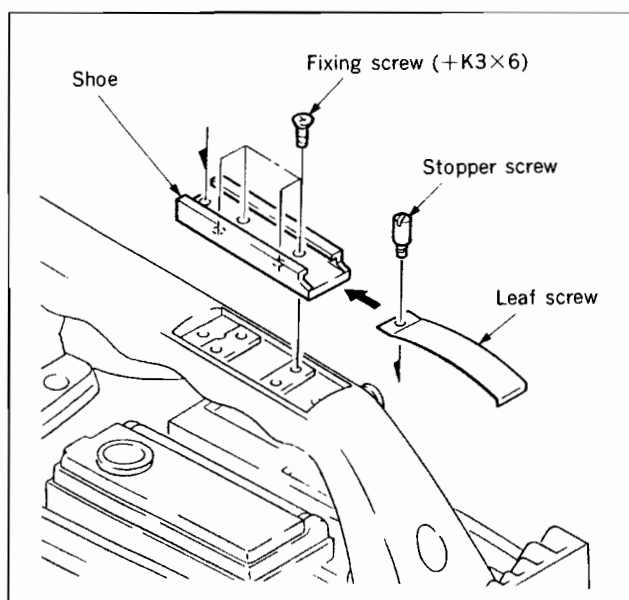


Abstract

TOP VIEW

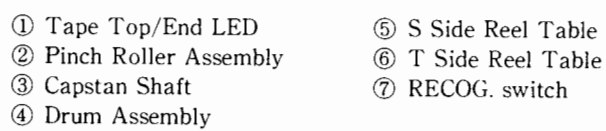


BOTTOM VIEW

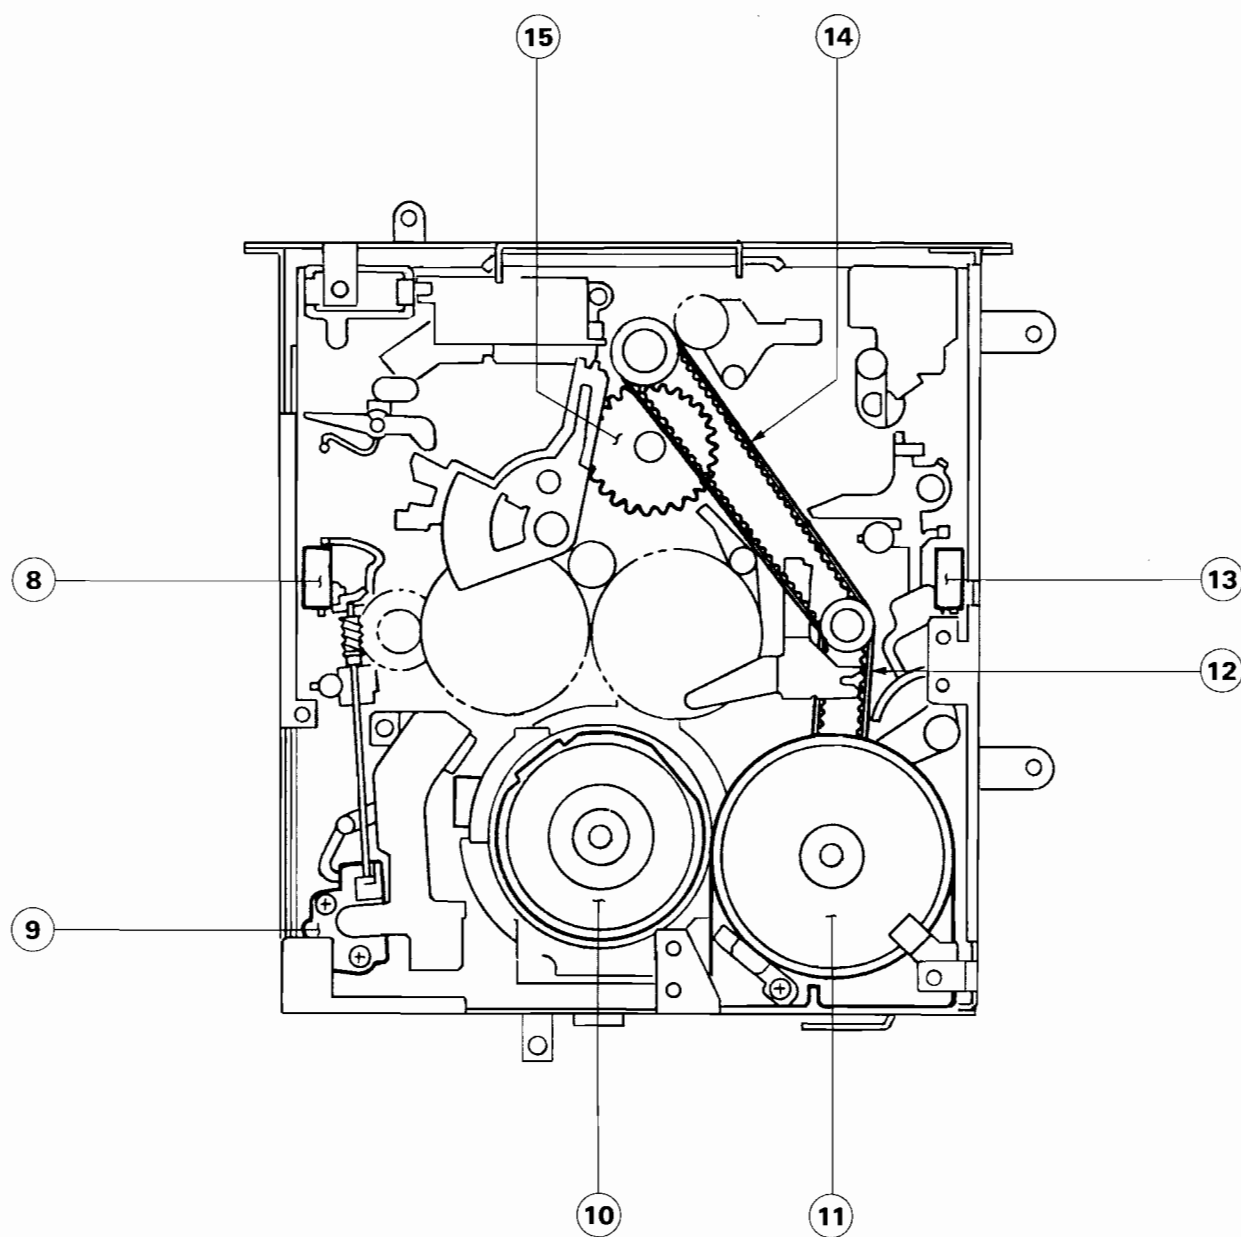

- | | |
|--------------------------|--------------------|
| ⑧ Tape End Sensor | ⑫ Timing Belt S |
| ⑨ Loading Motor Assembly | ⑬ Tape End Sensor |
| ⑩ Drum Assembly | ⑭ Timing Belt L |
| ⑪ Capstan Motor | ⑮ RK Gear Assembly |

1-5-2. Location of Printed Circuit Board


Main part (1)

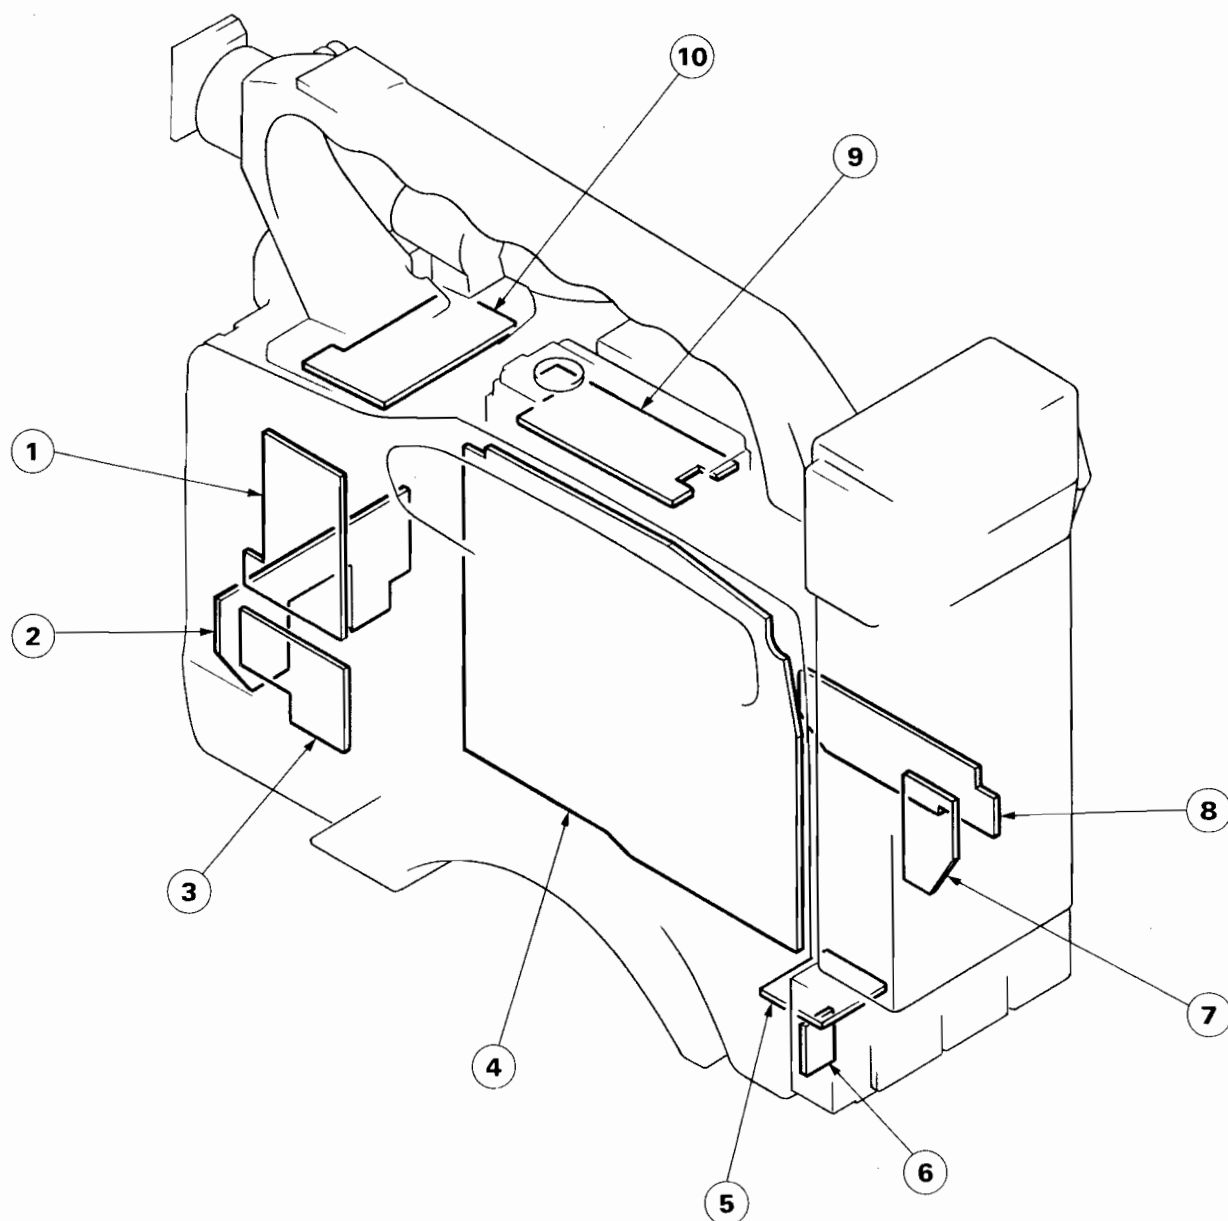

- ① SW-484 BOARD
- ② SW-506 BOARD
- ③ SW-485 BOARD
- ④ FP-40/40P BOARD
- ⑤ CP-188 BOARD

- ⑥ CP-221 BOARD
- ⑦ CP-189 BOARD
- ⑧ CP-184 BOARD
- ⑨ KY-191 BOARD
- ⑩ SW-507 BOARD


Main part (2)

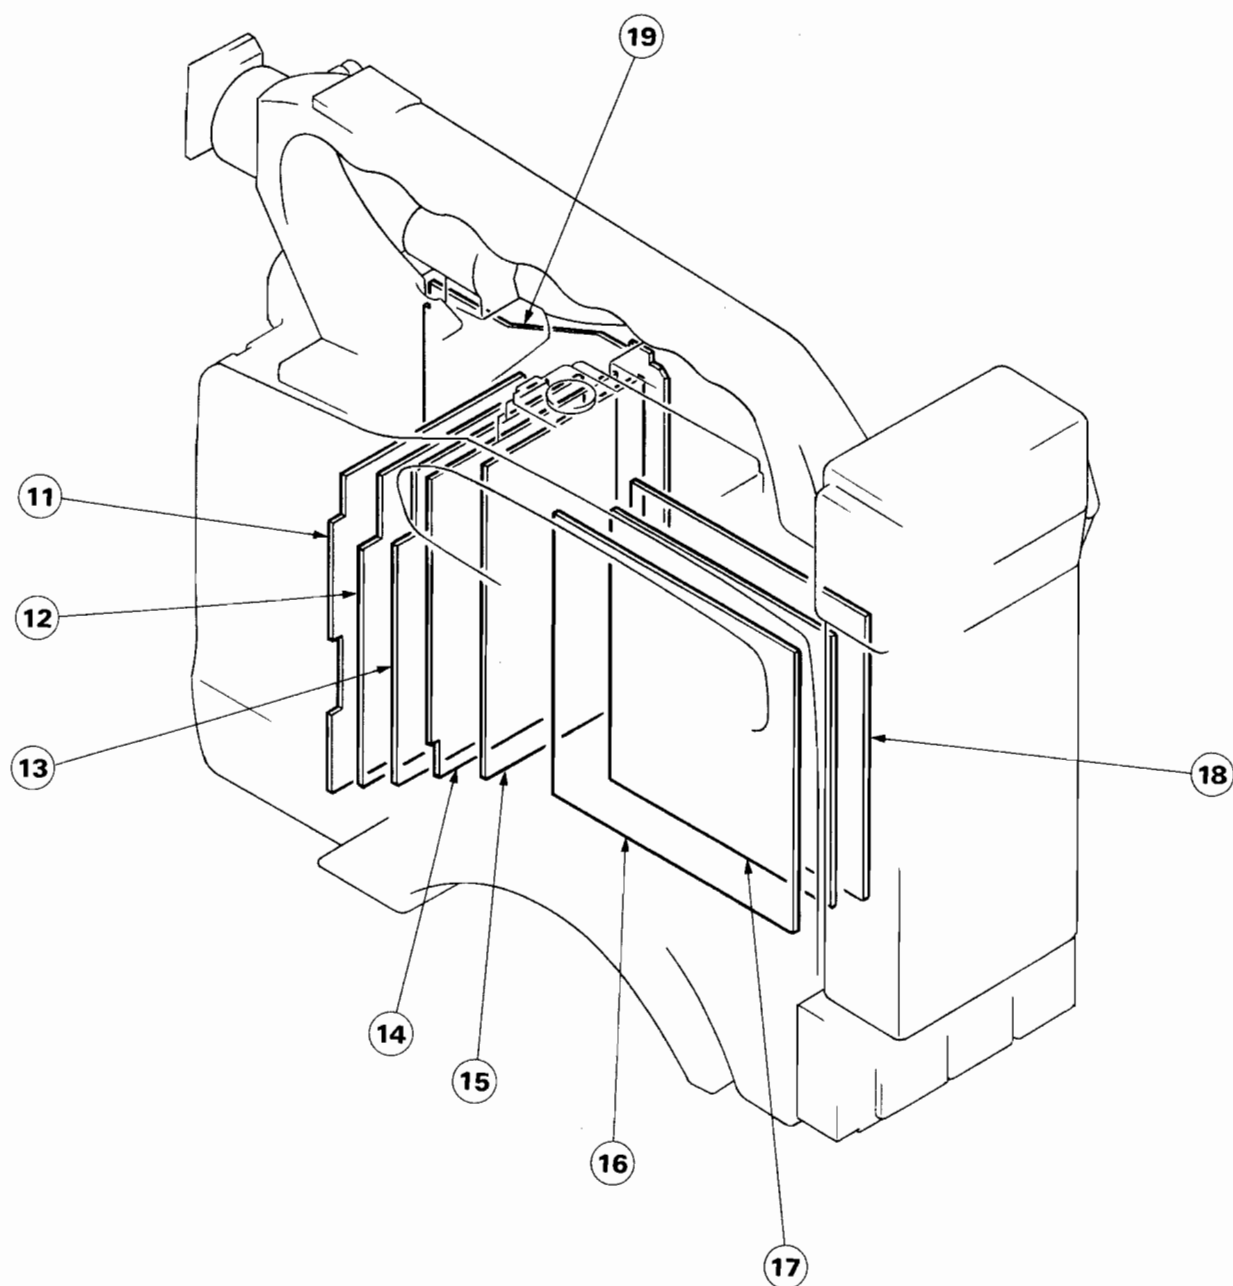

- | | |
|---------------------|---------------------|
| ⑪ PR-159/159P BOARD | ⑯ AU-162/162P BOARD |
| ⑫ IE-33/33P BOARD | ⑰ CR-43/43P BOARD |
| ⑬ ES-4/4P BOARD | ⑱ VO-43/43P BOARD |
| ⑭ AT-70 BOARD | ⑲ MB-384/384P BOARD |
| ⑮ MB-381/381P BOARD | |



Mechanical Deck

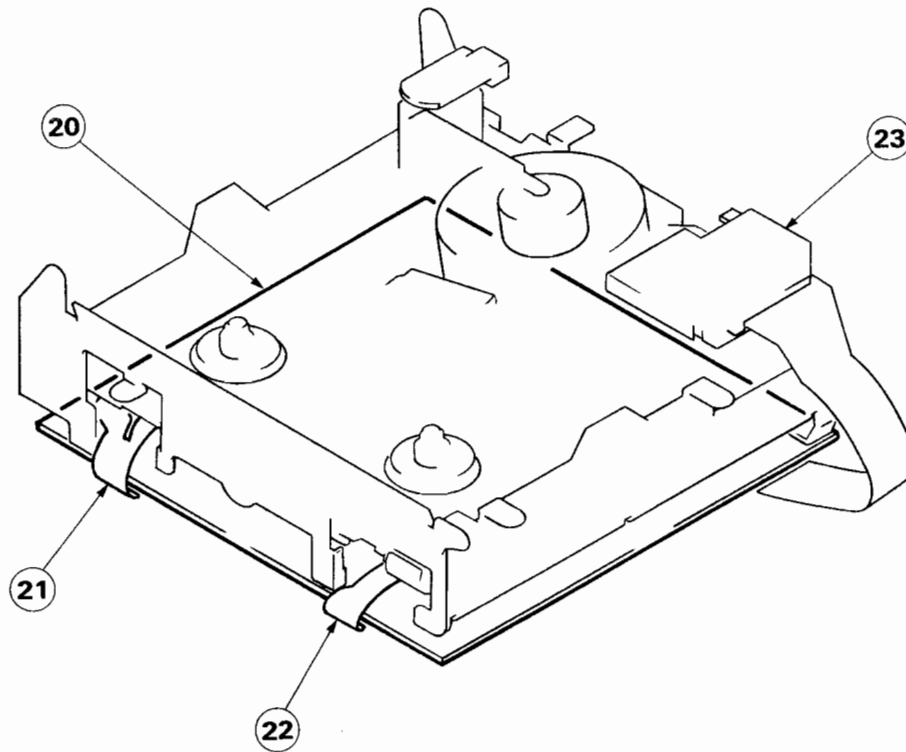

- ②① SS-50/50P BOARD
- ②① FP-89 FLEXIBLE CARD WIRE
- ②② FP-90 FLEXIBLE CARD WIRE
- ②③ SBX-1508 BOARD

1-6. PRINTED CIRCUIT BOARD

CAMERA

SYSTEM	BOARD	CIRCUIT FUNCTION
VIDEO	IE-33/33P	VIDEO AMP IMAGE ENHANCER COLOR BAR GENERATOR
	PR-159/ 159P	VIDEO PROCESS
	ES-4/4P	CHROMA ENCODER SYNC GENERATOR
SYSCON	AT-70	CAMERA SYSTEM CONTROL
Others	MB-384/ 384P	MOTHER BOARD CCD TIMING PULSE GENERATOR
	SW-484	MODE SW
	SW-485	
	SW-506	
	SW-507	

VTR

SYSTEM	BOARD	CIRCUIT FUNCTION
VIDEO	VO-43/43P	REC Y/C/AFM/ATF MIX Y PROCESS
	CR-43/43P	CHROMA PROCESS
AUDIO	AU-162/ 162P	PCM AUDIO PROCESS
	FP-40/40P	AUDIO INPUT/OUTPUT AMP
	CP-188	EARPHONE JACK
TIME CODE	AU-162/ 162P	TIME CODE PROCESS
SYSCON SERVO	SS-50/50P	VTR SYSTEM CONTROL SERVO SYSTEM, MECHANISM CONTROL ATF SERVO
	MB-381/ 381P	TAPE TOP/END SENSOR
	KY-191	FUNCTION KEY BOARD
	FP-40/40P	MODE SW BACK TALLY
Others	MB-381/ 381P	MOTHER BOARD
	CP-184 CP-188 CP-189	CONNECTOR PANEL
	CP-221	REMOTE LED
	SBX-1508	RP AMP

1-7. CONNECTORS

When external cables are connected to the various connectors of the connector box during maintenance, the hardware listed below or equivalents must be used.

PANEL INDICATION	CONNECTOR
VIDEO OUT (BNC)	1-560-069-11 PLUG, BNC or B-B cable assembly (Cable length 1.5m, optional)
VF (8P, FEMALE)	9-994-797-01 CABLE, VF
OPTION (6P, FEMALE)	1-560-078-00 PLUG, 6P MALE HIROSE HR10-7PA-6P (3) equality 1-560-078-21 PLUG, 6P MALE HIROSE HR10-7PA-6P equality 1-566-365-11 PLUG, 6P MALE HIROSE HR10A-7P-6P (01) equality 1-566-365-21 PLUG, 6P MALE HIROSE HR10A-7P-6P (02) equality
DC (4P, MALE)	1-508-362-00 PLUG, 4P FEMALE CANON XLR-4-11C equality
MIC (3P, FEMALE)	1-508-084-00 PLUG, 3P MALE CANON XLR-3-12C equality

1-8. CONNECTOR INPUT/OUTPUT SIGNAL

[INPUT]


GENLOCK IN ; BNC Type
1Vp-p, 75Ω

[OUTPUT]

CAMERA VIDEO OUT ; BNC Type
Composite signal
1.0Vp-p±1.0dB, 75Ω
negative sync, unbalanced
AUDIO OUT L/R ; Pin jack type
-10dBu, 47kΩ unbalanced

VIDEO OUT ; BNC Type
VIDEO OUT ; Pin jack type
Composite signal
1.0Vp-p±1.0dB, 75Ω
negative sync, unbalanced
RFU DC OUT ; Special mini jack
5V DC


LENS (7P)



(WIRING SIDE)

Pin No.	Signal	Specification
1	VF VIDEO CONT IN	ON : 0±5Vdc
2	VTR START/STOP IN	TRIG : 0±0.5V
3	POWER +12V DC GND	GND for +12Vdc
4	COMPULSORY AUTO IRIS CONT OUT	5±0.5Vdc
5	IRIS CONT OUT	F16 : 3.4Vdc F2.8 : 6.2Vdc
6	POWER +12V DC OUT	10.5V to 17Vdc, 3A
7	(SPARE)	


VF (8P, FEMALE)

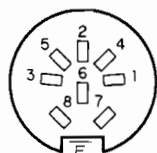

(WIRING SIDE)

Pin No.	Signal	Specification
1	POWER +12V DC GND	GND for +12Vdc
2	REC TALLY IND OUT	$Z_0 \leq 1.1k\Omega$
3	E. SHUTTER IND OUT	$Z_0 \leq 1.1k\Omega$
4	VF VIDEO (G) OUT	GND for VF VIDEO
5	BATT IND OUT	$Z_0 \leq 1.1k\Omega$
6	VF VIDEO (X) OUT	$V = 1V_{p-p}$
7	POWER +12V DC OUT	10.5V to 17Vdc, 3A
8	GAIN UP IND OUT	$Z_0 \leq 1.1k\Omega$

OPTION (6P, FEMALE)

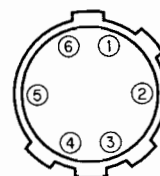

(WIRING SIDE)


Pin No.	Signal	Specification
1	VF VIDEO CONT IN	ON : 0±0.5Vdc
2	VTR START/STOP IN	TRIG : 0±0.5V
3	POWER +12V DC GND	GND for +12Vdc
4	COMPULSORY AUTO IRIS CONT OUT	5±0.5Vdc
5	IRIS CONT OUT	F16 : 3.4Vdc F2.8 : 6.2Vdc
6	POWER +12V DC OUT	10.5V to 17Vdc, 3A

1-10. HOW TO OPERATE THE UNIT WITHOUT CASSETTE TAPE (MUTING OF THE TAPE BEGINNING/ END SENSORS)


- When replacing mechanical parts, sometimes there is a case need to select modes without cassette tape inserting. Mute the tape top/end sensors in the following ways and then operate the unit. If using the mode selector, it is to necessary to mute the tape top/end sensors.

(1) Using the SELF DIAG mode


1. Turn on the [SELF DIAG] switch on the side of the unit.
2. Set the [R-RUN/SET/F-RUN] switch to SET side.
3. Select menu "103" by pressing [ADVANCE] or [SHIFT] button.




4. Set the [R-RUN/SET/F-RUN] switch to R-RUN side and select data "20" by pressing [ADVANCE] or [SHIFT] button.



5. The tape top/end sensors will be muted by pressing the [COUNTER RESET] button.
6. Turn off the [SELF DIAG] switch. Turn off the power momentarily.

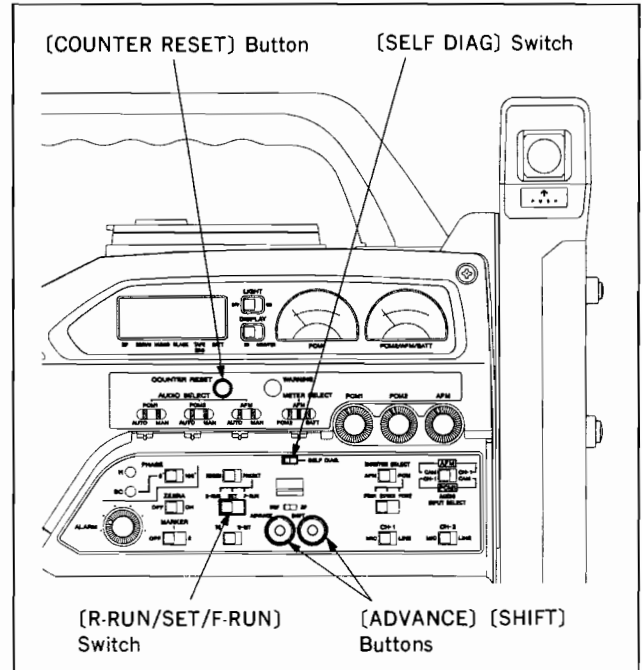

- (2) Put an opaque cap on the LED as shown in the figure.

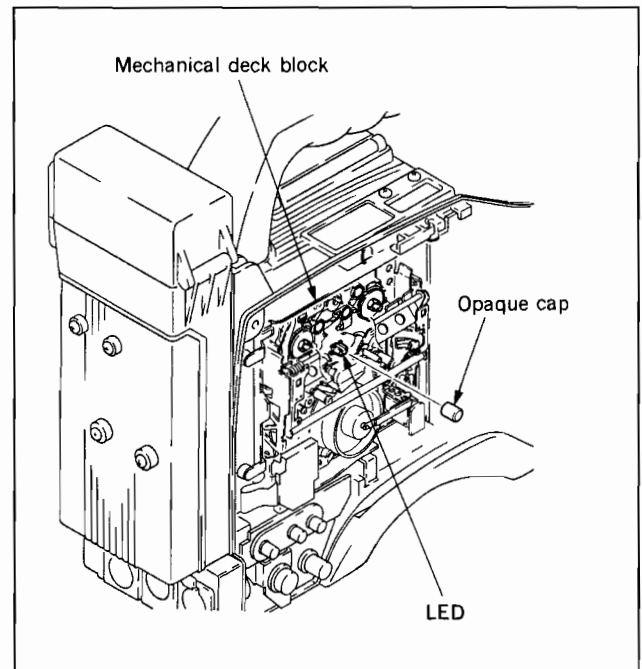


1-11. CASSETTE TAPE REMOVAL PROCEDURE WHEN NORMAL EJECTION IS NOT POSSIBLE


When the cassette tape cannot be ejected from the unit because the tape is wound around the drum, take the following action.

1-11-1. Using the SELF DIAG mode

1. Remove the cassette lid and side panel (left) according to Section 1-1.
2. Turn on the [SELF DIAG] switch on the side of the unit.
3. Set the [R-RUN/SET/F-RUN] switch to SET side.
4. Select menu "103" by pressing [ADVANCE] or [SHIFT] button.



5. Set the [R-RUN/SET/F-RUN] switch to R-RUN side.
6. Select data "10" by pressing [ADVANCE] or [SHIFT] button.



7. Press the [COUNTER RESET] button.
8. Operate the [F FWD] or [REW] button on the top panel to unthread. (Press the [STOP] button to stop unthreading.) Move that No.5 and No.6 guides of the coaster (right) assembly in order to be placed as shown in the Fig.1. Check that the No.5 and No.6 guides are not under the HC roller assembly.
9. Remove the tape from the No.1 through No.7 guides and pinch roller assembly.

Note 1: When removing the tape from the guides, be careful not to damage it.

Note 2: The mechanical chassis's sliding portion of the coaster (right) and (left) assemblies are smeared grease. Do not be adhered grease to the tape.

10. Turn the rotor of the capstan motor in the direction of arrow A or B by hand and wind up the tape into the cassette. (Fig. 2)

The direction of arrow A: wind up the tape to S side

The direction of arrow B: wind up the tape to T side

11. Push the arrow of lock lever by hand as shown in Fig. 3 and eject the cassette tape.
12. Turn off the [SELF DIAG] switch. Turn off the power momentarily.

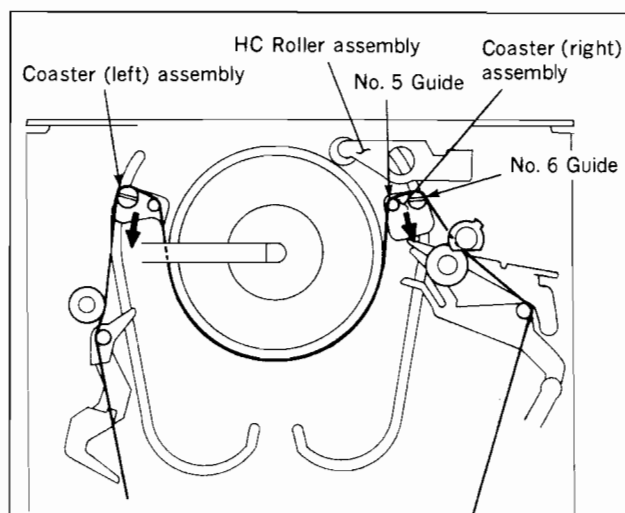


Fig. 1

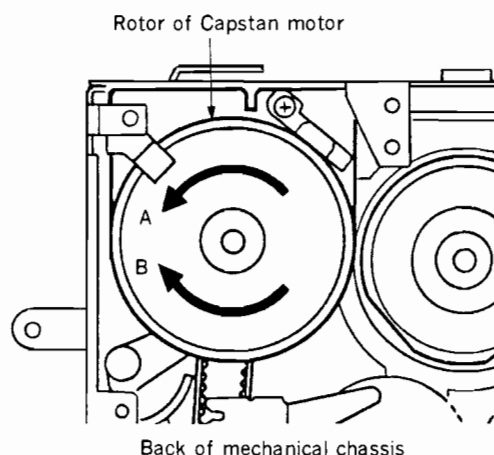


Fig. 2

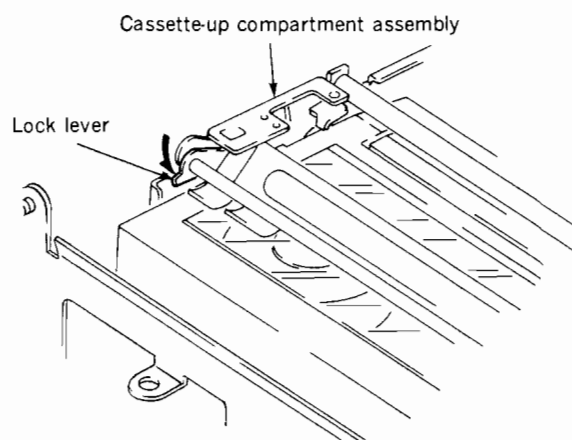



Fig. 3

1-11-2. Cassette Tape Removal in Case of Power Supply Trouble

- Using the mode selector

Fixture : Mode Selector (J-6080-825-A)


1. Remove the cassette lid and side panel (left) according to section 1-1.
2. Touch two clips of the mode selector to the terminals of the loading motor. (Fig. 4) Operate the [LOAD] or [UNLOAD] button of the mode selector to unthread. Move that No. 5 and No. 6 guides of the coaster (right) assembly in order to be placed as shown in the Fig. 1. Check that the No. 5 and No. 6 guides are not under the HC roller assembly.

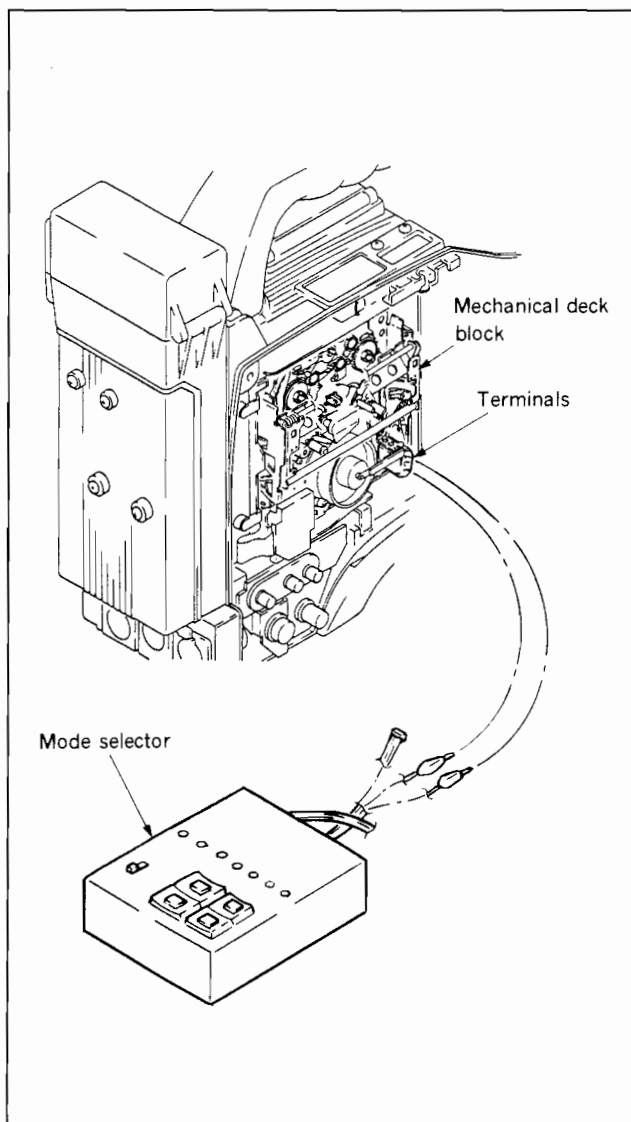

3. Eject the cassette tape according to section 1-11-1, procedures 9 to 11.

- Not using the mode selector

1. Remove the cassette lid and side panel (left) according to section 1-1.
2. Remove the side panel (right) according to section 1-1.
3. Remove the SS-50/50P board according to section 1-4.
4. Turn the worm gear of the loading motor in the direction of the arrow with a thin rod etc.. (Fig. 5) Move that the No. 5 and No. 6 guides of the coaster (right) assembly in order to be placed as shown in Fig. 1. Check that the No. 5 and No. 6 guides are not under the HC roller assembly.

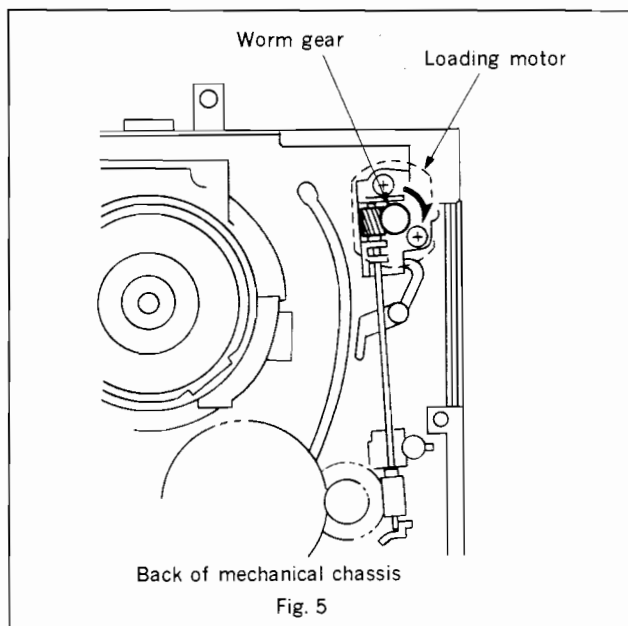


5. Eject the cassette tape according to section 1-11-1, procedures 9 to 11.


1-12. FIXTURES

Ref. No.	Parts No.	
J-1	J-6082-026-A	Tape Path
J-2	7-741-900-53	Wiping Cl
J-3	8-967-992-12	Alignment
	8-967-992-17	Alignment
J-4	8-967-995-02	Alignment
	8-967-995-07	Alignment
J-5	8-967-995-13	Alignment
	8-967-995-18	Alignment
J-6	8-967-995-42	Alignment
	8-967-995-47	Alignment
J-7	8-967-995-43	Alignment
	8-967-995-48	Alignment
J-8	J-6080-824-A	FWD, REV
J-9	J-6080-825-A	Mode Sele
J-10	J-6080-840-A	Small Adj
J-11	J-6082-021-A	Mode Sele
J-12	J-6082-023-A	Mode Sele
J-13	Y-2031-001-1	Cleaning R
J-14	—	Rotary Dr (supplied a
J-15	Commercially Sold	Head Dega
J-16	J-6365-410-A	Tracking
J-17	J-6391-180-A	Extension
J-18	J-6360-990-A	SS Extensi
J-19	J-6361-000-A	SS Extensi
J-20	J-6361-010-A	SS Extensi
J-21	J-6361-020-A	SS Extensi


J-3, J-4, J-5, J-6, J-7

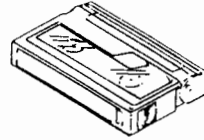


J-8

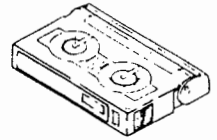

J-11

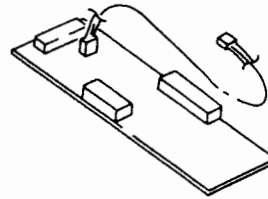


J-12

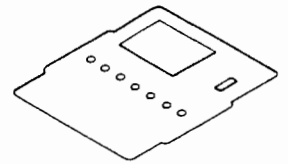

J-15



J-16

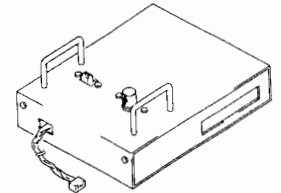

Menu	Menu description	LCD display	Description
		104 2	VTR adjustment 2. Enter this mode to perform Y/C SEP and IR adjustments. For details, refer to section 8. Head framing OFF
		104 3	This mode is not used. Head framing OFF
105	ATF 1/3 shift adjustment menu	105 00	NO ACTIVE
		105 11	Enter this mode when performing tracking adjustment. For details, refer to section 5.
201	HOURLMETER [ON period] display menu	201 xxxx	Displays the total period during which the unit is turned ON. The actual ON period is 10 times the displayed value. e.g. A displayed value of 0001 means 10 hours. Refer to the address map (5) to see the displayed value for an ON period of less than 10 hours.
202	HOURLMETER (drum) display menu	202 xxxx	Displays the total period during which the drum rotates. The actual rotation period is 10 times the displayed value. e.g. A displayed value of 0001 means 10 hours. Refer to the address map (5) to see the displayed value for a drum rotation period of less than 10 hours.
203	Emergency code menu Tape top/end menu	203 xx	Displays the contents of an existing abnormality. For details, refer to the address map (7).
204	REC PAUSE position adjustment menu	204 xx	Used to adjust the REC PAUSE position. For details, see section 1-15.
205	Loading operation count display menu	205 xxxx	Used to display the number of loading operations of the unit. [R-RUN/SET/F-RUN] switch → [SET] position The number of loading operations is equal to 256 times the displayed value (hexadecimal value). e.g. value of 0001 → 256 operations
		xxxxxx	[R-RUN/SET/F-RUN] switch → [R-RUN] position The number of loading operations is displayed on all digits. (hexadecimal value)
501	Initialize menu Note: Before entering this mode, connect TP502 and GND (E1) on the FP-40/40P board with a shorting clip.	501 01	NTSC parameter set } RESET during PAL parameter set } overhaul
		501 02	
		501 11	Enter this mode to set the default values of the BATTERY END/NEAR END voltage, LITHIUM BATTERY END voltage and switching position. Be sure to set the default value after replacing the SS-50/50P board or after replacing IC108 on the SS-50/50P board.












Menu	Menu description	LCD display	Description
503	Battery end setting menu		Enter this mode to set the battery end voltage. For details, refer to section 1-14.
504	Battery near end setting menu		Enter this mode to set the battery near end voltage. For details, refer to section 1-14.
505	Memory/EEPROM scan display menu  Set the [R-RUN/SET/F-RUN] switch to the R-RUN position using this screen, then select arbitrary data using the [ADVANCE] or [SHIFT] button. Refer to the address maps (1) to (6) for details of modes other than the modes shown at right.	 Table 1	Final mechanical mode This mode is used to display the final mechanical operation of the unit. (See Table 1.)
		 Table 1	Actual mechanical mode Displays the actual mechanical operation of the unit. (See Table 1.)
		 Table 2	Emergency mode (first) Use this mode when analyzing the cause of a defect in the unit after switching it OFF. The cause of the first defect that occurred will be displayed. (See Table 2.)
		 Table 2	Emergency mode (final) Use this mode when analyzing the cause of a defect in the unit after switching it OFF. The cause of the last defect that occurred will be displayed. (See Table 2.)
		 Table 1	Emergency mechanical mode (first) Use this mode when analyzing the cause of a defect in the unit after switching it OFF. The mechanical mode corresponding to the defect that occurred first will be displayed. (See Table 1.)
		 Table 1	Emergency mechanical mode (final) Use this mode when analyzing the cause of a defect in the unit after switching it OFF. The mechanical mode corresponding to the defect that occurred last will be displayed. (See Table 1.)
506	EEPROM change display		The data in the EEPROM can be changed. For details, see the address map (1).
507	RAM memory change menu  Set the [R-RUN/SET/F-RUN] switch to the R-RUN position using this screen, then select the following data using the [ADVANCE] or [SHIFT] button and then press the [COUNTER RESET] button. 		The video data can be changed manually. For details, refer to address map (6).
101	SW POSITION adjustment menu		Used when adjusting the switching position. For details, refer to section 5-8.

Table 1

Meaning of display	Display		Meaning of display	Display	
	MECH mode (NORMAL)	MECH mode (EMERGENCY)		MECH mode (NORMAL)	MECH mode (EMERGENCY)
EJECT	01	10	FF	03	30
EJECT DEW	11	11	REW	83	38
TAPE UNLOADING	31	13	REC	04	40
NORMAL STOP	02	20	REC PAUSE	14	41
TAPE LOADING	12	21	AUDIO DUB	84	48
BATTERY DOWN STOP	32	23	AUDIO DUB PAUSE	94	49
STOP DEW	42	24	FRAME REC	A4	4A
STOP EMERGENCY	52	25	REC PAUSE TOP	B4	4B
TAPE END STOP	62	26	EDIT SEARCH CUE	25	52
STOP TAPE TOP	72	27	EDIT SEARCH REVIEW	35	53
STOP ZERO	92	29	REC REVIEW FORWARD	85	58
STOP EMERGENCY # 0	A2	2A	REC REVIEW REVERSE	95	59
STOP EMERGENCY # 1	B2	2B	EDIT SEARCH FORWARD	A5	5A
STOP EMERGENCY # 2	C2	2C	EDIT SEARCH REVERSE	B5	5B
UNLOAD STOP	E2	2E	EDIT SEARCH PAUSE	F5	5F
			PB	06	60
			×1	26	62
			REVERSE (— ×1)	36	63


Table 2

Trouble	Display	Can tape be ejected ?
Normal operation	00 00	No
Loading motor trouble	00 01	↓
REEL FG trouble when unthreading	00 02	
REEL FG trouble except when unthreading	00 04	
Capstan motor trouble	00 08	
Drum FG trouble when rotating	01 00	Yes
Drum PG trouble when rotating	02 00	↓
FG trouble when the drum rises up	21 00	
PG trouble when the drum rises up	22 00	
Drum FG trouble when threading	41 00	
Drum PG trouble when threading	42 00	
Drum FG trouble when unthreading	81 00	
Drum PG trouble when unthreading	82 00	
Phase trouble when drum is rotating	-- --	

Use the address map to obtain more detailed data in the self diagnostic mode. Refer to menu "505" of section 1-13 "DIAGNOSTIC MODE" for the method of displaying the address.

Address map (1) [Menu 505, 506]

This map is used mainly to enable the history of the unit to be checked.

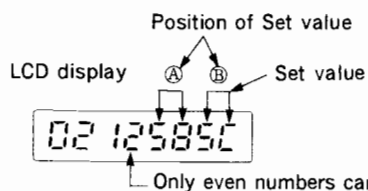

Example: By setting the address to "0212", the set values of addresses "0213", "0012" and "0013" can be seen simultaneously. On the display at left, the set value "58" of address 0213 can be displayed at (A).

Menu 505 Address (LCD display)	* 1 Menu 506 Address (LCD display)	Position of set value	Contents						Set value
0200	0000	Ⓑ							
(0201)	(0001)	Ⓐ	MODE NTSC: Set value 1b PAL : Set value 9b						1b (9b)
0202	0002	Ⓑ	When bit 0 is 0, the EN LI WARN status is set. When bit 1 is 1, the EN BC BACK TALLY status is set.						※ 2
0204	0004	Ⓑ	Switching position (lower digits); Value set with menu 101						Adj. value
(0205)	(0005)	Ⓐ	Switching position (upper digits); Value set with menu 101						Adj. value
0206	0006	Ⓑ	Battery A/D conversion value (END); Value set with menu 503						Adj. value
(0207)	(0007)	Ⓐ	Battery END set area						Adj. value
0208	0008	Ⓑ	Battery A/D conversion value (NEAR END); Value set with menu 505						Adj. value
(0209)	(0009)	Ⓐ	Battery NEAR END set area						Adj. value
0210	0010	Ⓑ	SR data storage area	EDIT OFF	MP	Hi-8	LP	6F (5F)	
(0211)	(0011)	Ⓐ	SR data storage area	EDIT OFF	MP	Hi-8	SP	65	
0212	0012	Ⓑ	SR data storage area	EDIT OFF	MP	NOR	LP	5C (58)	
(0213)	(0013)	Ⓐ	SR data storage area	EDIT OFF	MP	NOR	SP	58 (68)	
0214	0014	Ⓑ	SR data storage area	EDIT OFF	ME	Hi-8	LP	6F (55)	
(0215)	(0015)	Ⓐ	SR data storage area	EDIT OFF	ME	Hi-8	SP	65 (69)	

Address in parenthesis [] is not displayed on the LCD display. To confirm its set value, display the even-number address and read the value as shown in the above illustration.

Set value in parenthesis () is for the EVW-300P.

Menu 505	* 1 Menu 506	Position of set value	Contents					Set value
Address (LCD display)	Address (LCD display)							
02 16	00 16	Ⓑ	SR data storage area	EDIT OFF	ME	NOR	LP	5C
(02 17)	(00 17)	Ⓐ	SR data storage area	EDIT OFF	ME	NOR	SP	58 (68)
0220	0020	Ⓑ	Code for abnormality that occurred first (lower digits) (first emergency mode)					※ 3
(022 1)	(002 1)	Ⓐ	Code for abnormality that occurred first (upper digits) (first emergency mode)					※ 3
0222	0022	Ⓑ	Mechanical mode when an abnormality occurred first (first emergency mode)					※ 3
0224	0024	Ⓑ	Code for an abnormality that occurred last (lower digits) (final emergency mode)					※ 3
(0225)	(0025)	Ⓐ	Code for an abnormality that occurred last (upper digits) (final emergency mode)					※ 3
0226	0026	Ⓑ	Mechanical mode when an abnormality occurred last (final emergency mode)					※ 3
0230	0030	Ⓑ	POWER ON HOURS DATA (lower digits)	0230 xxxx Ⓑ	DATA Ⓑ ×10 hours			※ 4
0232	0032	Ⓑ	POWER ON HOURS DATA (upper digits)	0232 xxxx Ⓑ	DATA Ⓑ ×1000 hours			
0234	0034	Ⓑ	DRUM HOURS DATA (lower digits)	0234 xxxx Ⓑ	DATA Ⓑ ×10 hours			※ 5
0236	0036	Ⓑ	DRUM HOURS DATA (upper digits)	0236 xxxx Ⓑ	DATA Ⓑ ×1000 hours			
0240	0040	Ⓑ	REC PAUSE SLOW TRANCON (00 to FF)					※ 6
0242	0042	Ⓑ	LI BATTERY END SETTING (2.5V)					7F
0244	0044	Ⓑ	LOADING DATA DATA×256 times					※ 7

Address map (2) [Menu 505]

Enables the status of the unit to be checked.

LCD display

0050xx□□

e.g. If the indication on the LCD display is "006E"

006E xx 93 ← Hexadecimal indication

Bit	7	6	5	4	3	2	1	0
1 or 0	1	0	0	1	0	0	1	1
Hexadecimal number	8	0	0	1	0	0	2	1
	9				3			

Address (LCD display)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	Remark
0050	Same as 0050 xxxx of menu 505								
006E	1: MP 0: ME	1: PB 0: EE	(※ 1) 0: AGC SLOW	1: Always "1"	1: JOG ON	1: VIDEO MUTE	1: LP 0: SP	1: E(※ 2) 0: L(※ 2)	
0072	Same as 0072 xxxx of menu 505.								
0076	1: FE ON	1: DRUM LOCK	—	0: CAP LOCK (PB)	—	—	—	—	Electrical system
0078	(PB) 1: LP 0: SP	(PB) 1: E(※ 2) 0: L(※ 2)	1: TAPE END	1: TAPE TOP	—	—	—	—	Tape data
007A	1: MP 0: SP	1: CLOG (※ 4)	1: ME 0: MP	1: REC PROOF					Mechanical switch data
007C	1: DEW (※ 3)	—	1: REC CLOG	1: REC	1: UNLOCK 0: LOCK	1: MECHA SW2 (mode switch)	1: MECHA SW1 (mode switch)	1: MECHA SW0 (mode switch)	Mechanical switch data and electri- cal system

* 1 EDIT SEARCH REV alone is "0".

* 2 E: HIGH BAND mode
L: STANDARD mode


* 3 DEW DETECT FLAG

* 4 RF output "1": RF signal exists (normal)
"0": RF signal does not exist (abnormal).

Address map (3) (Menu 505)

The operation status of the system control circuit on the SS-50/50P board can be checked by operating the external switch or button indicated below.

LCD display



e.g. If the indication on the LCD display is "00d2"



Bit	7	6	5	4	3	2	1	0
1 or 0	1	0	0	0	0	0	0	1
Hexadecimal number	8	0	0	0	0	0	0	1
	8				1 (VTR POWER SW → ON)			

The indication "1" or "0" is displayed by operating an arbitrary switch or button.

"81" will appear if the **EJECT** button is pressed.

Address (LCD display)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
00d0	—	—	1: PLAY	1: STOP	—	—	—	—
00d2	1: EJECT	1: REC (VTR start KEY)	1: REW	1: FF	—	—	—	1: VTR POWER SW → ON
00d6	—	—	—	—	—	1: EDIT SEARCH "REV"	1: EDIT SEARCH "FWD"	—
00d8	1: (*1) ADVANCE	—	—	1: SHIFT	—	—	1: COUNTER RESET	—
00dA	(DISPLAY) 1: TC 0: COUNTER	1: DF 0: NDF	—	1: PRESET 0: REGEN	1: R-RUN (*2)	—	—	1: U-BIT 0: TC

* 1 To check the ADVANCE button, press the SHIFT button while **00d8** appears on the LCD display to cause the (a) part to flash, then check the operation of the ADVANCE button.

* 2 To perform self-diagnosis, this switch must be set to the R-RUN side, hence the bit is always "1".

Address map (4) [Menu 505]

Indicates the operation status of TIME CODE in IC302 of the AU-162/162P board.

e.g. TC mode

LCD display

0 1E4 xx FE

* 1 ⑥

0 1EA xxxx

④ ⑤

- * 1 In the case of 01E4, ⑥ is "FE".
This means that the unit can enter the TC mode.

Address (LCD display)	WORD	⑥ refers to the following unit when the tape is played back.	Contents	
0 1E4	0	MODE NUMBER	FE	⑥ is "FE" in the case of this address.
0 1E6	1	HOUR	3A	If ④ is the display at left, TC will not operate correctly.
0 1E8	2	MINUTE	7A	
0 1EA	3	SECOND	7A	
0 1EC	4	FRAME	3A	

e.g. U-BIT mode

0 1E4 xx Fd

⑥

If data is read correctly, "Fd" will be displayed.

Address (LCD display)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	Display ⑥
0 1E4	1	1	1	1	1	1	0	1	* 2Fd
	1	1	1	1	1	1	1	0	* 3FE
	1	1	1	0	1	1	1	0	* 3EE
	0	0	0	0	0	0	0	0	* 300

- * 2 Fd normal
* 3 FE, EE, 00: Abnormal

Address map (6) [Menu 505, 507]

VIDEO data : Enables the operation status of IC201 (CXA1207R) on the SS-50/50P board to be checked.

LCD display

0060 xxxx

Address (LCD display)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0060	③ NCLP2	② Yd	① CORRE OFF	—	—	—	—	—
0062	⑪ DOC OFF	⑩ CAMERA REC	⑨ E	⑧ CFL1	⑦ CFL2	⑥ NCL1	⑤ NCL2	④ NCLP1
0064	⑲ PB	⑱ S	⑰ INSEL	⑯ VIDEO AGC	⑮ DIS- CHARGE	⑭ W CCD	⑬ CCIR443	⑫ EDIT


Data content

①CORRE OFF	H	Makes Y correlation pulses always LOW.	⑫EDIT	H	Edit mode			
	L	Normal		L	Normal			
②Yd	H	Causes Yd to be played back during PB.	⑬CCIR443	H	Supports fsc = 4.43 MHz			
	L	Normal		L	Supports fsc = 3.58 MHz			
③NCLP2	Changes the characteristics of the noise canceler during PB.		⑭W CCD	H	Supports use of two CCD DLs during PB.			
④NCLP1				L	Supports use of one CCD DL during PB.			
⑤NCL2			⑮Discahrge	H	Discharges the external clamping capacitor connected to pins ③② and ③④.			
⑥NCL1				L	Normal			
⑦CFL2	PB Y PB Y Comb Filter Depth standard value (low range input minute level)		⑯Video AGC	H	Video AGC ON			
⑧CFL1				L	Video AGC OFF			
			CFL2 \ CFL1	H	L	⑰INSEL	H	VIN2 input during REC at pin ③④.
			H	-10dB	-6dB		L	VIN1 input during REC at pin ③②
	L	-1.5dB	0dB	⑱S	H	Supports separation signals during REC.		
⑨E	H	Supports the Hi8 mode.	L		Supports composite signals during REC.			
	L	Supports the normal mode.	⑲PB	H	PB (playback) mode			
⑩Camera REC	H	Camera recording mode		L	REC (recording) mode			
	L	Video recording mode	H = 1 L = 0					
⑪DOC OFF	H	Does not perform dropout compensation (D.O.C.).						
	L	Normal						

Address map (7) [Menu 203]

This menu can be used instead of menu 505 to check the details of abnormalities instantly.

LCD display

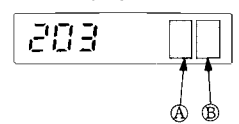

A				B			
Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
1	1	1	1	1	1	1	1
8	7	6	5	4	3	2	1
5 : NO EMERGENCY FLAG 6 : CHANGE EMERGENCY CODE FLAG 7 : AGING MODE 8 : NOT USED				1 : F. MODE=STOP EMERGENCY #1 2 : BATTERY END 3 : TAPE END 4 : FUNCTION MODE=STOP EMERGENCY a			

1-14. FP-40/40P Board Self Diagnosis



The EVW-300/300P has a self diagnostic function which judges whether the switches and LCD display on the FP-40/40P board are functioning correctly.

Operation method



1. Connect TP501 and GND (E1) on the FP-40/40P board with a shorting clip.
2. Install the side plate (right) assembly on the unit, and switch the power ON. (The unit will enter the self-diagnostic mode.)
3. Check the LCD display visually.

(LCD screen)


- The time code will be displayed in sequence from 0 to F.

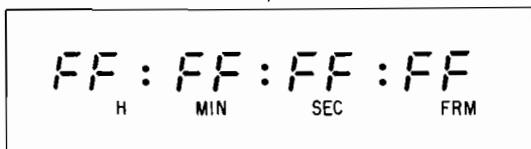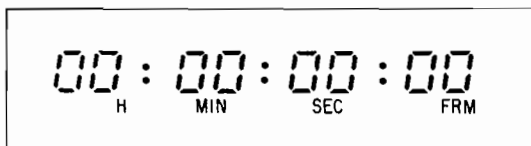

- Characters are displayed in the sequence PB → VITC → NDF → SLAVE → 2FLD → HOLD.

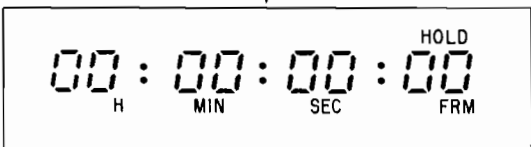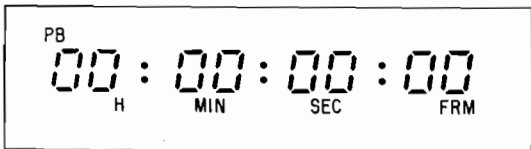

- The warning cursor corresponding to the display at the bottom of the LCD display (RF, SERVO, HUMID, SLACK, TAPE END, BATT) flashes in sequence from the left.

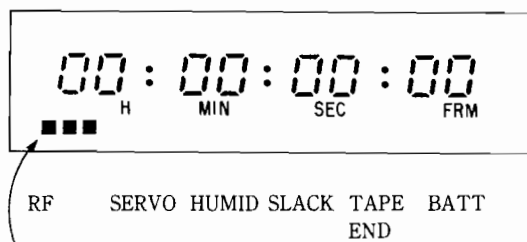


The cursor corresponding to each display moves progressively from the left.

- The WARNING lamp will light.

- The LCD display changes from all lit → all out → all lit, then self diagnosis of each switch starts.

4. If the indication of the LCD display corresponding to each switch changes when a switch on the operation panel is operated, that switch is functioning correctly. The relation between each switch and the state of the LCD display is shown in the table below.

e.g. Changes from 0 to 1 with SHIFT button pressed

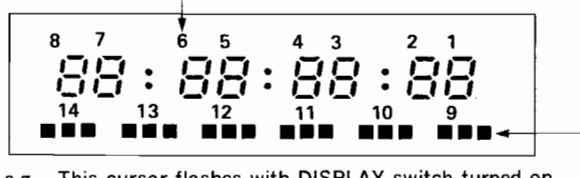

e.g. This cursor flashes with DISPLAY switch turned on

No.	Diagnostic item	Item that can be confirmed
1	F-RUN key	
2	R-RUN key	
3	TC/U-BIT switch	
4	Not used	
5	ADVANCE button	
6	SHIFT button	
7	REGEN/RESET switch	
8	COUNTER RESET button	AVTEST (EE switchover)
9	DISPLAY switch	AUDIO MUTE
10	DF/NDF switch	WARNING LAMP
11	TEST	VAPB MODE
12	RF SWP	EJECT button
13	REMOTE REC	SP/LP
14	Not used	

1-15. BATTERY END/NEAR END VOLTAGE SETTING

It is necessary to set the BATTERY END/NEAR END voltages after replacing the SS-50/50P board or replacing IC108 on the SS-50/50P board.

According to use, the desired voltage can be set within the settable range.

Settable range : 7.5 V to 12.5 V

Settable unit : 0.02 V

Factory settings : Battery end voltage 10.98 V
Battery near end voltage 11.30 V

Equipment required : DC power supply, digital voltmeter

1. Connect the DC power supply to the unit. (Fig. 1)
2. Connect TP502 and GND (E1) on the FP-40/40P board with a shorting clip.
3. Load a blank tape, then press the [VTR] button on the front panel to enter the REC mode.
4. Refer to section 1-10, then select menu "503" when performing the battery end voltage setting, or menu "504" when performing the battery near end voltage setting.
5. Set the [R-RUN/SET/F-RUN] switch to the R-RUN position.
6. Place the ends of the leads of the digital voltmeter on the pins of the DC IN connector, as shown in the Fig. 2, then adjust the DC power supply until the desired voltage is obtained.
Note : Take great care that the leads do not touch any other pins.
7. Press the [COUNTER RESET] button.
(The LCD display will be out while the set value is being written to the ROM.)
8. Stop the REC mode.
9. Set the [SELF DIAG] switch to OFF, then turn the power OFF momentarily.

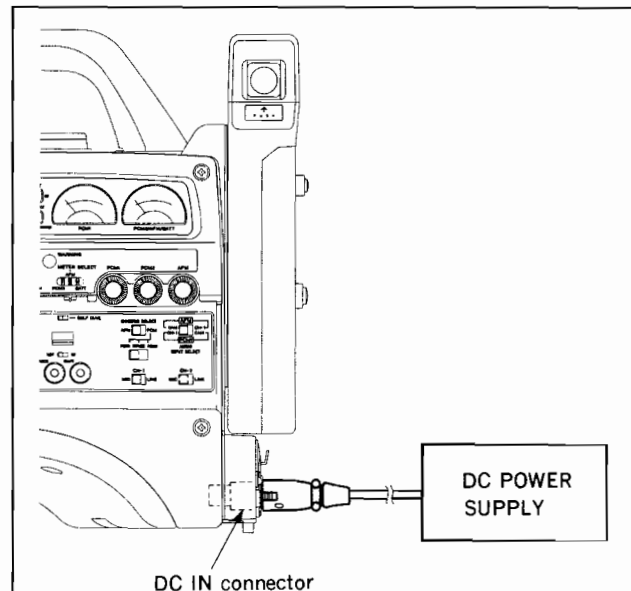


Fig. 1

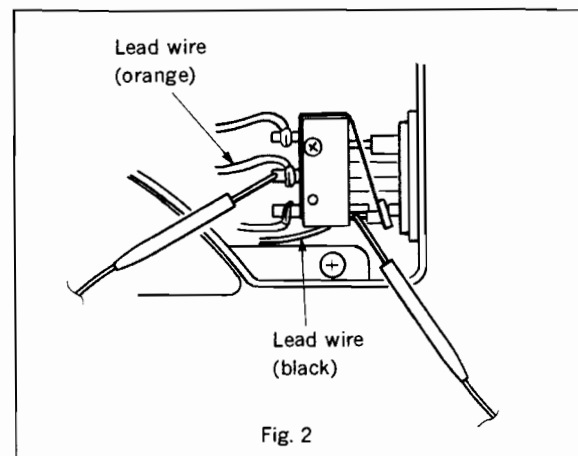


Fig. 2

1-17. NOTE ON SS-50/50P REPLACEMENT

It is necessary to perform the following settings after replacing the SS-50/50P board, or replacing the IC108 on the SS-50/50P board. For details, refer to section 1-13.

1. Select menu "501" and select data "11" to set the default values of the battery end/near end voltage, lithium battery end voltage and switching position.
2. Select menu "503" and set the battery end voltage.
3. Select menu "504" and set the battery near end voltage.
4. Select menu "101" and perform the switching position adjustment.

Variable range: E0~E8~F0~F8~00

Factory setting: F0 (for EVW-300)
E0 (for EVW-300P)

4. Load a blank tape, then press [VTR] on the front panel to enter the REC mode. Pressing the [VTR] button once again will cause the unit to pause.
Repeat this operation several times, waiting for at least 10 seconds between each operation.
5. Review the recording, and check the back space edit point with the monitor.
6. Repeat steps 3 to 5, and change the data in menu "204" so that the skew becomes minimum.
7. Press the [COUNTER RESET] button.
(The LCD display will be out while the set value is being written to the ROM.)
8. Set the [SELF DIAG] switch to OFF, then turn off the power momentarily.

1-18. BOARD SWITCH SETTINGS

ES-4/4P board

• S1 (VTR/TEST)

Switch over the Y signal output to the VTR.

Up: The Y signal will be output.

Down: The VBS signal will be output.

The factory setting is the up position.


IE-33 board

• S1 (75% CB/100% CB) (NTSC only)


Up: White level 77% color bar signals are output.

Down: White level 100% color signals are output.

The factory setting is 75% CB (up position).

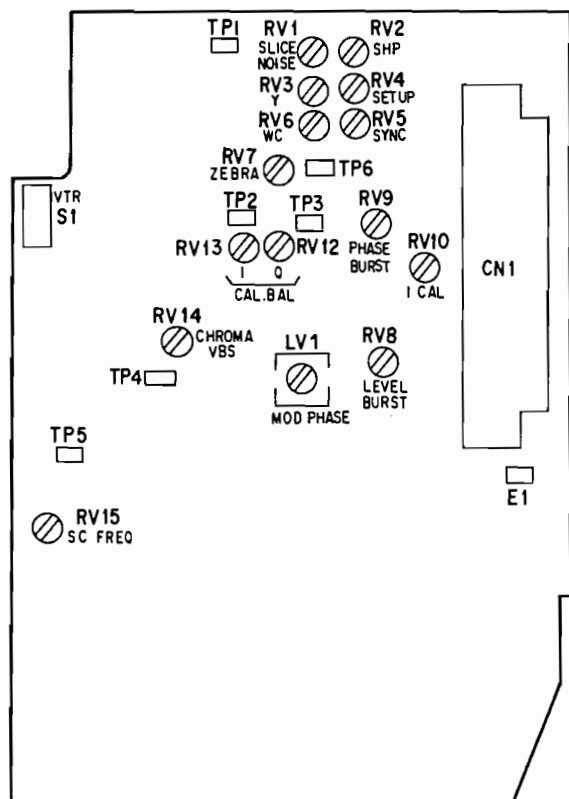

ES-4/4P BOARD (COMPONENT SIDE)

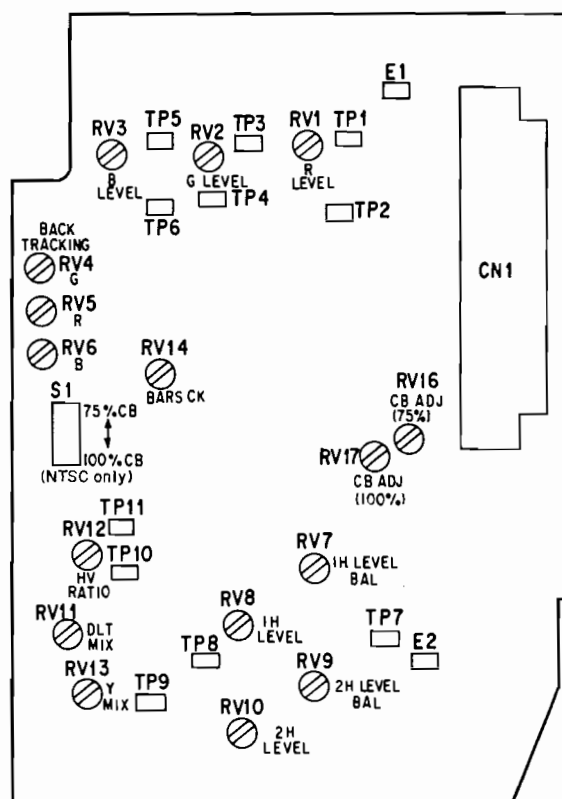

IE-33 BOARD (COMPONENT SIDE)

AT-70 board

• S1 (FRAME RESET/FIELD)

The CCD readout method can be set to either frame reset readout (EVS) or field readout.
The factory setting is FLD (up position).

• S2 (FULL FUNCTION/OPE)

Up (OPE) : Normal mode


Down (FULL FUNCTION) :

In addition to the normal mode, the following modes can be varied.

- Control setting of the video system (* 1)
- Auto iris setting (* 2)
- Gain, clear scan setting (* 3)
- AGC, AE speed select setting (* 4)

By setting this switch to the [FULL FUNC] side in the case of an AUTO WHITE or AUTO BLACK error, the details of the error can be seen. (* 5)

The factory setting is OPE (up position).

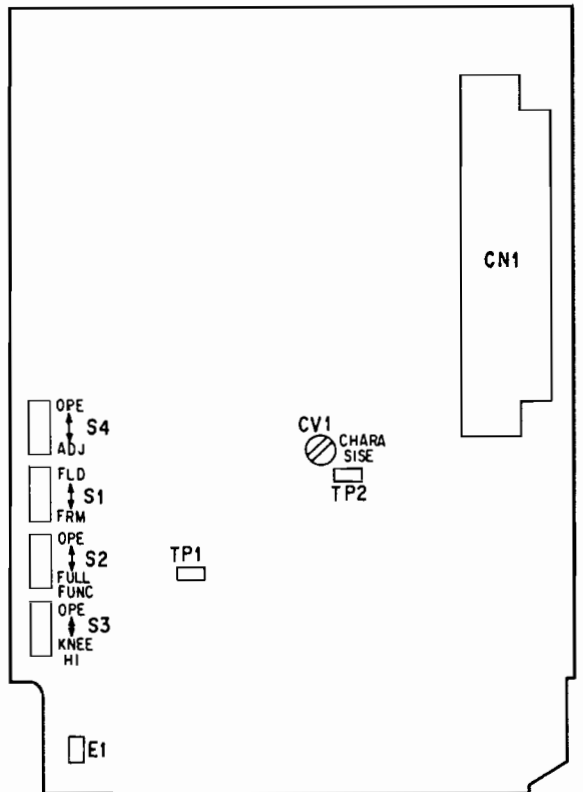


AT-70 BOARD (COMPONENT SIDE)

* 1 Changing the control setting mode of the video system

- 1) Set S4 of the AT-70 board to [OPE] (up position), and S2 to [FULL FUNC] (down position).
- 2) By setting the [DISP CHG] switch on the side of the unit, the following screen will be displayed on the VF screen after the normal control mode.

↓ : Push down the [DISP CHG] switch.

↑ : Push up the [DISP CHG] switch.

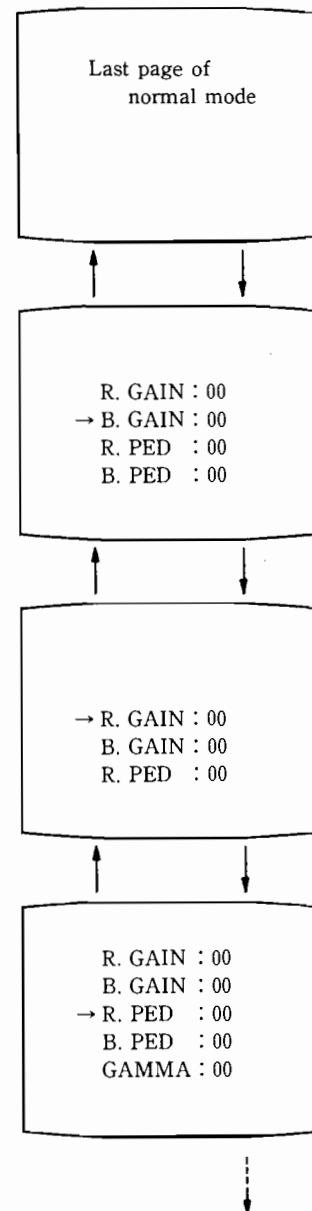

(To the auto iris setting mode)

From this screen, the control voltage corresponding to the item indicated by the flashing arrow [→] can be varied using the [UP] or [DOWN] switch on the front of the unit.

Standard setting: 00

Variable range: 0 V~2.5 V~5.0 V

(display -99~00~99)

Display	Control item	Voltage change point	Memory	Renewal of set data
R GAIN	R gain	PR-159/159P board ; pin 7 of IC13	×	The data will be renewed in the AUTO WHITE mode.
B GAIN	B gain	PR-159/159P board ; pin 5 of IC13	×	
R PED	R pedstal	PR-159/159P board ; pin 8 of IC13	○	The data will be renewed in the AUTO BLACK mode.
B PED	B pedstal	PR-159/159P board ; pin 12 of IC13	○	
GAMMA	gamma	PR-159/159P board ; pin 2 of IC13	○	
KNEE	knee point	PR-159/159P board ; pin 3 of IC13	○	
W. CLIP	white clip	PR-159/159P board ; pin 4 of IC13	○	
CRISP A	aperture crispening	AT-70 board ; pin 3 of IC13	○	
CRISP D	detail crispening	PR-159/159P board ; pin 19 of IC13	×	The data will be renewed with the [GAIN] switch.
P KNEE	pre-knee point	PR-159/159P board ; pin 6 of IC13	○	


Return to the standard setting of 00 after changing the control voltage.

* 2 Changing the auto iris setting mode

↓ : Press down the [DISP CHG] switch.

↑ : Press up the [DISP CHG] switch.

Change the data with the [UP] switch or the [DOWN] switch.

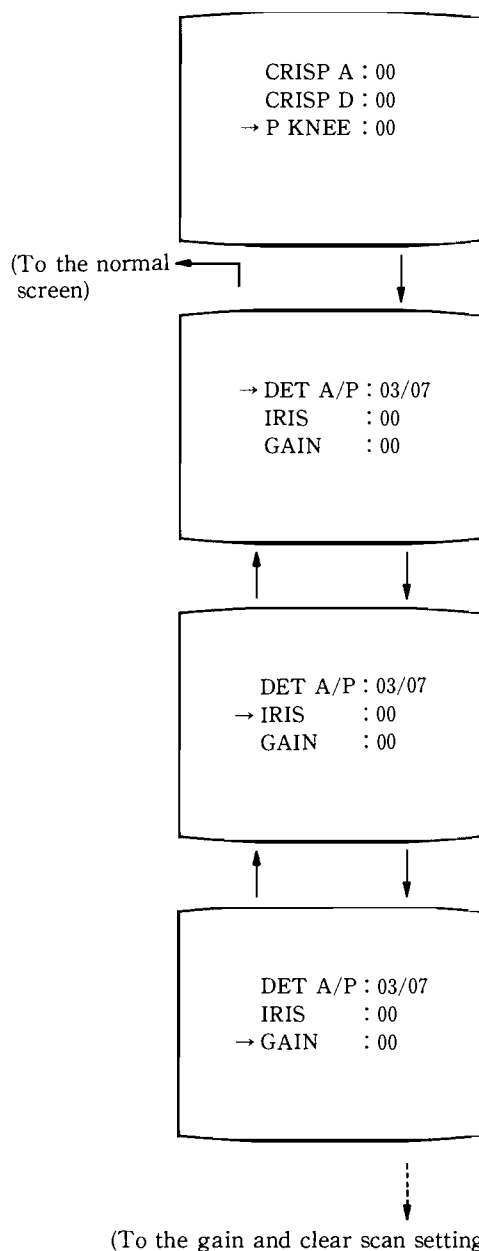

Last page of the video system control mode

The AVERAGE/PEAK ratio of the AUTO IRIS, AGC and AE level detection can be changed.

Standard setting : 03/07

Setting of AUTO IRIS, AGC and AE convergence level

AUTO IRIS loop gain setting

Standard setting : 00


Note : If the gain is increased excessively, the iris may hunt when a bright subject is shot.

* 3 Changing the gain and clear scan setting modes

↓ : Press down the [DISP CHG] switch.

↑ : Press up the [DISP CHG] switch.

Change the data with the [UP] switch or the [DOWN] switch.

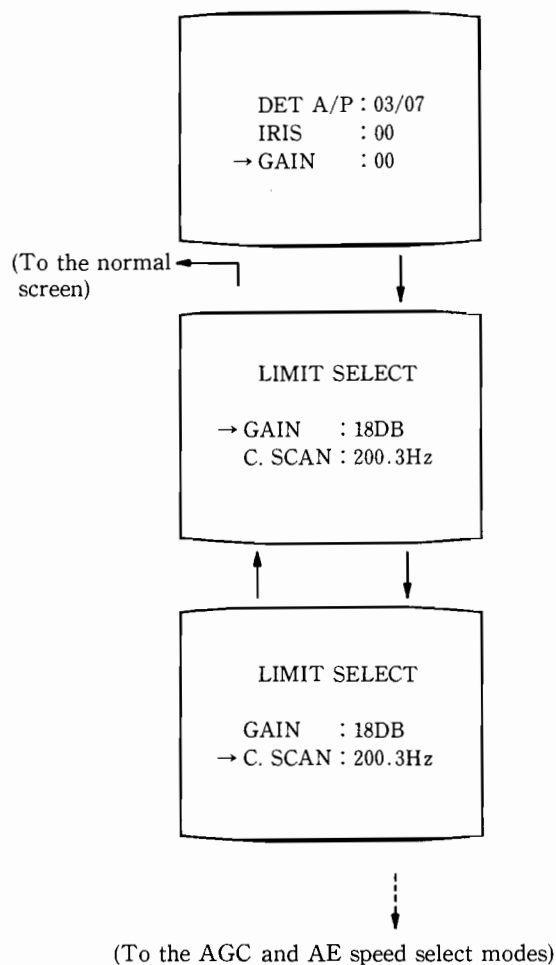

Last page of the auto iris setting mode

The upper limit of the gain which can be set with the [GAIN] switch on the side of the unit can be varied.

Variable range : 2 dB to 24 dB (1 dB steps)

Standard setting : 18 dB


The upper limit of the frequency which can be set using a clear scan function can be varied.

Variable range : 59.9 to 10169 Hz (EVW-300)
50.0 to 10040 Hz (EVW-300P)

Standard setting : 200.3 Hz (EVW-300)
201.5 Hz (EVW-300P)

(Clear scan setting value shown in the figure is for the EVW-300. 201.5 Hz will be displayed for the EVW-300P.)


- You can enter the low speed shutter mode by pressing the [UP] switch while the screen shown at left is displayed.

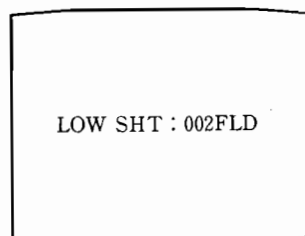

Variable range : 002FLD to 510FLD
(2FLD steps)

0000000000

↑ : Press up the [DISP CHG] switch.




Standard setting : 00

Standard setting : 00

Note : If the loop gain of AGC and AE is increased excessively, the AGC may hunt when a bright subject is shot.

* 5 AUTO WHITE and AUTO BLACK error messages


● AUTO WHITE error message

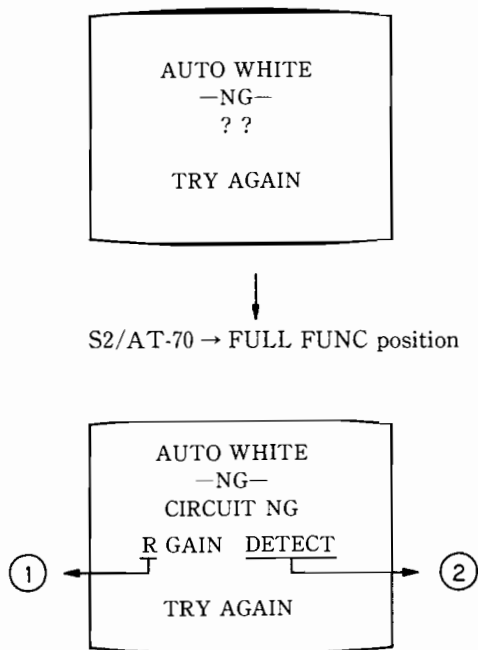

Error display when there is a defect in the circuit (normal mode)

- ① R : R-ch error
B : B-ch error
G-G : G-G reference voltage A/D error
- ② CONTROL : Control circuit error
(Microprocessor → D/A converter → Each video circuit)
DETECT : Detection circuit error
(PR output → Detection circuit in AT board → Microprocessor)

● AUTO BLACK error message

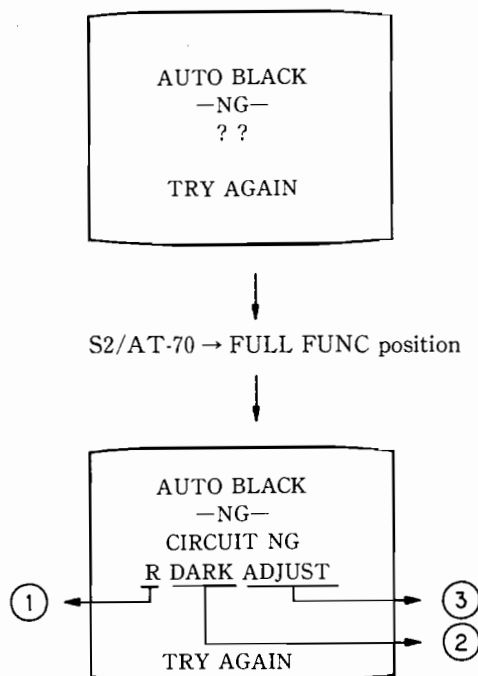

Error message when there is a defect in the circuit (normal mode)

- ① R : R-ch error
G : G-ch error
B : B-ch error
G-G : G-G reference voltage A/D error
- ② DARK : DARK CONT (black tracking) error
PED : PED CONT (black balance) error
- ③ ADJUST : Outside the adjustment range
CONTROL : Control circuit error
(Microprocessor → D/A converter → Each video circuit)
DETECT : Detection circuit error
(PR output → Detection circuit in AT board → Microprocessor)

Note : Return S2/AT-70 to OPE position after using this mode.

• S3 (OPE → KNEE HI)

Up (OPE): Normal mode


Down (KNEE HI): Mode which clears the KNEE, PRE KNEE and WHITE CLIP in the ADJ MODE

The factory setting is OPE (up position).

- 1) Set S4 on the AT-70 board to ADJ (bottom position), and S3 to KNEE HI (bottom position).
- 2) Cancel KNEE, PRE KNEE and WHITE CLIP using the [UP] switch or the [DOWN] switch.

↓ : Press the [UP] switch.

↑ : Press the [DOWN] switch.

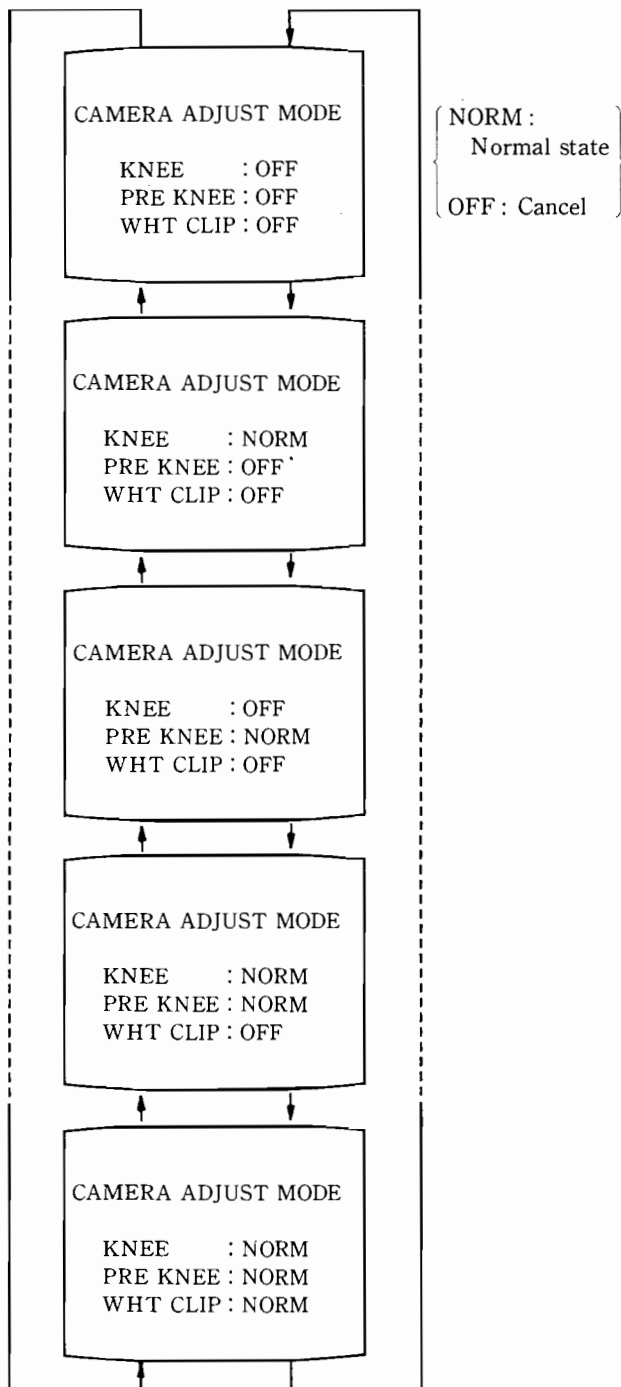

EVW-300 (UC)
EVW-300P (EK)

• S4 (ADJ/OPE)

Up (OPE): Normal mode

Down (ADJ): Control data of the following items is preset.

R/B GAIN,
R/B PEDESTAL,
MASTER PEDESTAL,
DETAIL


The memory data can be cleared by using this switch (* 6).

The factory setting is OPE (up position).


- * 6 The following data memorized in the unit can be changed back to the factory settings.

- AUTO WHITE data
- AUTO BLACK data
- The following data set using the [UP]/[DOWN] switch
 - AUTO IRIS OVERRIDE
 - DETAIL
 - MASTER PEDESTAL
 - SHUTTER, CLEAR SCAN
 - AE ON/OFF
 - LOW LIGHT IND ON/OFF
 - AUTO IRIS mode
 - SHUTTER display mode
 - GAIN UP switch select
 - Changeover point between AGC • AE and AUTO IRIS

- 1) Set S4 on the AT-70 board to ADJ (bottom position).
- 2) Press down the [DISP CHG] switch.

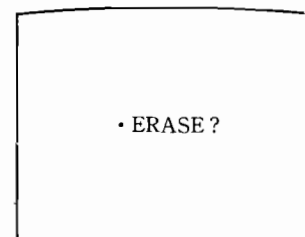

- 3) By pressing the [UP] switch, the entire contents of the memory will be erased.

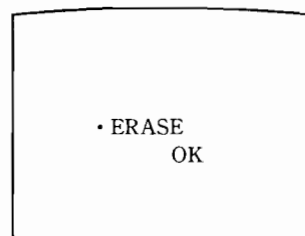

- 4) Finally, be sure to return S4 on the AT-70 board to OPE (up position).

VO-43/43P board

• S801 (CHROMA MUTE)

Left (OPE) : Normal mode

Right (CHROMA MUTE) : The chroma signal is muted.


Set this switch to CHROMA MUTE (right side) during Y/C SEP adjustment or IR adjustment.

The factory setting is OPE (left side).


MB-381/381P board

• S1 (TEST/OPE)

This switch is not used. Set it to the OPE (up position).

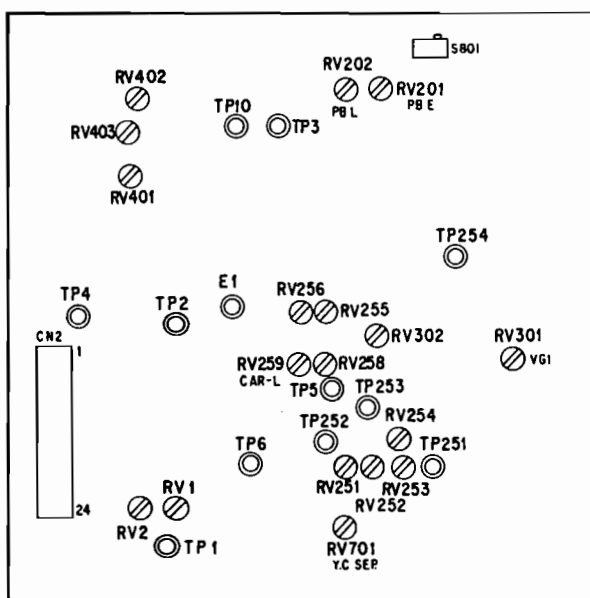


VO-43/43P BOARD (COMPONENT SIDE)

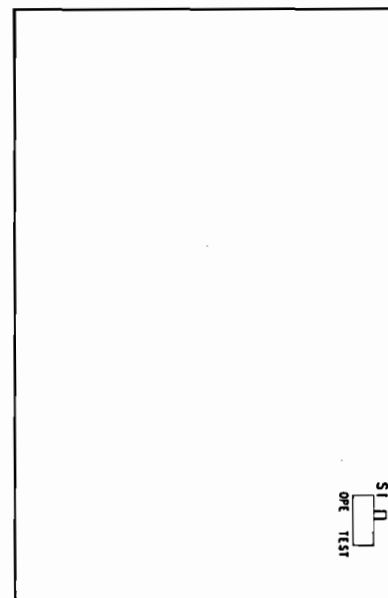


MB-381/381P BOARD (COMPONENT SIDE)


1-19. SYSTEM CONFIGURATION

Microphone cable
EC-0.5C2

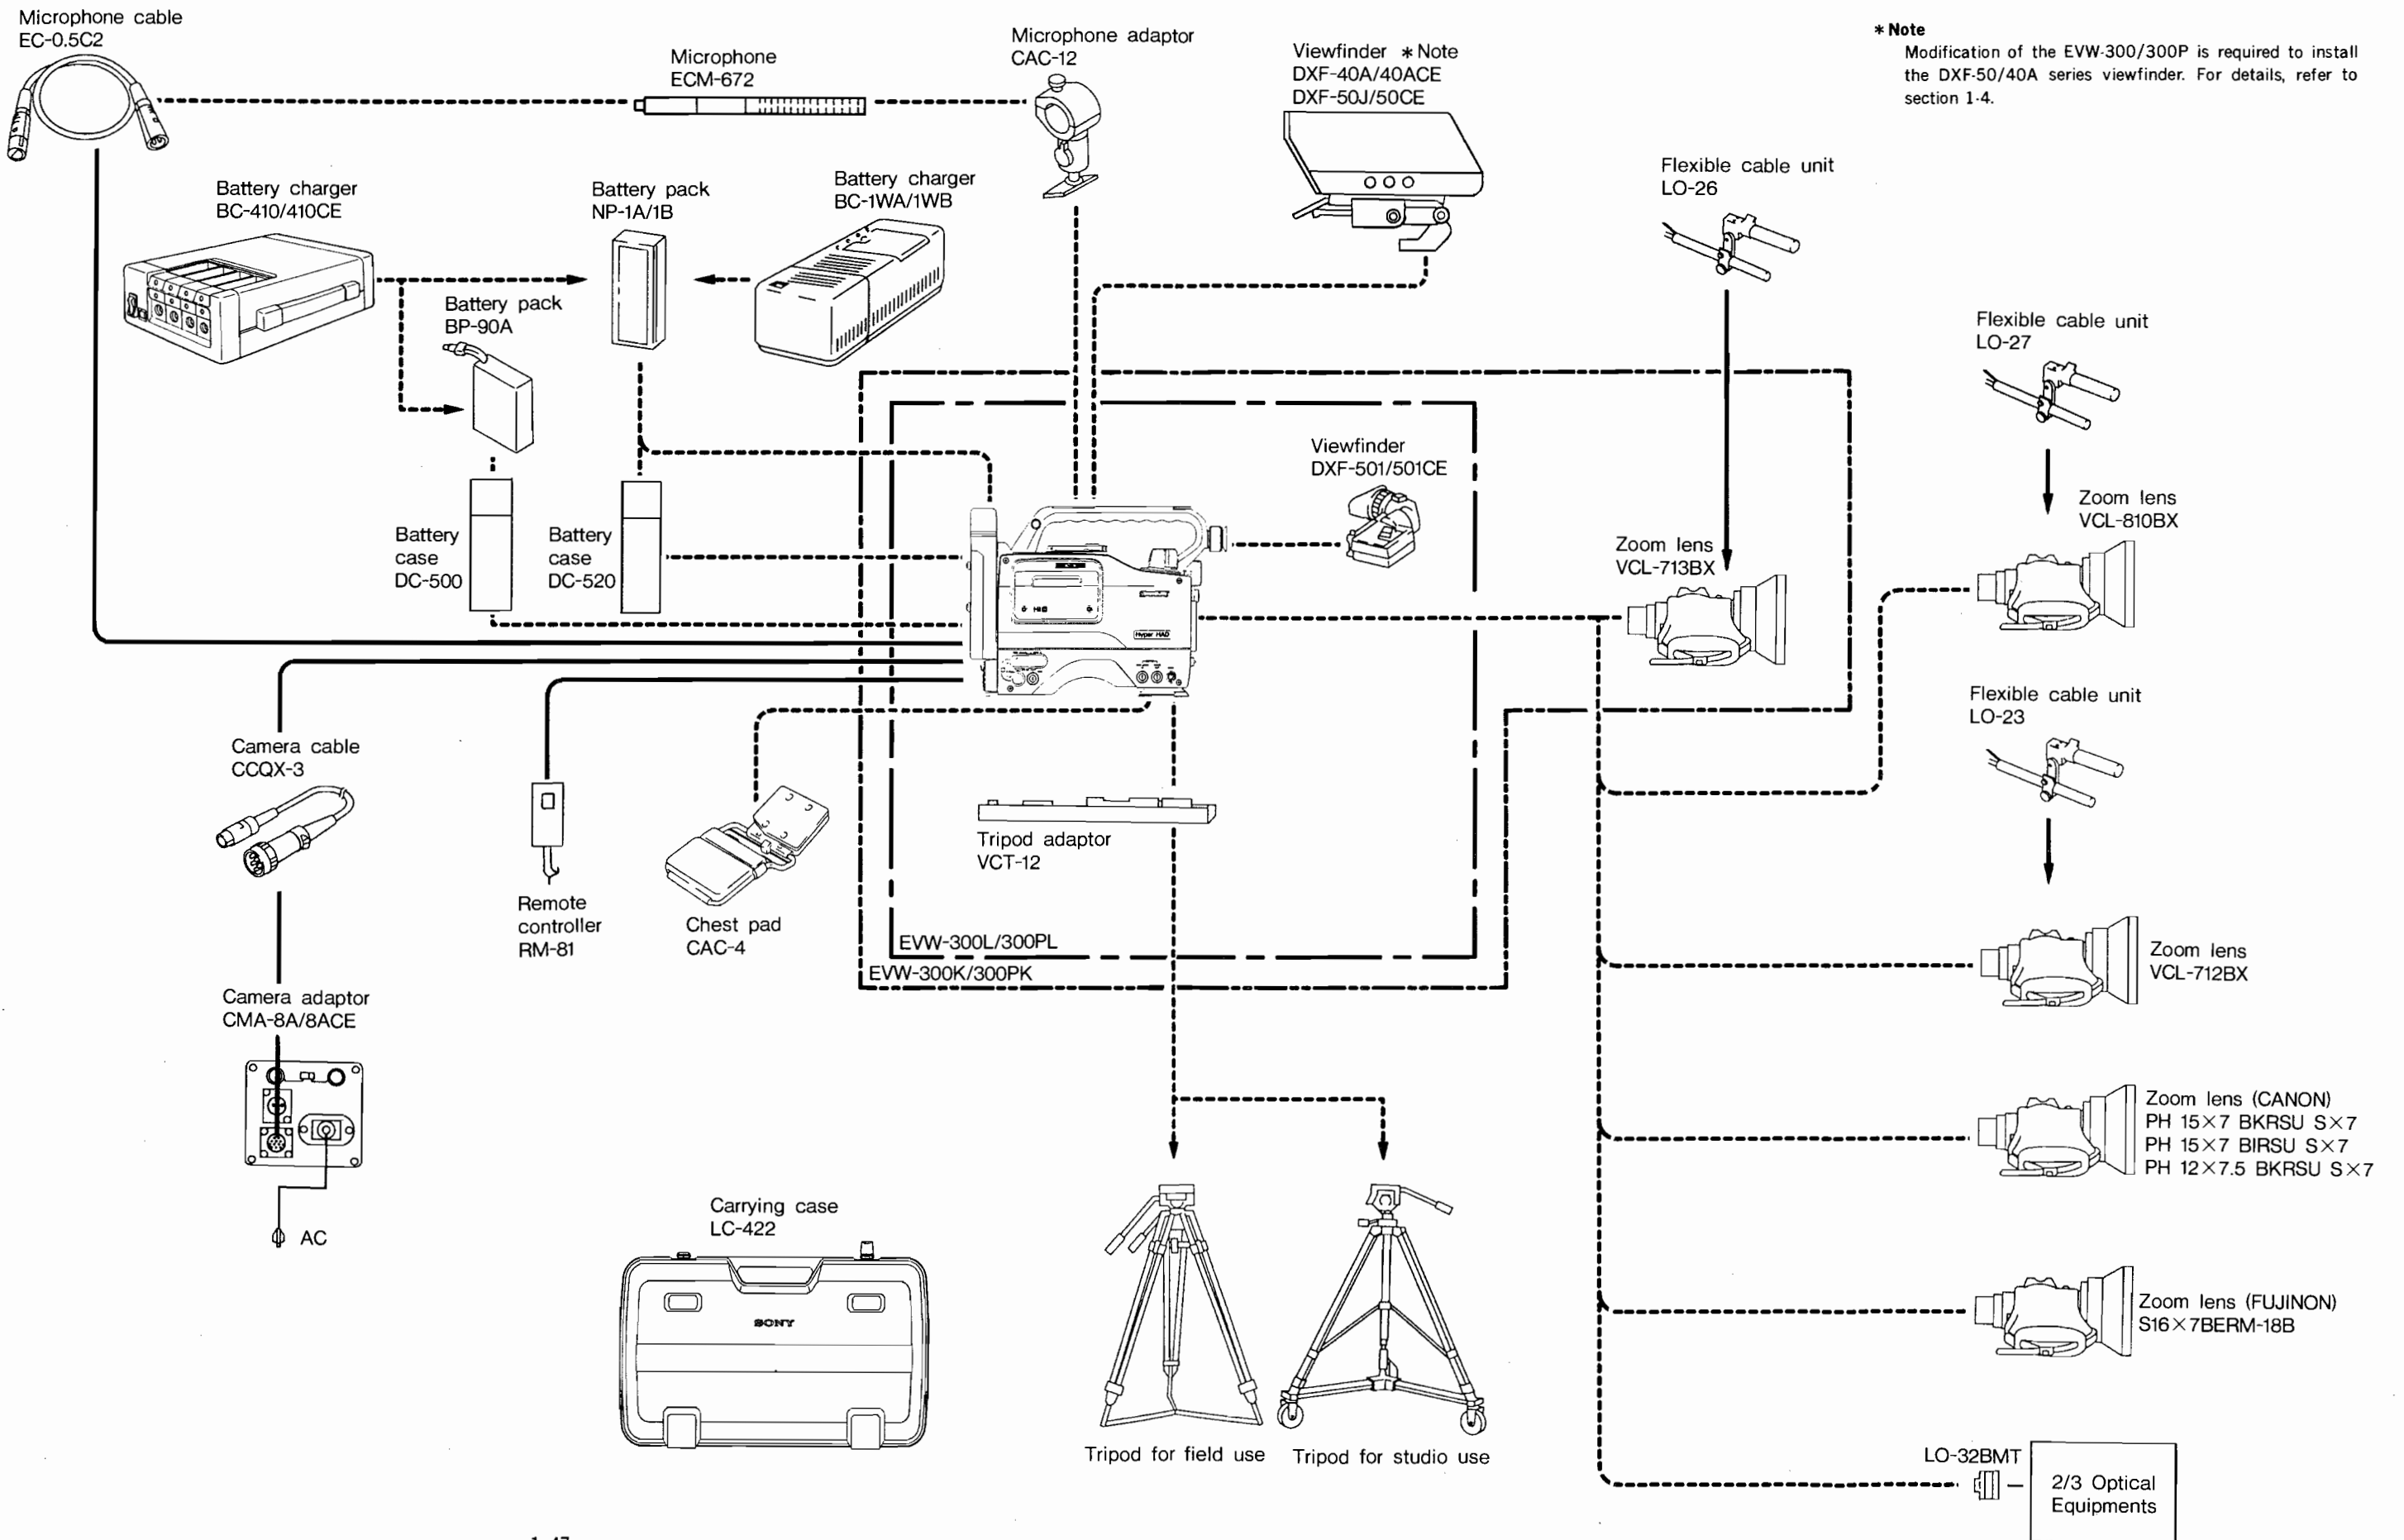

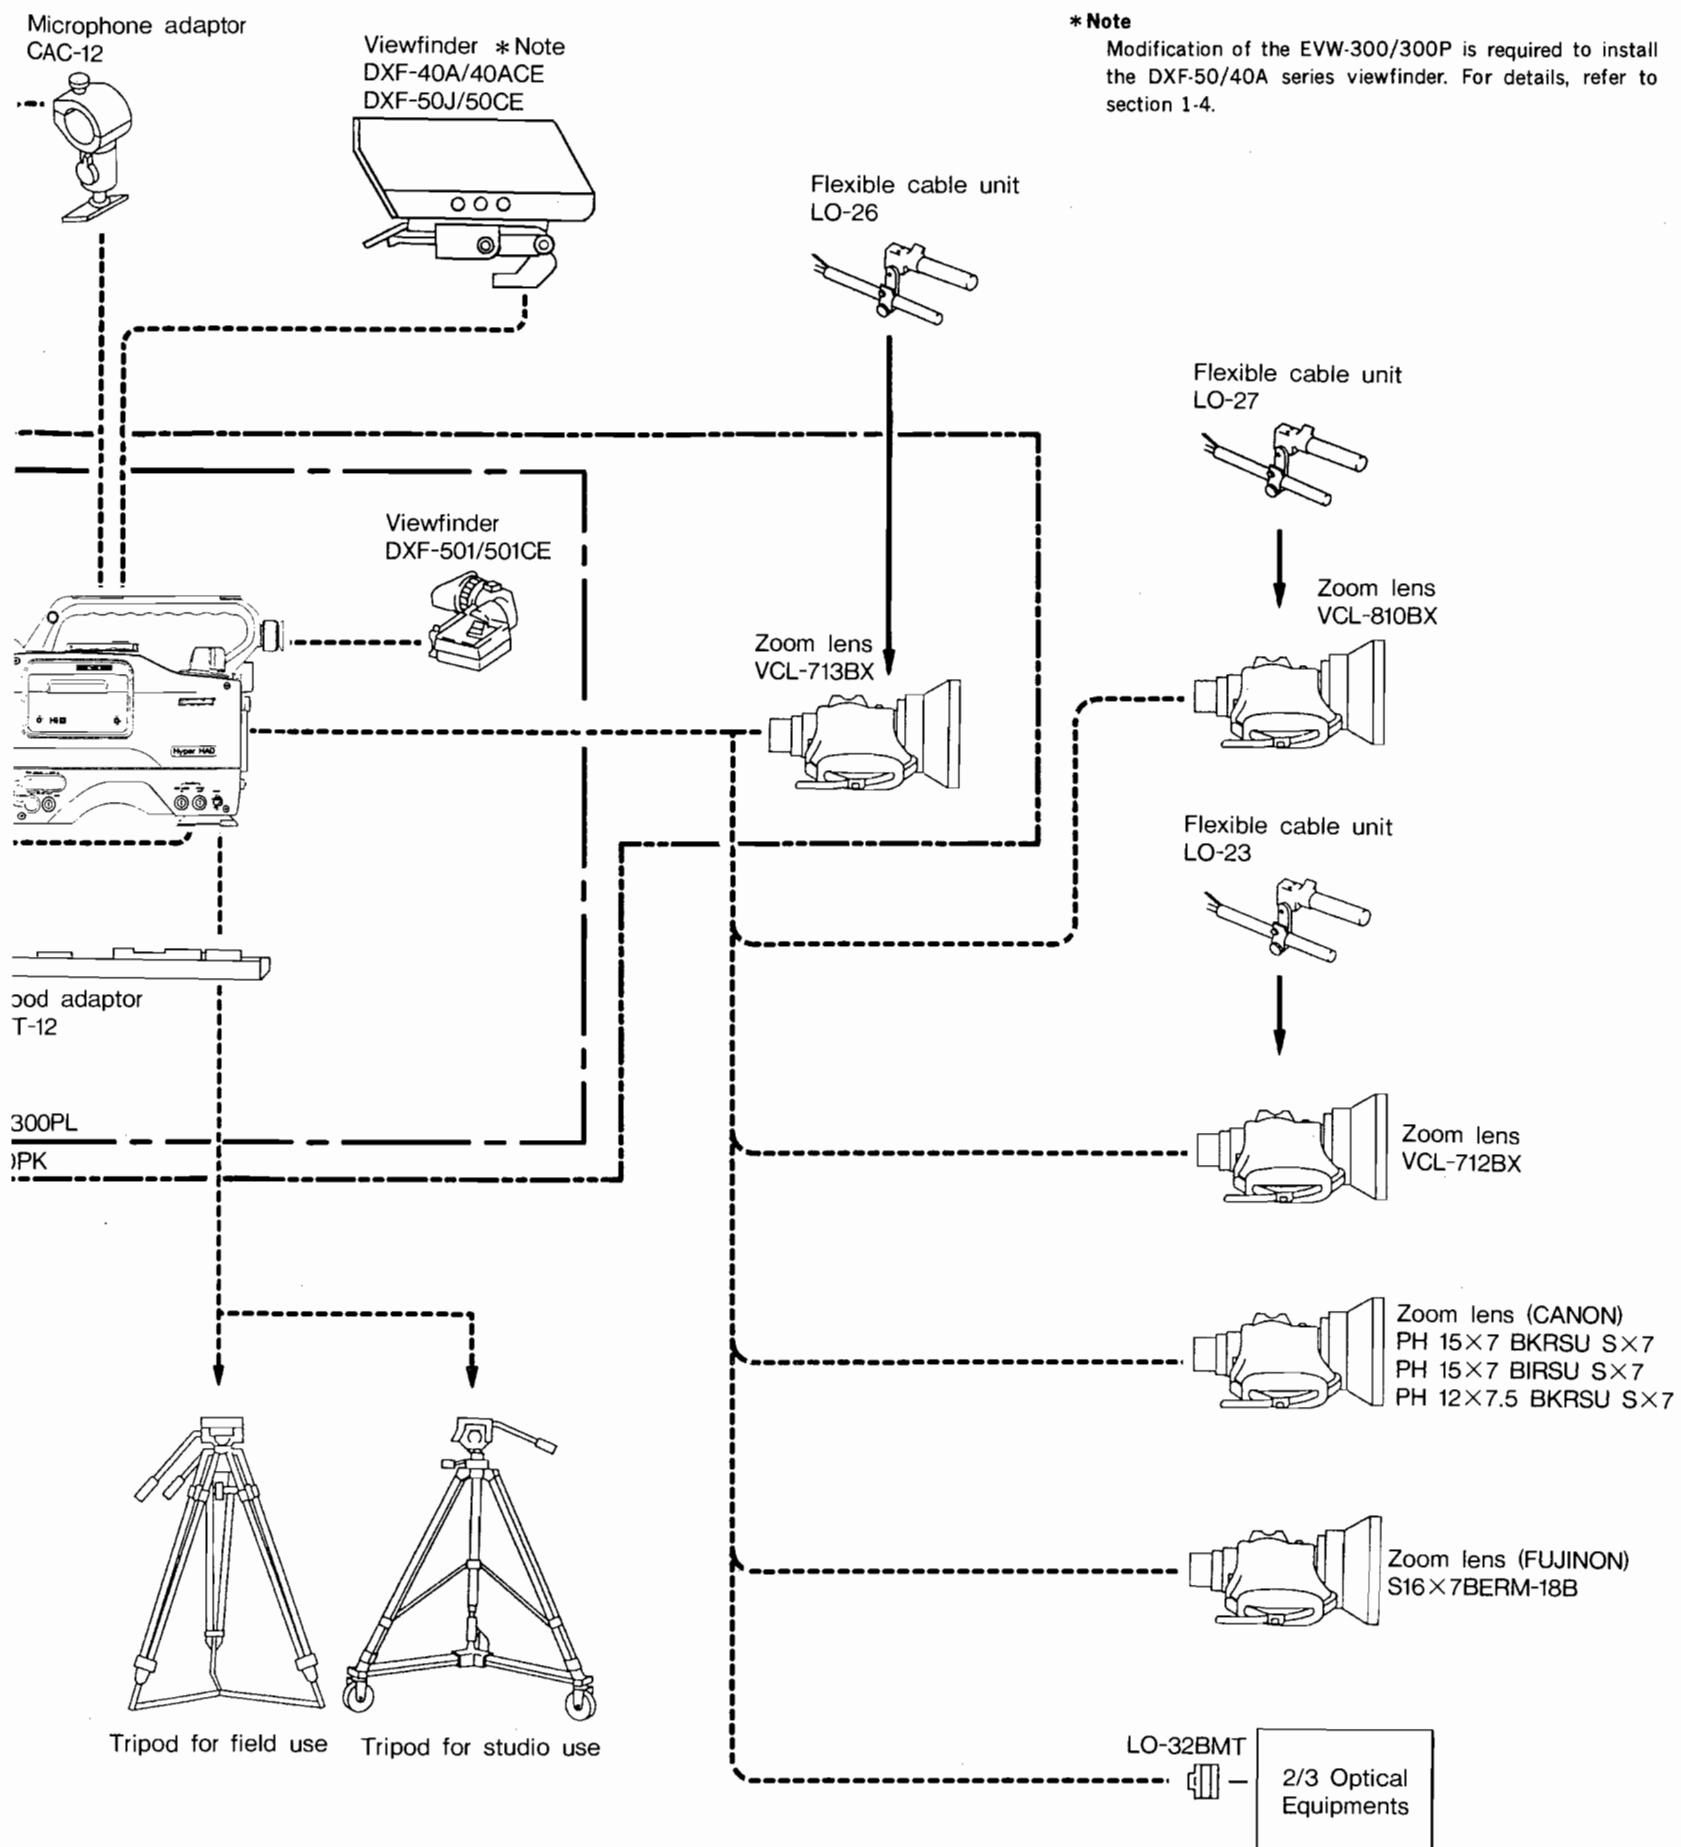



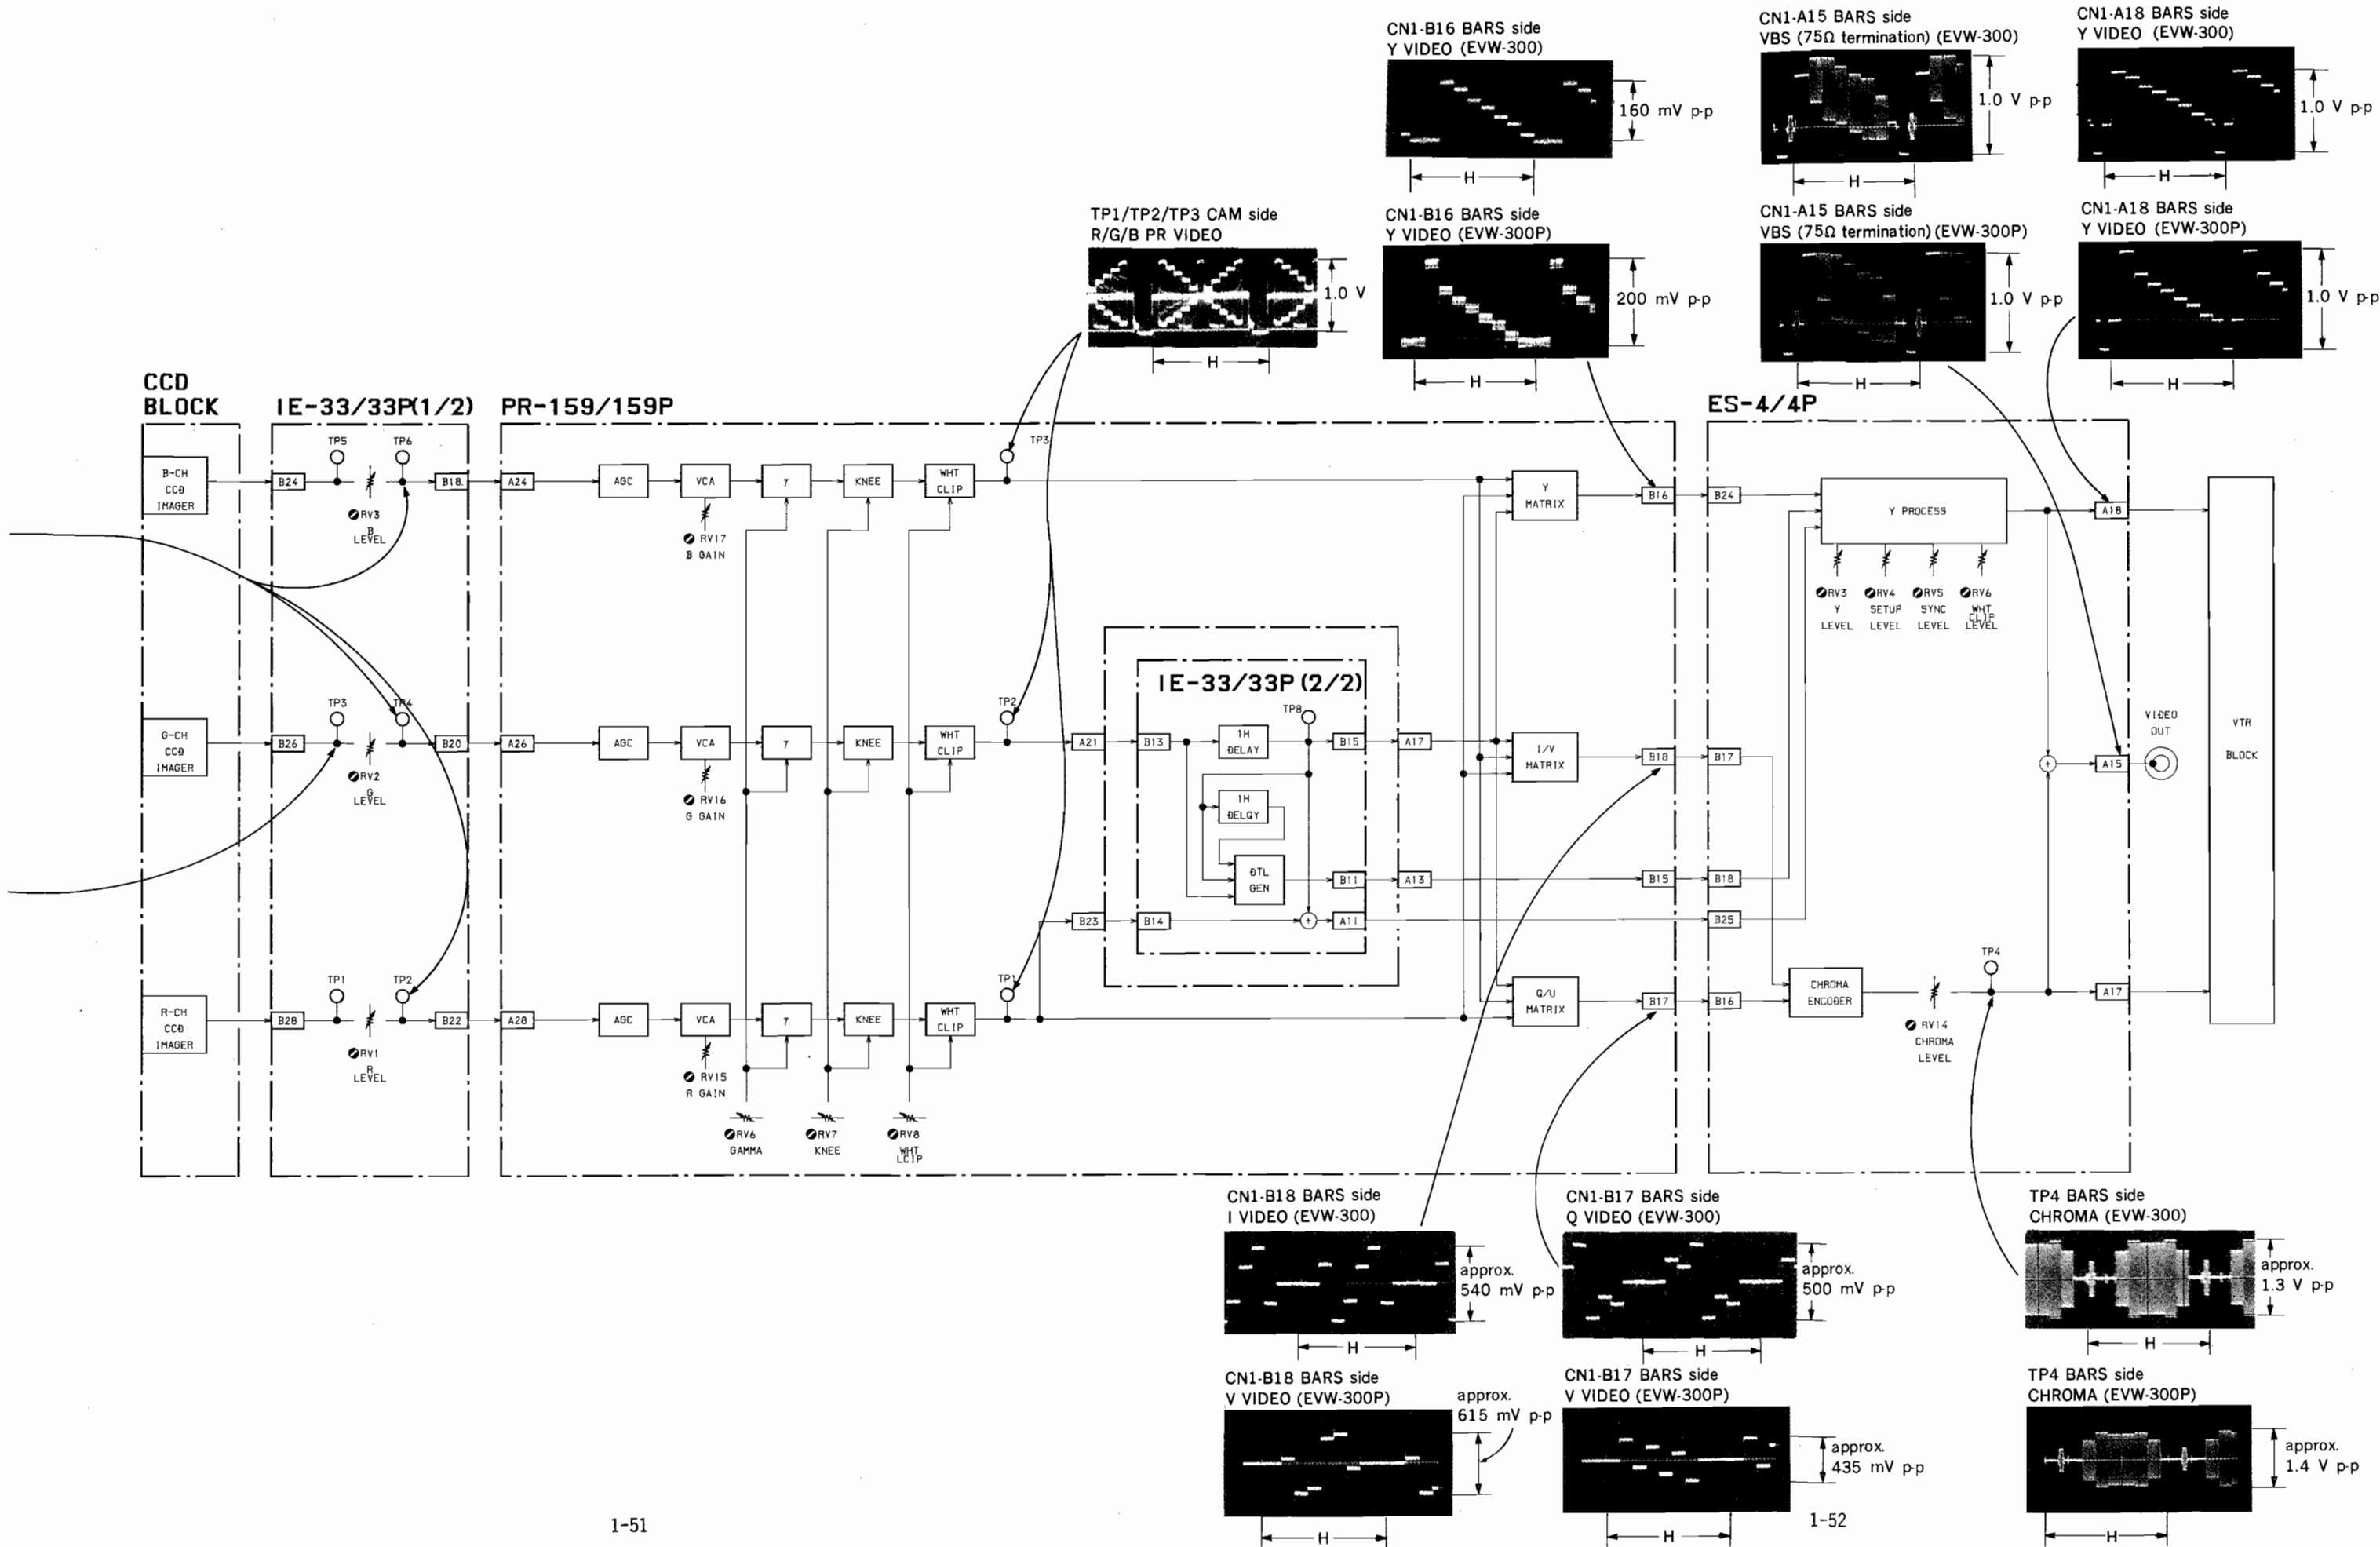

SECTION 2

PERIODIC CHECK AND MAINTENANCE

The following periodic check and maintenance schedule are recommended to be performed in order to maintain performance and obtain longer life of the unit. The period of the check and maintenance refers to Hours Meter on Side Panel.

2-1. MAINTENANCE AFTER REPAIRS

Perform the following maintenance after repairs without regarding operational hours of the unit.

2-1-1. Cleaning of Rotary Upper Drum

Press cleaning piece moistened with cleaning fluid lightly against Rotary Upper Drum and turn slowly Rotary Upper Drum counterclockwise by a hand.

Note ; Never turn it with electric power. Never turn it clockwise by a hand. When cleaning head chip, never move the cleaning piece in vertical direction. It is possible to damage the head chip.

2-1-2. Cleaning of Tape Path System


Put Cassette-up Compartment Assembly into the EJECT mode. Clean tape path system as No. 1 thru. No. 11 Guides, Drum, Capstan Shaft, and Pinch Roller with the cleaning piece moistened with cleaning fluid.

2-1-3. Cleaning of Drive System

Clean drive system as Reel Table surface and belt with the cleaning piece moistened with cleaning fluid.

2-2. PERIODIC CHECK

Perform periodic check and maintenance according to operational hours of the unit.

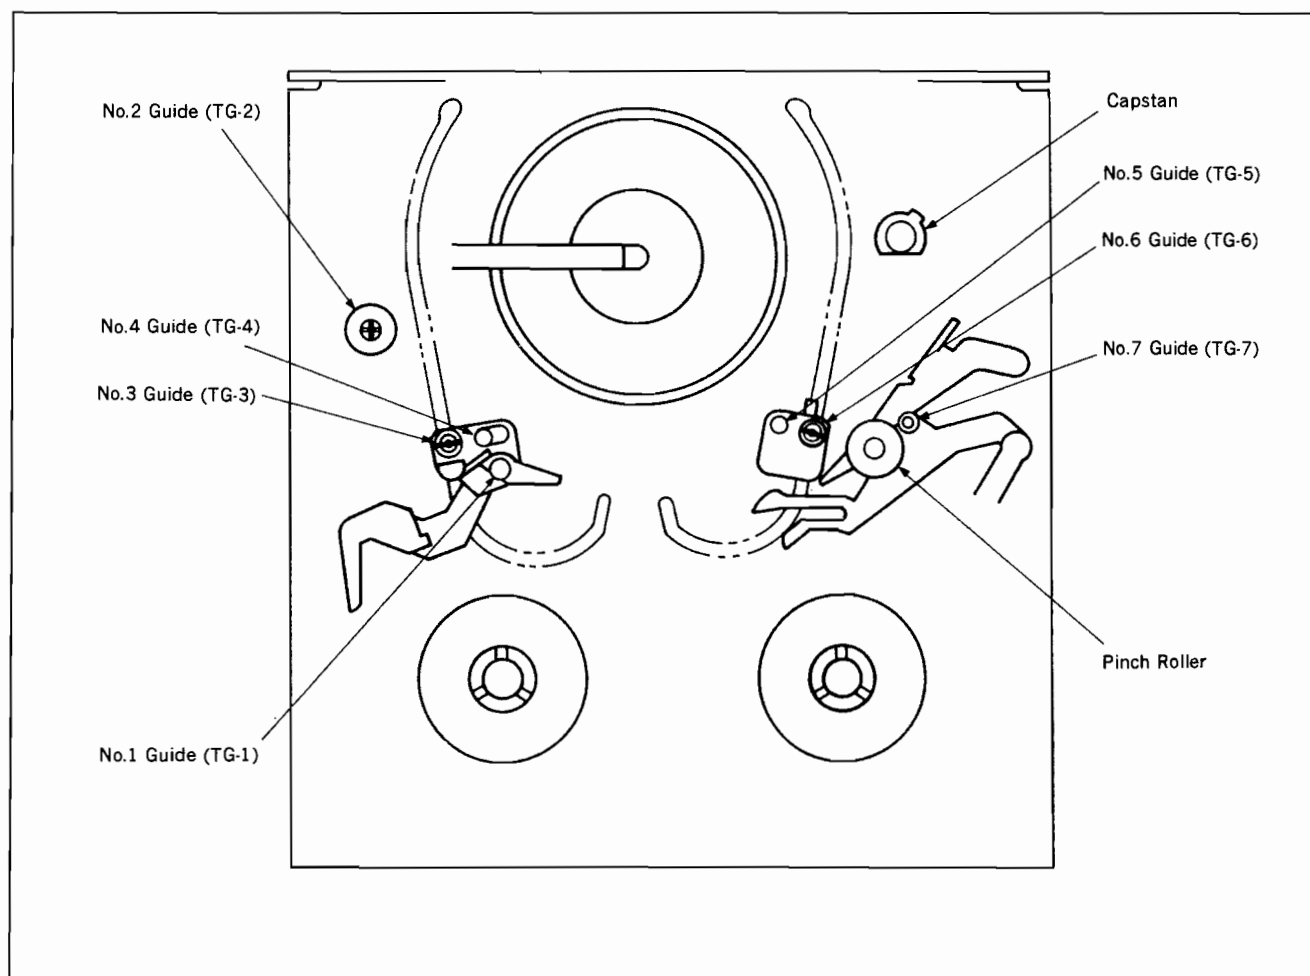

2-3. HOURS METER

Hours Meter can be displayed the total rotation time of the Upper Drum Assembly on the LCD display on the Side Panel. It is recommended that the Hours Meter is used as a tool for determining the periodic check.

Operation Procedures

1. Set the [DISPLAY] switch on the Side Panel to [TC] position.
2. Set the [R-RUN/SET/F-RUN] switch to [F-RUN] position.
3. Set the [TC/U-BIT] switch to [U-BIT] position.
4. The total rotation time of the Upper Drum Assembly is displayed while pressing the [SHIFT] button.

○ : Cleaning ◆ : Replacement ◇ : Check ■ : Apply oil □ : Smear grease

Location			Hours of Use (H) : Hour of Drum Rotation										Reference Section
	Part Name	Part No.	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	
Tape Path	Tape Path surface	—	○	○	○	○	○	○	○	○	○	○	2-1.
	Upper Drum Assembly	(DGR-66-R:N) A-7049-312-A (DGR-67-R:P) A-7049-313-A	○	◆	○	◆	○	◆	○	◆	○	◆	3-15.
	Lower Drum Assembly	(DGU-66A-R:N) A-7048-362-A (DGU-67A-R:P) A-7048-364-A	○	○	○	○	○	◆	○	○	○	○	3-15.
	Pinch Roller Assembly	A-7040-219-A	○	○	○	○	○	◆	○	○	○	○	3-8.
	(*1) Coaster (Left) Assembly	A-7040-204-A				□				□			2-4. 3-21.
	(*1) Coaster (Right) Assembly	A-7040-216-A				□				□			2-4. 3-20.
	(*2) Capstan Motor	8-835-331-31		■		■		◆		■		■	2-5. 3-3.
	Loading Motor	A-7040-208-A						◆					3-22.
Drive System	(*2) Joint Gear Assembly	X-3726-805-1				■				■			2-5. 3-17.
	TS Brake Assembly	X-3726-808-3				◆				◆			3-18.
	Tension Regulator Band Assembly	X-3728-859-1				◆				◆			3-12.
	(*2) Relay Pulley Assembly	X-3726-813-4				■				■			2-5. 3-18.
	(*1) (*2) Drive Gear (Left) Assembly	X-3728-842-1				□/■				□/■			2-4. 2-5. 3-21.
	(*1) (*2) Drive Gear (Right) Assembly	X-3728-843-1				□/■				□/■			2-4. 2-5. 3-20.
	S Reel Table Assembly	X-3728-851-1	○	○	○	○	○	◆	○	○	○	○	3-10.
	T Reel Table Assembly	X-3728-855-6	○	○	○	○	○	◆	○	○	○	○	3-11.
	(*2) RC Gear Assembly	X-3728-858-2				■				■			2-5. 3-17.
	(*1) Worm Assembly	X-3940-276-2				□				□			2-4. 3-22.
	Timing Belt (S)	3-728-866-11				◆				◆			3-17.
	Timing Belt (L)	3-741-197-01				◆				◆			3-17.
	(*1) Groove of Coaster Guide	—				□				□			2-5.
	Abnormal-noise	—	◇	◇	◇	◇	◇	◇	◇	◇	◇	◇	—
Performance Check	FWD Back Tension Measurement	—		◇		◇		◇		◇		◇	4-1.
	FWD, RVS Torque Measurement	—		◇		◇		◇		◇		◇	4-2.

(*1) Smear a grease referring to Section 2-4.

(*2) Apply oil referring to Section 2-5.

(*3) When overhauling, replace part referring to the list.

(*4) Replacement of part will be influenced by operating surroundings.


(*5) When repairing, be sure to clean Tape Path surface.

2-4. SMEAR GREASE

Smear a grease periodically to the following portions.

- Top projection of Coaster (Left) Assembly.
- Top projection of Coaster (Right) Assembly.
- Coaster Guide's groove of mechanical chassis.
- Sliding surface of the Coaster Guide on the mechanical chassis.
- Lever Drive's groove of Drive Gear (Left) Assembly.
- Lever Drive's groove of Drive Gear (Right) Assembly.
- Worm Gear of Worm Assembly.

Then smear a grease to the shaded portions and arrow portions.

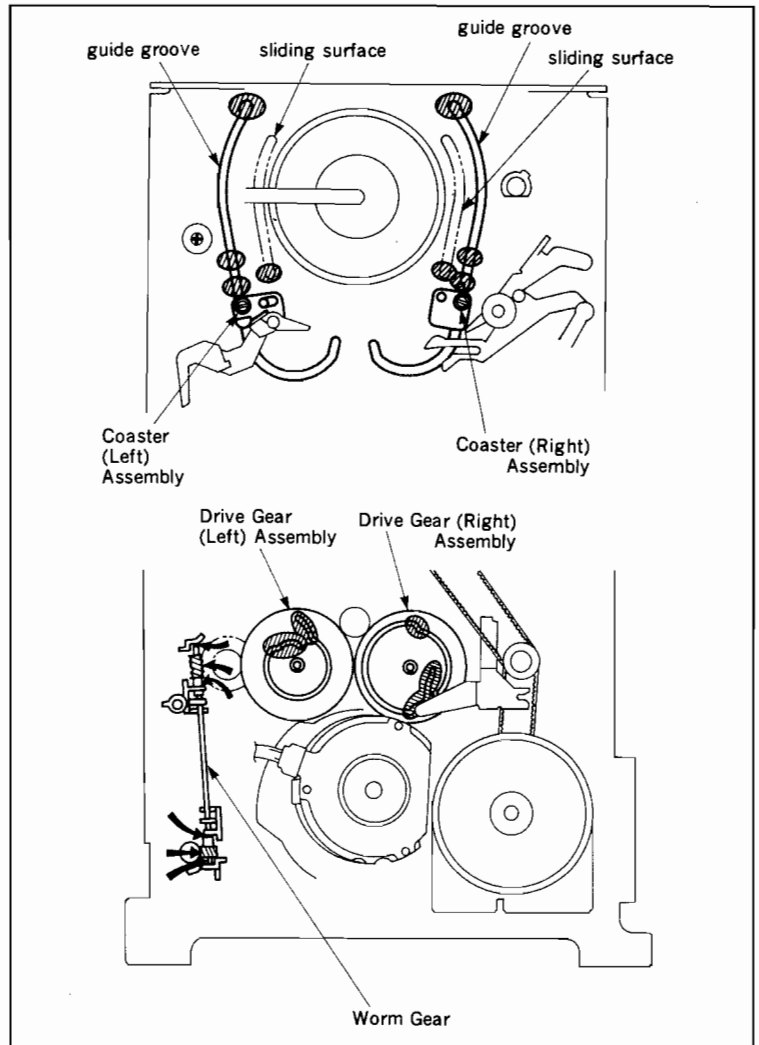


2-5. APPLY OIL

Apply oil periodically to the following portions.

- Capstan Shaft.
- Shaft of Drive Gear (Left) Assembly.
- Shaft of Drive Gear (Right) Assembly.
- Shaft of Idler Pulley Assembly.
- Shaft of RC Gear Assembly.
- Shaft of Connecting Gear Assembly.

Then apply a half drop of oil to the arrow portions.

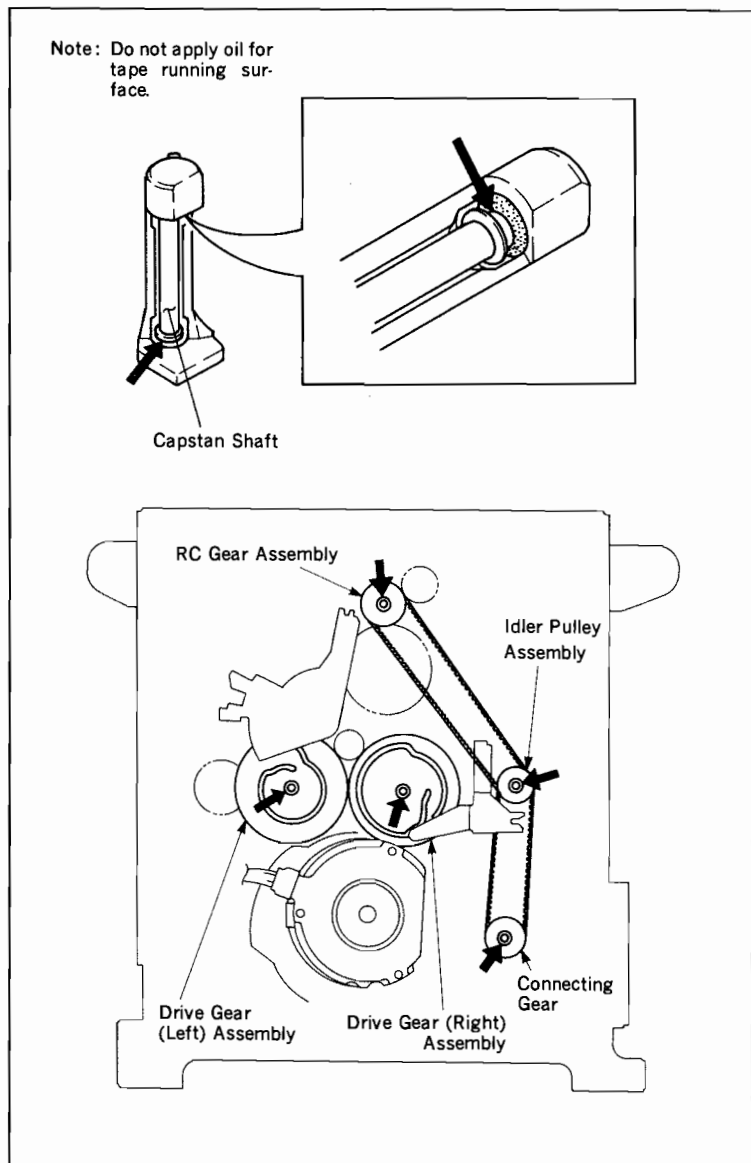

2-6. HOW TO USE CLEANING TAPE


Cleaning tape : V8-6CLHSP
(supplied accessory)
V8-25CLH (option)

Note : Do not use cleaning tape, V8-25CLN.

- (1) When Rotary Head clogs and the head clogging cannot remove with head cleaning, use the cleaning tape. If using in other conditions, it will be shorten the life of the head.
- (2) Use within fifteen seconds for a cleaning and never rewind the cleaning tape for use. The cleaning tape can only once be used.

2-7. OTHERS

- (1) Sony oil
 - Be sure to use Sony oil. If other oil is used, it is possible to trouble because of different viscosity.
Sony oil : Part No. 7-661-018-18
 - Use Sony oil in which dust and others are not mixed. If mixed, the bearing may seize or wear.
 - A drop of oil means the amount which sticks to a 2mm-diameter rod as shown in the figure.
- (2) Sony grease
 - Be sure to use Sony grease.
Sony grease : Part No. 7-662-010-08
(SGL-701)

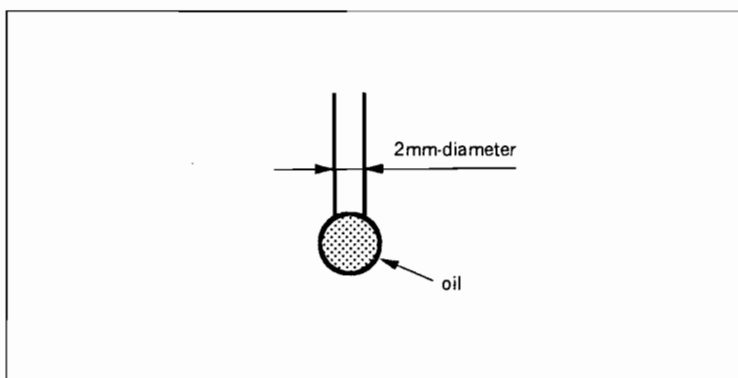

SECTION 3 REPLACEMENT OF MAJOR PART

PREPARATION FOR REPLACEMENT OF PART

Replacement of some parts use a Mode Selector (Tool). marked modes in the replacement procedure are set by pressing button on the Mode Selector. Install a Mode Selector III Panel on the Mode Selector and then use it.

Mode Selector : J-6080-825-A

Mode Selector III Panel : J-6082-023-A

Operation of Mode Selector

1. Location of part and control (Fig. 1)
2. Connection (Fig. 2)
- (1) Install the Mode Selector III Panel on the Mode Selector.
- (2) Connect the Mode Selector III Conversion Connector to the 6P connector (white) of the Mode Selector M-switch.
- (3) Remove the Mechanical Deck Block referring to Section 1-2-1.
- (4) Install the FP-89 Board to the Mode Selector III Conversion Connector.
- (5) Touch the clips (black, red) of the Mode Selector III to terminals of the Loading Motor.

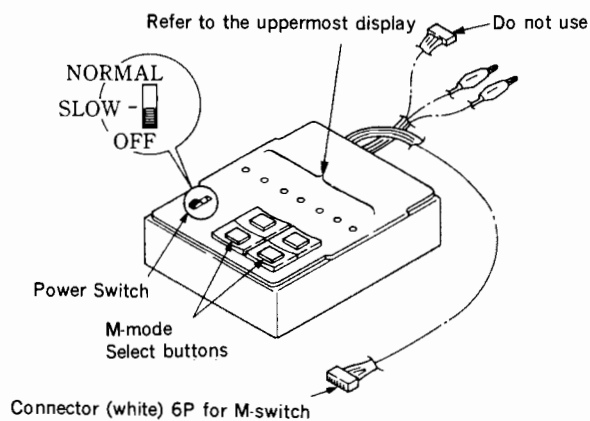


Fig. 1


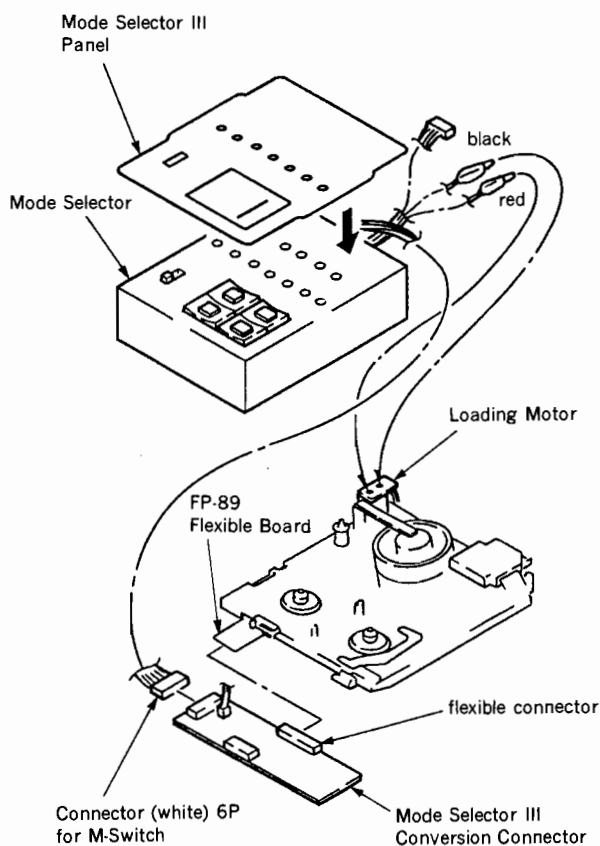


Fig. 2

3. Operation (Fig. 3)

- Use only M-mode select buttons.
- Refer to the uppermost display on the Mode Selector III Panel about display of the mode. The display of IA, IB and IC light up during the mode changes.
- Press continuously the right side M-mode select button and the mode changes the EJECT, (IA), ULD, (IB), STOP, (IC) and FWD in order.
- Press the left side M-mode select button, mode changes from FWD to EJECT in order.

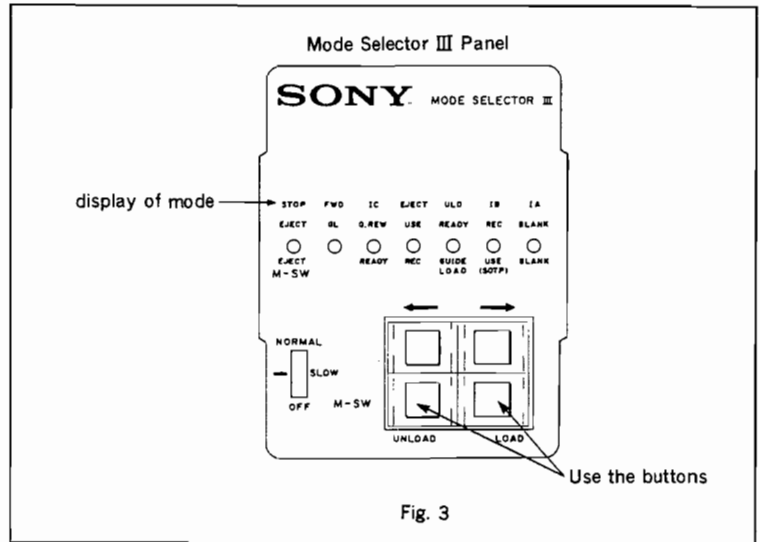


3-1. REPLACEMENT OF HC ROLLER ASSEMBLY


Removal :

- (1) Remove the Cassette Lid and Side Panel (Left) Assembly referring to Section 1-1.
- (2) Remove a fixing screw and remove the IC SBX1508.
- (3) Remove a fixing screw and remove HC Roller Assembly.

Installation :

- (1) Put the two projections of the HC Roller Assembly into the two holes of the mechanical chassis.
- (2) Install the HC Roller Guide with the fixing screw.
- (3) Install the IC SBX1508 with the fixing screw.

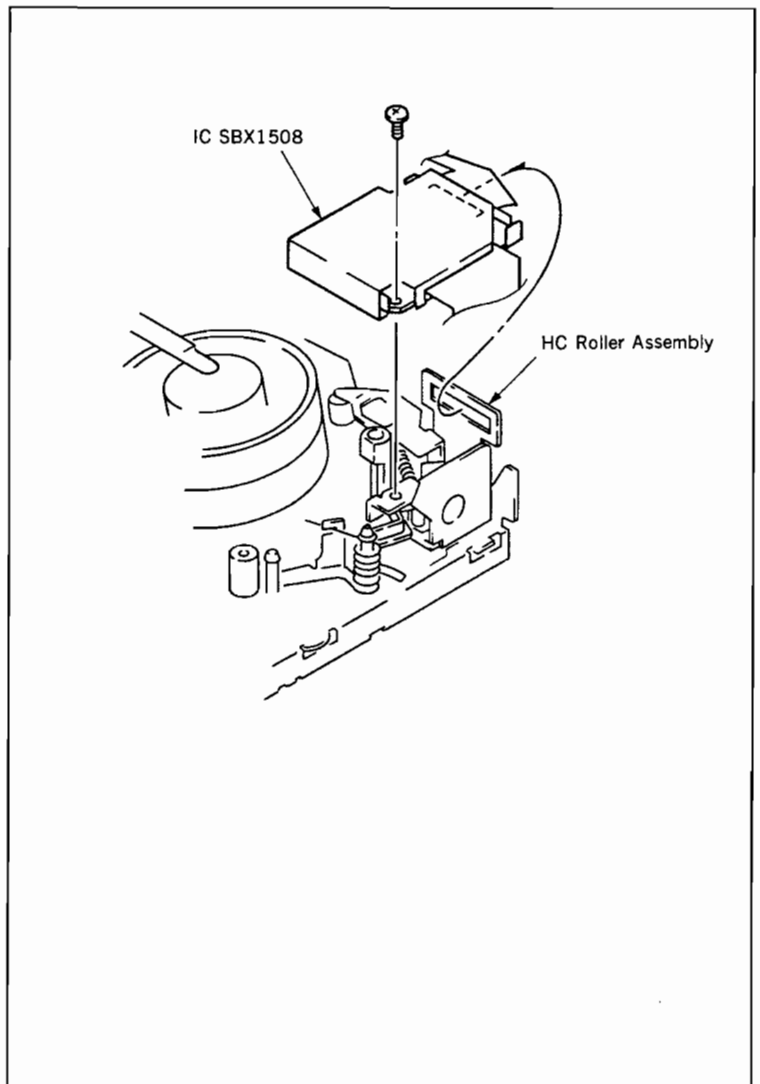

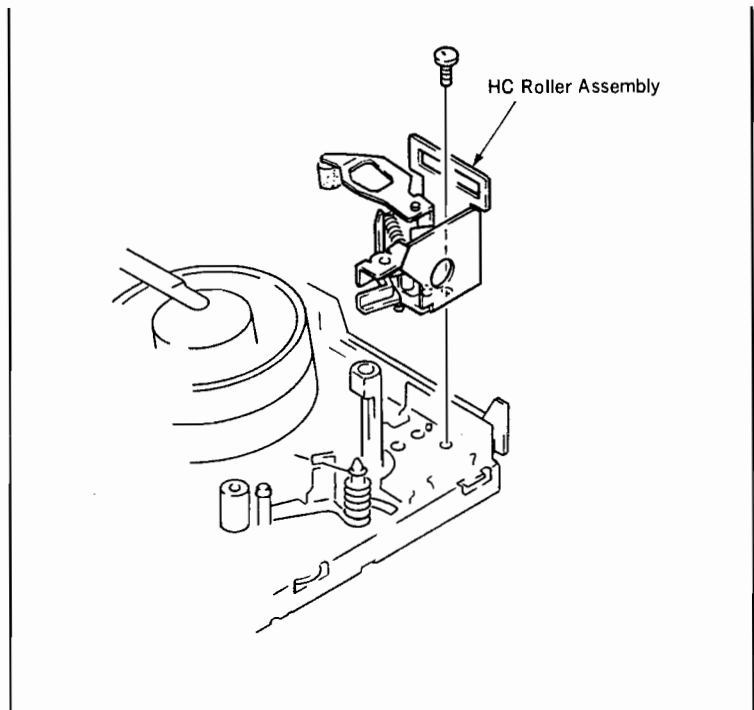


3-2. REPLACEMENT OF GUIDE GUARD ASSEMBLY

Removal :

- (1) Remove the Cassette Lid and Side Panel (Left) Assembly referring to Section 1-1.
- (2) Remove a fixing screw and remove Guide Guard Assembly.

Installation :

- (1) Put a projection of the Guide Guard Assembly into the hole.
- (2) Install the Guide Guard Assembly with the fixing screw.

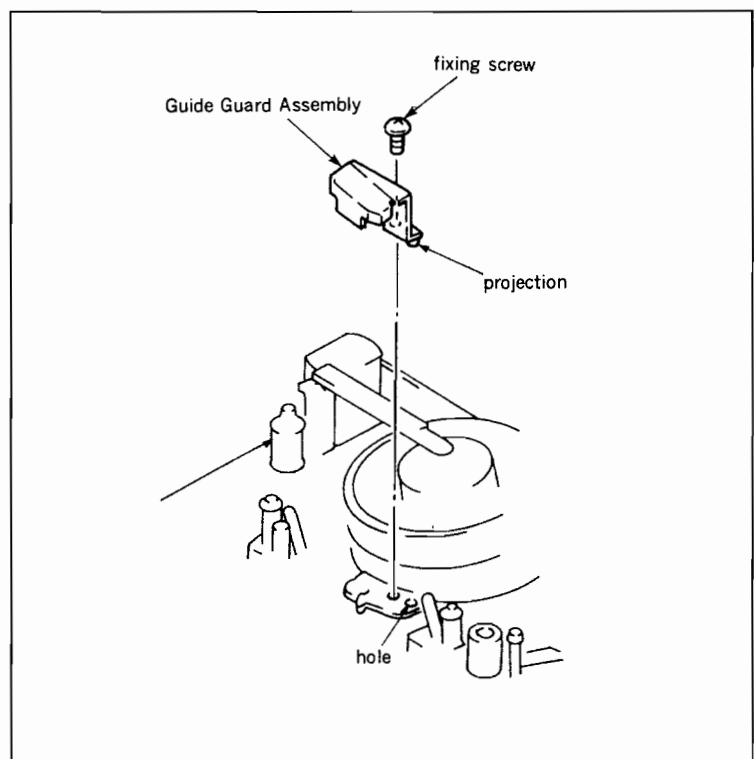

3-3. REPLACEMENT OF DC MOTOR (CAPSTAN MOTOR)


Tool : Mode Selector

Removal :

- When replacement, be careful not to touch capstan motor shaft, oil seal and rotor.
- (1) Remove the Mechanical Deck Block referring to Section 1-2.
- (2) Remove SS-50/50P Board referring to Section 1-2-3.
- (3) Set **ULD** mode.
- (4) Remove two fixing screws and remove the MD Frame C.
- (5) Remove the HC Roller Assembly referring to Section 3-1.
- (6) Turn the stopper in the direction of arrow A as far as it will go.
- (7) Remove two fixing screws. Move Capstan Motor in the direction of the arrow and remove it while paying attention not to touch the projection of the chassis. (Fig. A)

Installation :

- (1) Move the Capstan Motor in the opposite direction of the arrow and install it in the hole of the chassis. (Fig. A)
- (2) Put the two projections of the Capstan Motor to the holes of the fixing screw. Engage the gear portion of the Capstan Motor to Connecting Gear. Be careful not to damage the gear.
- (3) Install the Capstan Motor with two fixing screws. Check that there is no clearance between the Capstan Motor and chassis.
- (4) Turn the stopper in the direction of arrow B as far as it will go.

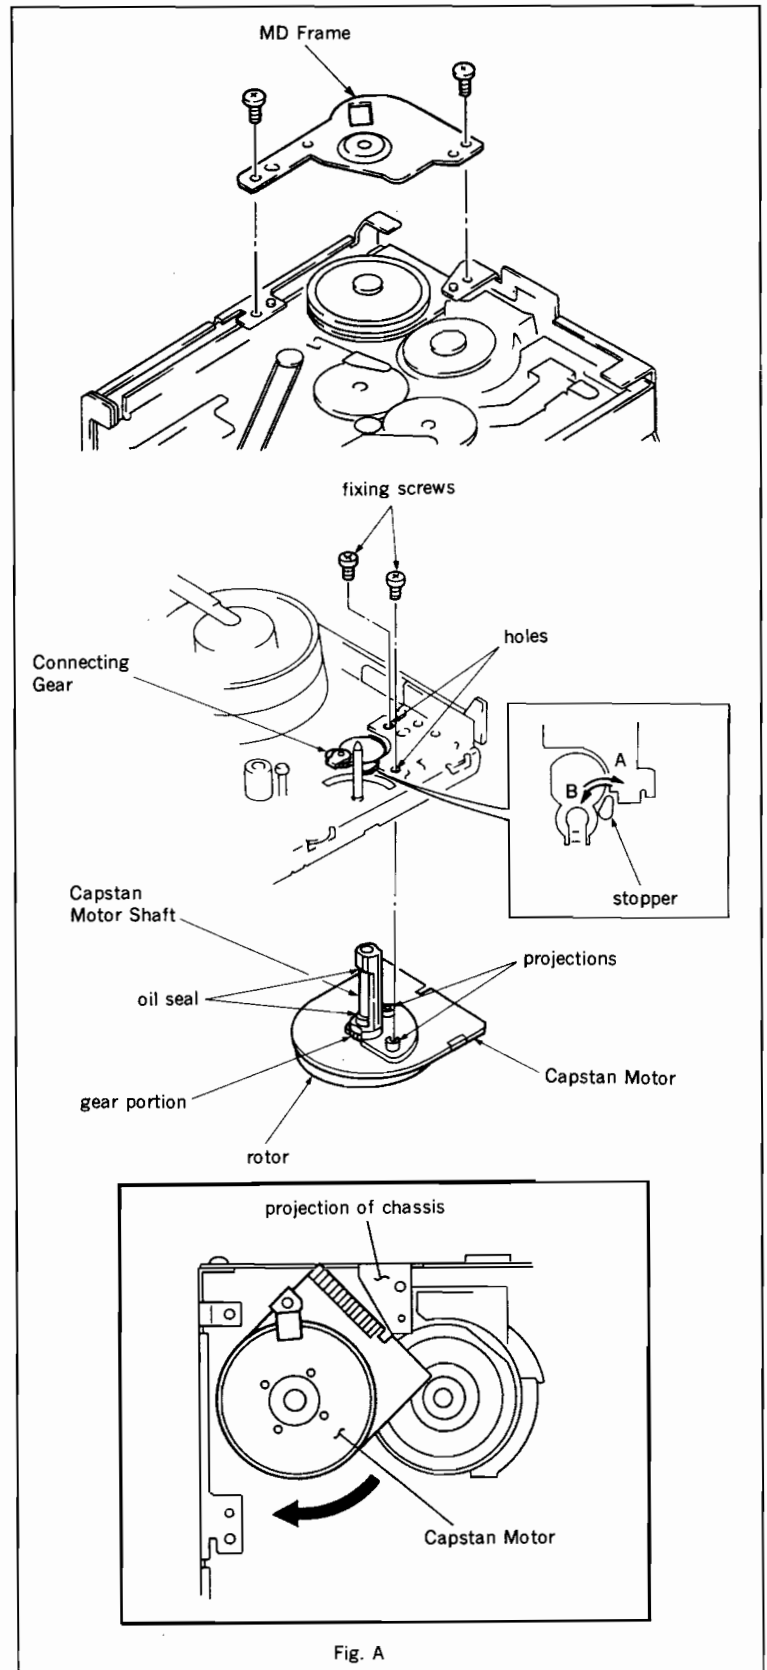

3-4. REPLACEMENT OF S AND T BRAKES


Removal :

- (1) Remove the Side Panel (Left) Assembly referring to Section 1-1.
- (2) Remove torsion spring (ST).
- (3) Remove Shaft Holding Pin A and remove T Brake.
- (4) Remove Shaft Holding Pin B and remove S Brake.

Installation :

- (1) While putting the gear portion to the notch, install the S Brake.
- (2) Install the Shaft Holding Pin B.
- (3) Put the shaft A of the T Brake to the left side of the Brake Release Arm as shown in the figure and install the T Brake.
- (4) Install the Shaft Holding Pin A.
- (5) Put the torsion spring (ST) under the claw A of the shaft B and hook each ends of spring to the claws B.

Note: Before assembling the S and T Brakes, check that the claws of the Shaft Holding Pins A and B are not broken.

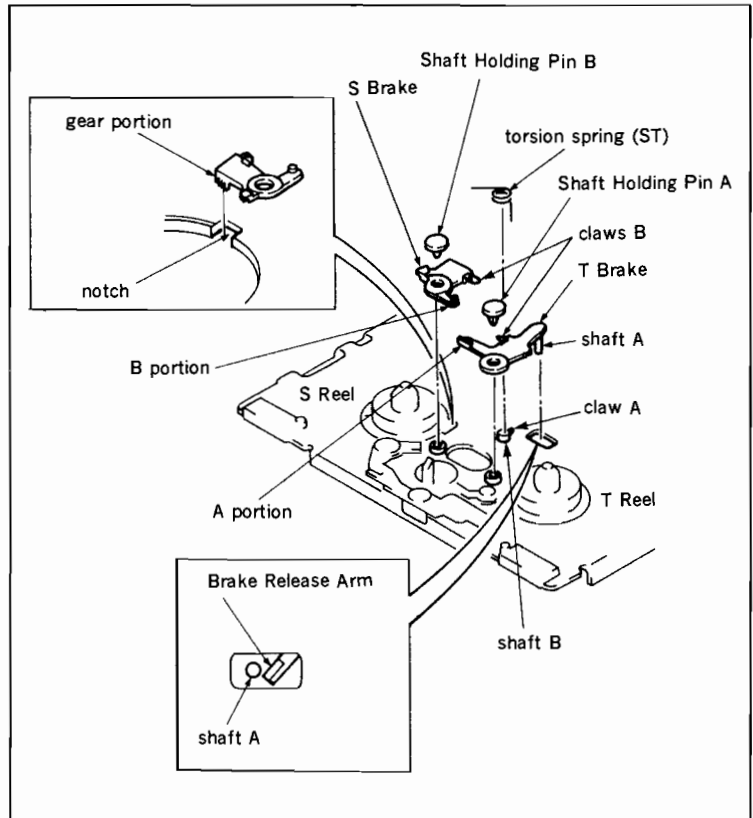

3-5. REPLACEMENT OF LB BRAKE AND SHAFT HOLDING PIN


Removal :

- (1) Remove the Side Panel (Left) Assembly referring to Section 1-1.
- (2) Remove a fixing screw and remove TL Stopper Plate.
- (3) Remove Shaft Holding Pin A and remove LB Brake.
- (4) Remove Shaft Holding Pin B and remove LB Lever.

Installation :

- (1) Install the LB Lever so that the hole of the LB Lever fits to the pin of the LB Gear, and fasten with the Shaft Holding Pin B.
- (2) Put the pin of the LB Brake into the notch of the LB Lever. While putting the gear portion of the LB Brake into the notch A as shown in the figure, install the LB Brake.
- (3) Install the Shaft Holding Pin A.
- (4) Put the projection of the TL Stopper Plate to the hole, and install with the fixing screw.

Note : Before assembling the LB Brake and Shaft Holding Pins, check that the claws of the Shaft Holding Pins A and B are not broken.

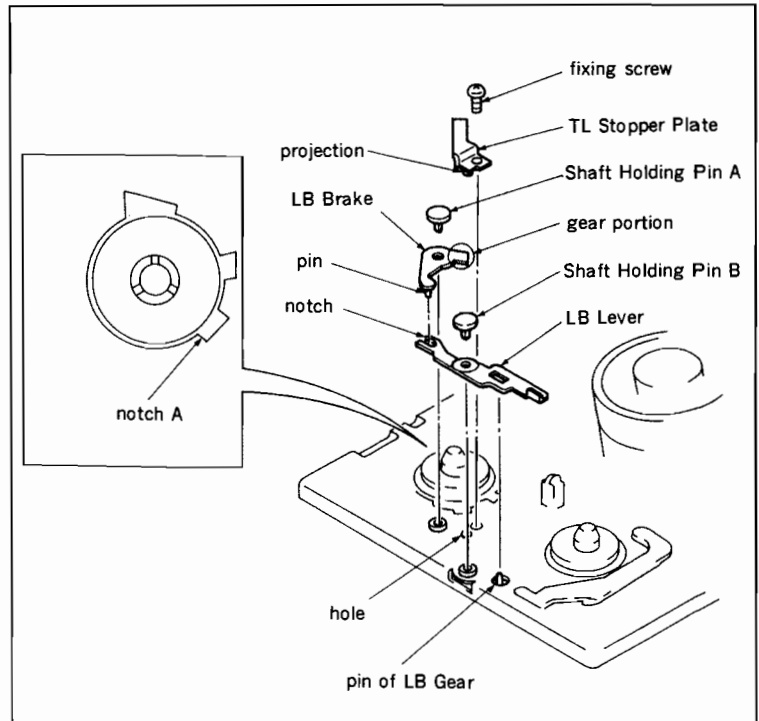


3-6. REPLACEMENT OF LB RELEASE ARM

Removal :

- (1) Remove the Cassette-up Compartment referring to Section 1-3.
- (2) While pushing claw in the direction of the arrow from top of the unit with a thin flatblade screwdriver, remove LB Release Arm.

Installation :

- (1) Put the LB Release Arm to the shaft. Put the A, B, C and D points into the three holes and lock the LB Release Arm with the claw.

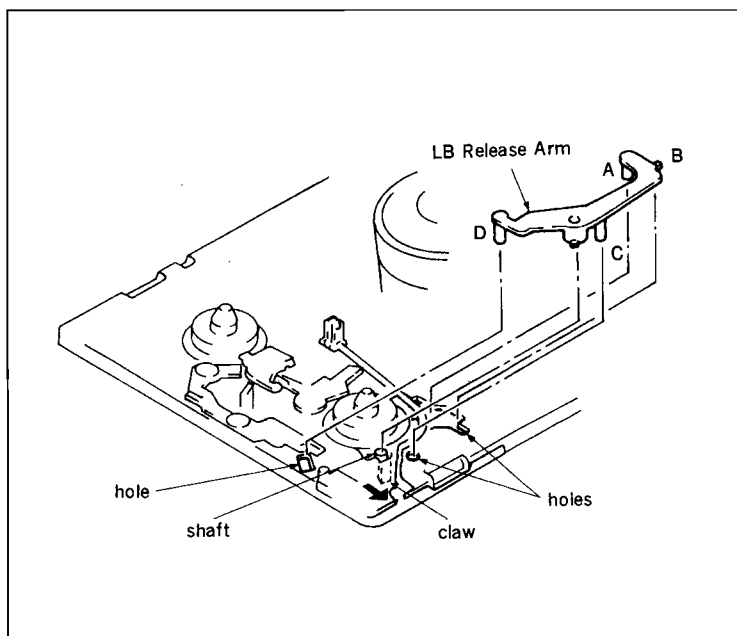


3-7. REPLACEMENT OF RK STOPPER AND STOPPER ARM

Removal :

- (1) Remove the Cassette-up Compartment referring to Section 1-3.
- (2) Remove torsion spring (RK).
- (3) Release claw of the chassis in the direction of the arrow and remove RK Stopper Arm.
- (4) Remove RK Stopper.

Installation :

- (1) Install the RK Stopper to the shaft A.
- (2) Install the RK Stopper Arm to the shaft B. Through the pin of the RK Stopper into the hole A of the RK Stopper Arm and lock the RK Stopper Arm with the claw of the chassis to the hole B.
- (3) Put the torsion spring (RK) to the shaft of the RK Stopper and hook the ends of it to the claws A and B.

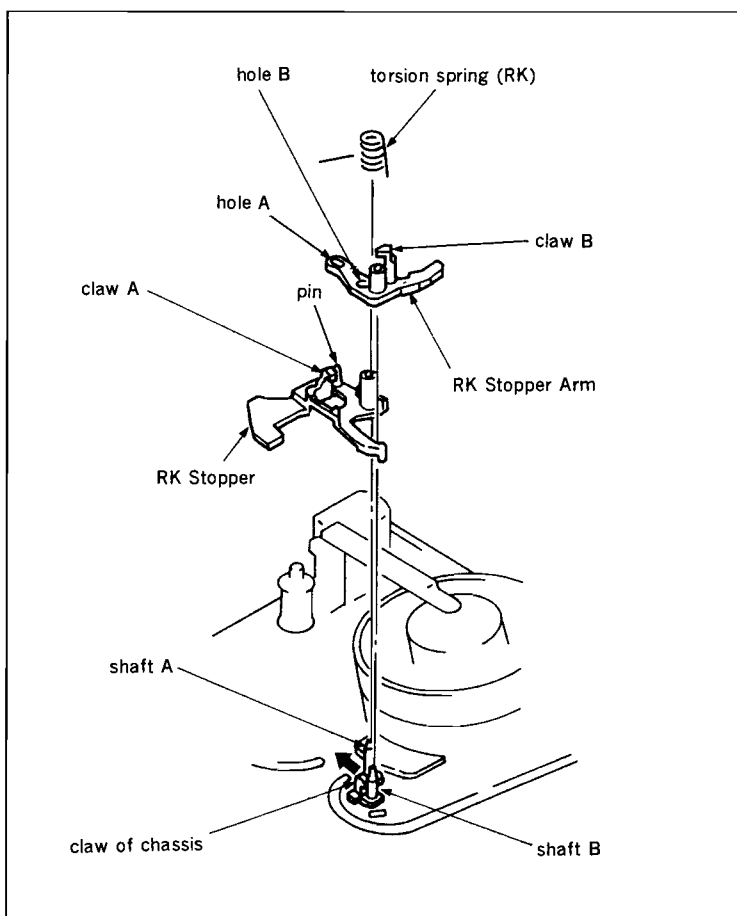

3-8. REPLACEMENT OF PINCH ARM ASSEMBLY AND TG-7 ARM ASSEMBLY

Tool : Mode Selector

Sony Oil

Sony Grease


Removal :

- (1) Remove the Cassette-up Compartment referring to Section 1-3.
- (2) Move that TG-7 Arm Assembly in order to be placed as shown in fig. A with Mode Selector.
- (3) Remove a stopper washer and remove Pinch Arm Assembly.
- (4) Bend the claw in the hole A in the direction of the arrow with a thin flatblade screwdriver and remove TG-7 Plate Spring.
- (5) Remove TG-7 Arm Assembly.

Installation :

- (1) Smear a grease to inside edge and bottom of the hole B.
- (2) Put the pin of the longitudinal hole on the chassis to the groove of the TG-7 Arm Assembly and put the shaft into the hole B.
- (3) Smear a grease to the shaded portion A of the TG-7 Arm Assembly. Be careful not to smear a grease to the fixing screw of the TG-7 Arm Assembly. (Fig. B)
- (4) Put the TG-7 Plate Spring into the hole A. Lock the claw and install it.
- (5) Apply a half drop of oil to the shaft A. (Fig. C)
- (6) Put the Pinch Arm Assembly in the shaft A and put the C portion of the Pinch Sub Arm Assembly into the B portion. When putting the Pinch Arm Assembly into the shaft A, be careful not to touch the TG-7 Guide and rubber portion.
- (7) Fasten the stopper washer.

Note : After replacement, perform the Tape Path Adjustment referring to Section 5.

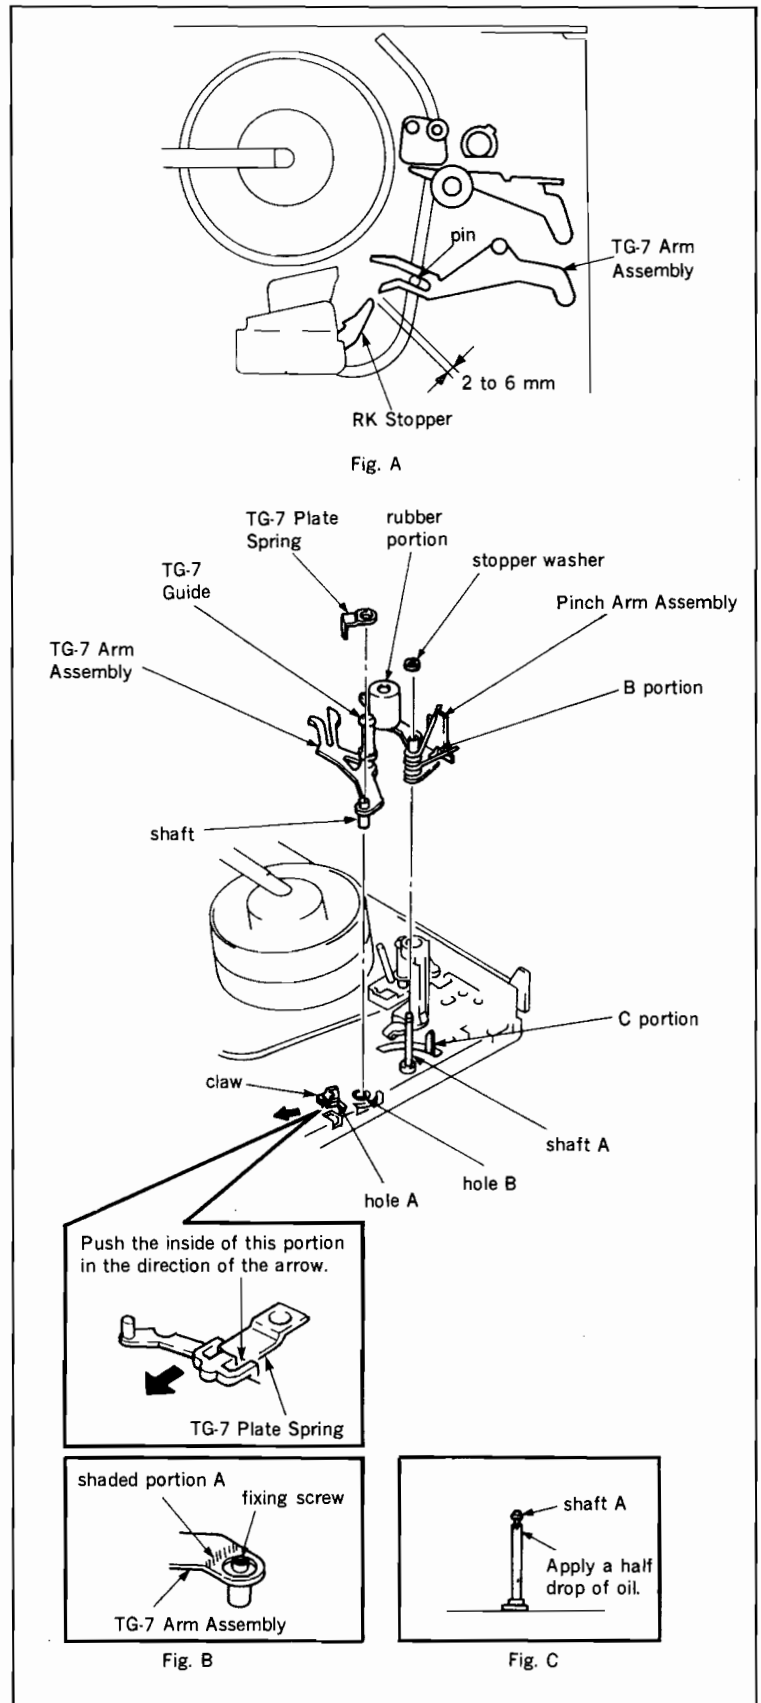

3-9. REPLACEMENT OF TG-2 ASSEMBLY


Removal :

- (1) Remove the Cassette Lid and Side Panel (Left) Assembly referring to Section 1-1.
- (2) Turn the arrow portion counterclockwise and remove TG-2 Upper Flange.
- (3) Remove TG-2 Roller, TG-2 Sleeve and TG-2 Lower Flange and a compression spring.

Installation :

- (1) Install the compression spring, TG-2 Lower Flange, TG-2 Sleeve and TG-2 Roller to the shaft.
- (2) Turn the TG-2 Upper Flange about 4 to 6 turns and install it to the shaft. After installation, perform the TG-2 Upper Flange Height Preset.
 - Turn the TG-2 Upper Flange and adjust the height of TG-2 as shown in the figure.

Note : After replacement, perform the Tape Path Adjustment referring to Section 5.

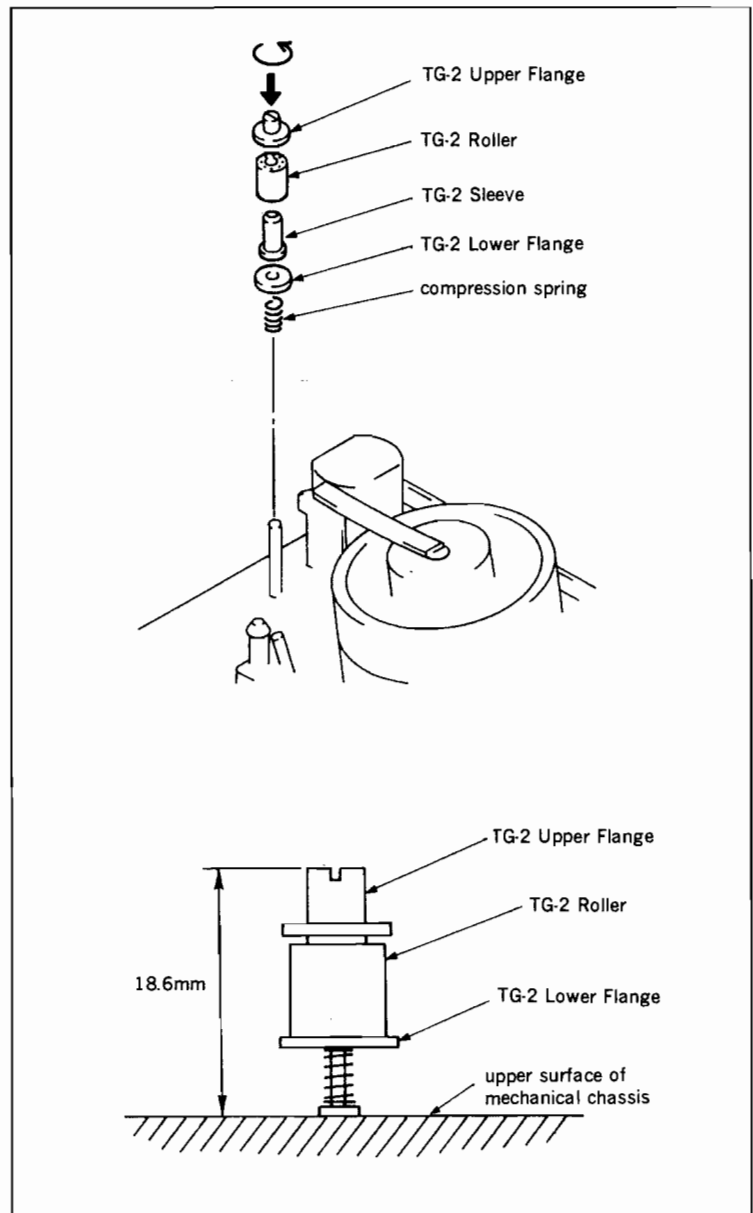

3-10. REPLACEMENT OF S REEL TABLE ASSEMBLY


Tool : Sony Oil
Cassette Tape
Torque Cassette

Removal :

- (1) Remove the S Brake referring to Section 3-4.
- (2) Remove the Tension Regulator Band Assembly referring to Section 3-12.
- (3) Remove S Reel Table Assembly.

Installation :

- (1) Apply a half drop of oil on the top of shaft A. (Fig. A)
- (2) Move RK Gear in the direction of the arrow F. Move UL Brake in the direction of the arrow G. Move LB Brake in the direction of the arrow H.
- (3) Install the S Reel Table Assembly to the shaft A.
- (4) Assemble the parts with removal steps (1) to (4) in reverse order.
- (5) Adjust the Tension Regulator FWD Portion referring to Section 3-13.
- (6) Perform the FWD Back Tension Adjustment referring to Section 4-1.

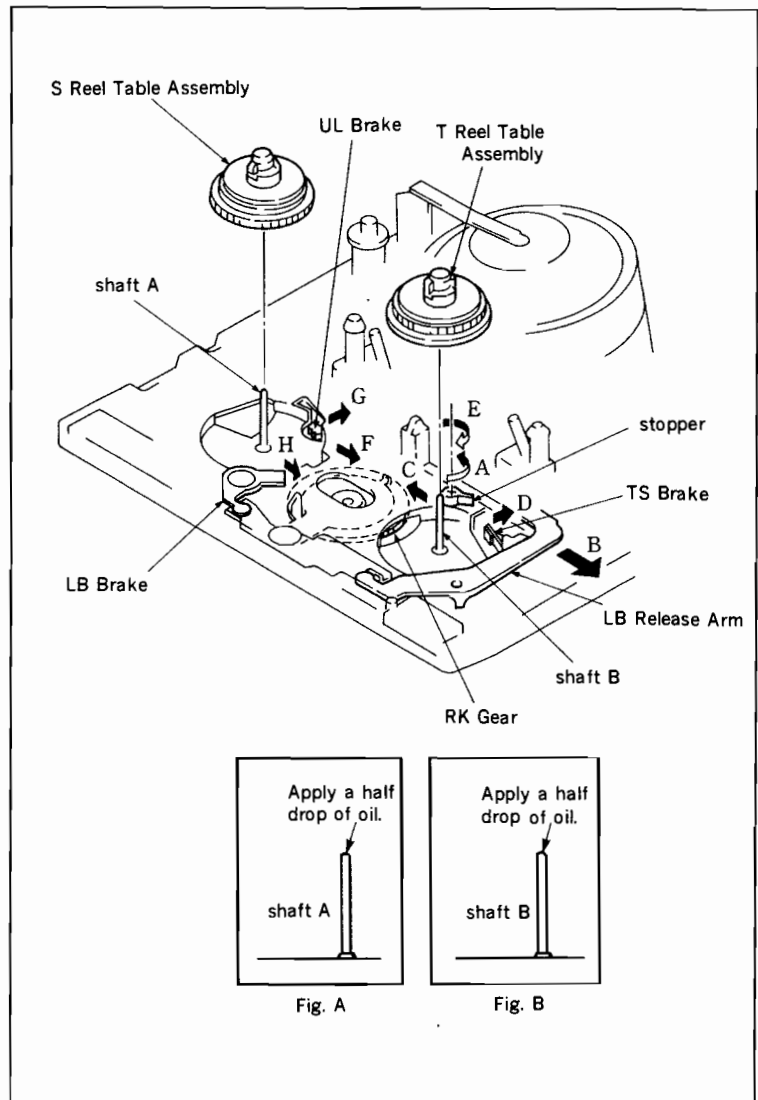

3-11. REPLACEMENT OF REEL TABLE ASSEMBLY

Tool : Sony Oil

Removal :

- (1) Remove the T Brake referring to Section 3-4.
- (2) Turn stopper about 90 degrees in the direction of the arrow A.
- (3) Move LB Release Arm in the direction of the arrow B and remove T Reel Table Assembly.

Installation :

- (1) Apply a half drop of oil on the top of shaft B. (Fig. B)
- (2) Move RK Gear in the direction of the arrow C. Move TS Brake in the direction of the arrow D.
- (3) Move LB Release Arm in the direction of the arrow B and install the T Reel Table Assembly

to the shaft B.

- (4) Turn the stopper in the direction of the arrow E as far as it will go.
- (5) Assemble the T Brake referring to Section 3-4.

3-12. REPLACEMENT OF TENSION REGULATOR BAND ASSEMBLY AND TENSION REGULATOR ARM ASSEMBLY


Tool : Sony Oil
Cassette Tape
Torque Cassette

Removal :

- (1) Remove the SS-50/50P Board referring to Section 1-2-3.
- (2) Remove the Cassette-up Compartment referring to Section 1-3.
- (3) Remove the TL Holder Plate referring to Section 4-5.
- (4) Remove a fixing screw.
- (5) Remove Tension Regulator Band Assembly from the shaft of Tension Regulator Arm Assembly with a thin flatblade screwdriver. Be careful not to damage the Tension Regulator Band and touch the felt portion of it.
- (6) Remove a tension spring.
- (7) Remove stopper washer from the back of mechanical chassis. Remove Tension Regulator Arm Assembly.
- (8) Release claw and remove Adjust Arm.

Installation :

- (1) Engage the Adjust Arm so that the claw can be locked as shown in figure A.
- (2) Apply a half drop of oil to the fixing hole of the Tension Regulator Arm Assembly.
- (3) Install Tension Regulator Arm Assembly so that the A portion is positioned in the side of arrow A from Switch Lever Assembly. (Fig. B)

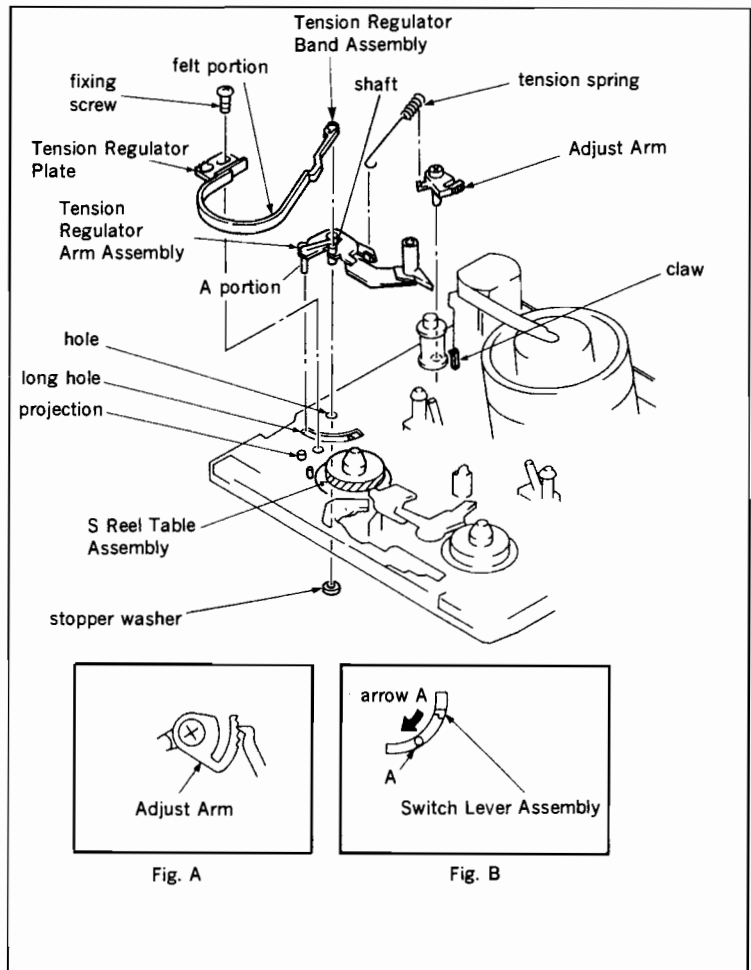



- (4) Hold the Tension Regulator Arm Assembly and install it with the stopper washer from the back of the mechanical chassis.
- (5) Hook the R hook side of the tension spring to the Adjust Arm as shown in the figure. Hook the opposite side of the tension spring to the Tension Regulator Arm Assembly.
- (6) Install the Tension Regulator Band Assembly to the shaft of the Tension Regulator Arm Assembly so that the felt portion goes along the shaded portion of S Reel Table Assembly. Be careful not to damage the Tension Regulator Band Assembly and touch the felt portion.
- (7) Install Tension Regulator Plate portion of the Tension Regulator Band Assembly to the projection of the mechanical chassis and thread the fixing screw but do not tighten.
- (8) Install the TL Holder Plate referring to Section 3-5.
- (9) Assemble the parts with removal steps (2) to (4) in reverse order.
- (10) Install the Mechanical Deck Block.
- (11) Adjust the Tension Regulator FWD Position referring to Section 3-13.
- (12) Perform the FWD Back Tension Adjustment referring to Section 4-1.


3-13. TENSION REGULATOR FWD POSITION PRESET

Tool : Cassette Tape

Removal :

- (1) Remove the Cassette Lid and Side Panel (Left) Assembly referring to Section 1-1.
- (2) Insert a cassette tape and put the unit into the **PLAY** mode.
- (3) Check that the clearance between A portion of the Tension Regulator Arm Assembly and groove of the chassis is 1.1 ± 0.3 mm. When it is out of the specification, eject the cassette tape and perform the following adjustments.
- (4) Loosen the fixing screw of the Tension Regulator Band Assembly.
- (5) If the clearance more than the specification, move the Tension Regulator Plate in the direction of the arrow A and tighten the fixing screw. If the space is less than the specification, move the Tension Regulator Plate in the direction of the arrow B and tighten the fixing screw.
- (6) Perform steps (2) and (3) again and check that the clearance meets the required specification.

Note : Use a cassette tape which has been advanced half way through minutes.

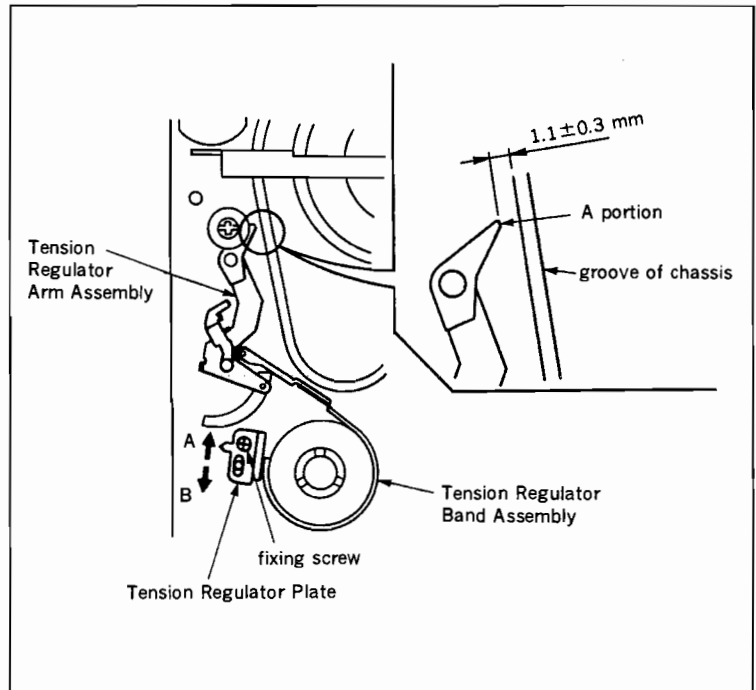


3-14. REPLACEMENT OF DRUM ASSEMBLY AND CONDENSATION SENSOR

Removal :

- (1) After putting the unit into the **EJECT** mode, pull out the Mechanical Deck Block referring to Section 1-2.
- (2) Remove the SS-50/50P Board from the unit referring to Section 1-2-3.
- (3) Remove the Cassette-up Compartment referring to Section 1-3.
- (4) Remove the HC Roller Assembly referring to Section 3-1.
- (5) Remove the Guide Guard Assembly referring to Section 3-2.
- (6) Remove a fixing screw and remove Shaft Ground Terminal.
- (7) Remove the three fixing screws of drum base and remove Drum Assembly with the drum base from the mechanical chassis.
- (8) Remove three fixing screws and remove Drum Assembly from the drum base.
- (9) Disconnect connector of Condensation Sensor from the Loading Motor.
- (10) Remove a fixing screw and remove the Condensation Sensor.

Note : Be careful not to touch the head chip.

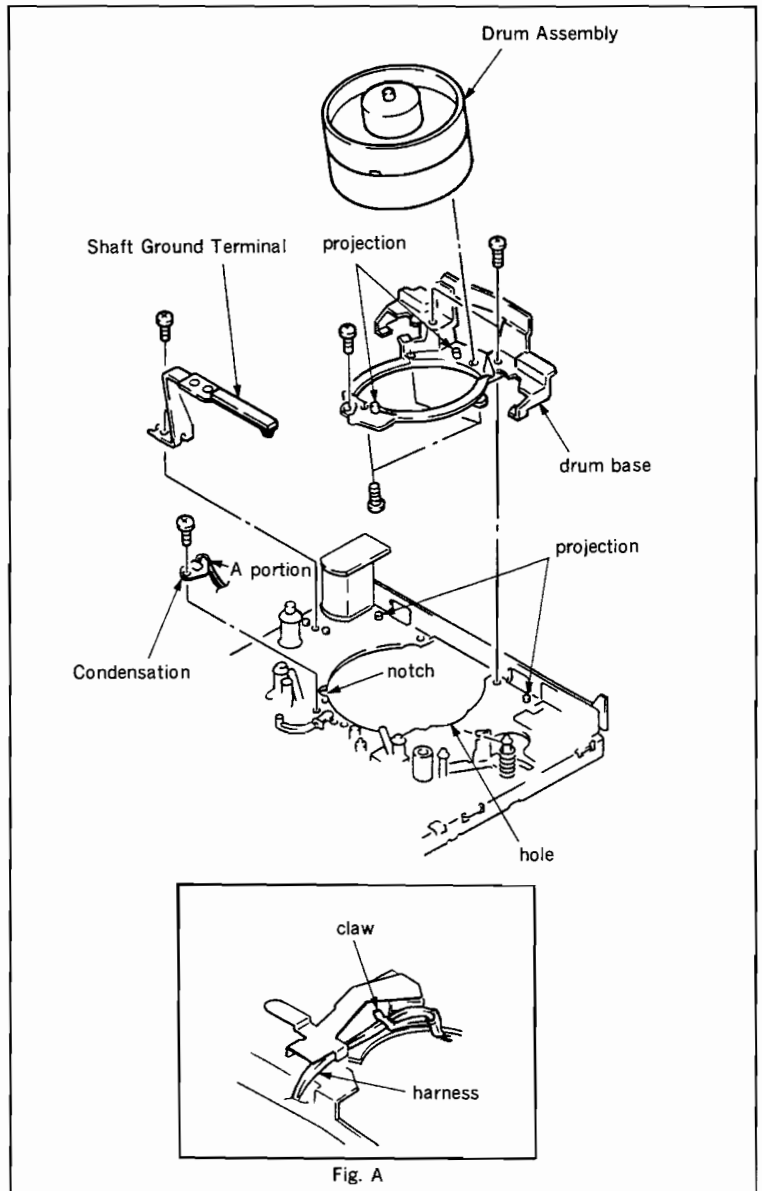

Installation :

- (1) Put the A portion of the Condensation Sensor into the notch of the mechanical chassis and tighten the fixing screw.
- (2) Connect the connector of the Condensation Sensor to the Loading Motor.
- (3) Pinch the harness of the Condensation Sensor to the Plate SS Assembly's claw of the back of mechanical chassis. (Fig. A)
- (4) Put the Drum Assembly to the two projection of the drum base and tighten three fixing screws.
- (5) Put the drum base to the two projections of the mechanical chassis and tighten three fixing screws.
- (6) Put the Shaft Ground Terminal to the two projections of the mechanical chassis and tighten the fixing screw.
- (7) Install the parts with removal steps (2) to (5) in reverse order.

Note : Be careful not to cut the harness. Be careful not to touch the head chip.

Note : After replacement, perform the Tape Path Adjustment referring to Section 5.

3-15. REPLACEMENT OF ROTARY UPPER DRUM, AND LOWER DRUM

Tool : Rotary Drum Tool

(supplied accessory of Repair Rotary Upper Drum)

L-shaped wrench

(across flat has 1.5 mm)

Removal :

- (1) Remove the Drum Assembly referring to Section 3-14.
- (2) Remove two fixing screws A. (Fig. A)
- (3) Install tool A to the screw hole with two accessory supplied screws. Thread the accessory supplied hexagonal screws into the tool A, and Rotary Upper Drum will move up and can be removed. (Fig. B)

Installation :

- (1) Clean the flange surface and contact surface of the new Rotary Upper Drum. Check that no dust and flaw are left over.
- (2) While adjusting the position of Rotary Upper Drum and positioning hole with tool B, insert the Rotary Upper Drum lightly.

Note : At this time, check that the terminals project out from the PC Board of the Rotary Upper Drum. When the terminals are caught, correct them with a pair of tweezers, etc.. (Fig. C)

- (3) Remove tool B and lightly push down the Rotary Upper Drum by hand. If it does not down to the bottom, thread two fixing screws A to the Rotary Upper Drum alternately but do not tighten.
- (4) Insert tool B into the positioning hole and check that it can be inserted smoothly again. If tool B cannot be inserted, loosen two fixing screws A and adjust the position of the Rotary Upper Drum by precision screwdriver etc..
- (5) Tighten two fixing screws A.

Note : After replacement, perform the Tape Path Adjustment referring to Section 5.

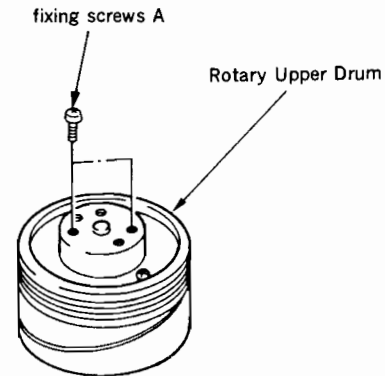


Fig. A

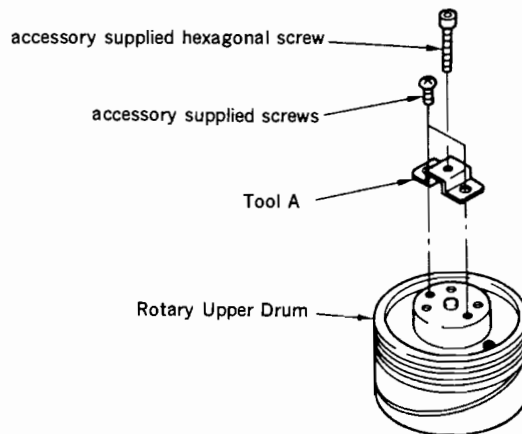


Fig. B

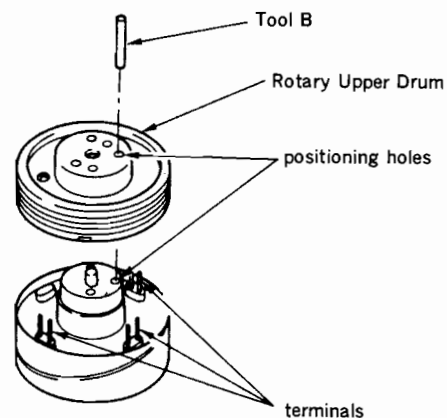


Fig. C

3-16. REPLACEMENT OF EJECT LEVER, SWITCH LEVER ASSEMBLY AND PINCH SUB ARM ASSEMBLY


Tool : Mode Selector
Sony Grease
Sony Oil

Removal :

- (1) Remove the Capstan Motor referring to Section 3-3.
- (2) Put the unit into the **STOP** mode.
- (3) Release claw A and remove Eject Lever.
- (4) Remove stopper washer A and remove Switch Lever Assembly.
- (5) Remove Pinch Load Spring.
- (6) Remove stopper washer B and remove Pinch Sub Arm Assembly.

Installation :

- (1) Smear a grease to shaft A. (Fig. A)
- (2) While putting the A portion of the Pinch Sub Arm Assembly into the longitudinal hole, put the pin into the notch of the Loading Lever Assembly.
- (3) Fasten stopper washer B.
- (4) Hook the B portion of the Pinch Load Spring between claw B and chassis. Hook the C portion of the Pinch Load Spring to the claw B, and install it.
- (5) Apply a half drop of oil to shaft B. (Fig. B)
- (6) Put the groove of the Switch Lever Assembly to the projection of the Mode Detector Switch and assemble the Switch Lever Assembly to shaft B. Put the pin of the Switch Lever Assembly into the outer groove of Drive Gear (left) Assembly. If the Tension Regulator Arm Assembly is installed, move the pin of the Tension Regulator Arm Assembly in the direction of the arrow A.
- (7) Fasten the stopper washer A.
- (8) Install the Eject Lever and lock claw A.
- (9) After putting the unit into the **ULD** mode, install the Capstan Motor referring to Section 3-3.

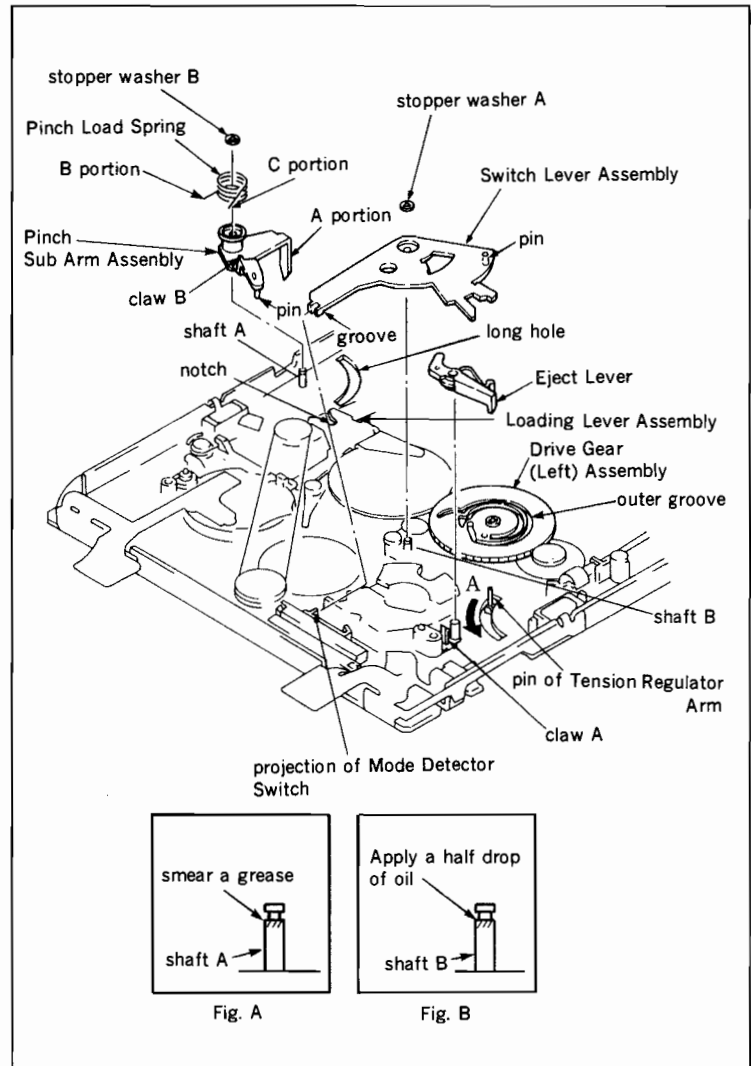

3-17. REPLACEMENT OF TIMING BELT (L), RC GEAR ASSEMBLY, LOADING LEVER ASSEMBLY, TIMING BELT (S) AND CONNECTING GEAR ASSEMBLY

Tool : Mode Selector

Sony Oil


Sony Grease

Removal :

- (1) Remove the Capstan Motor referring to Section 3-3.
- (2) Remove the Pinch Sub Arm Assembly referring to Section 3-16.
- (3) Put the unit into the **STOP** mode.
- (4) Remove stopper washer A. Remove RC Gear Assembly together with Timing Belt (L) from shaft A.
- (5) Remove the Timing Belt (L) from Idler Pulley Assembly.
- (6) Remove stopper washer B. While pushing LB Release Arm in the direction of arrow A, remove Loading Lever Assembly.
- (7) Turn the stopper about 90 degrees in the direction of the arrow B.
- (8) Remove Connecting Gear Assembly together with Timing Belt (S) from shaft B. Be careful not to touch the flange portion. (Fig. D)
- (9) Remove the Timing Belt (S) from the Idler Pulley Assembly.

Installation :

- (1) Apply a half drop of oil shaft B. (Fig. F)
- (2) Hook the Timing Belt (S) to the Connecting Gear Assembly and hook the opposite side of it to the gear of the Idler Pulley Assembly. (Fig. E)
- (3) Install the Connecting Gear Assembly to shaft B with the Timing Belt (S) hooked on.
- (4) Turn the stopper in the direction of arrow C as far as it will go.
- (5) Apply a half drop of oil on shaft C. (Fig. A)

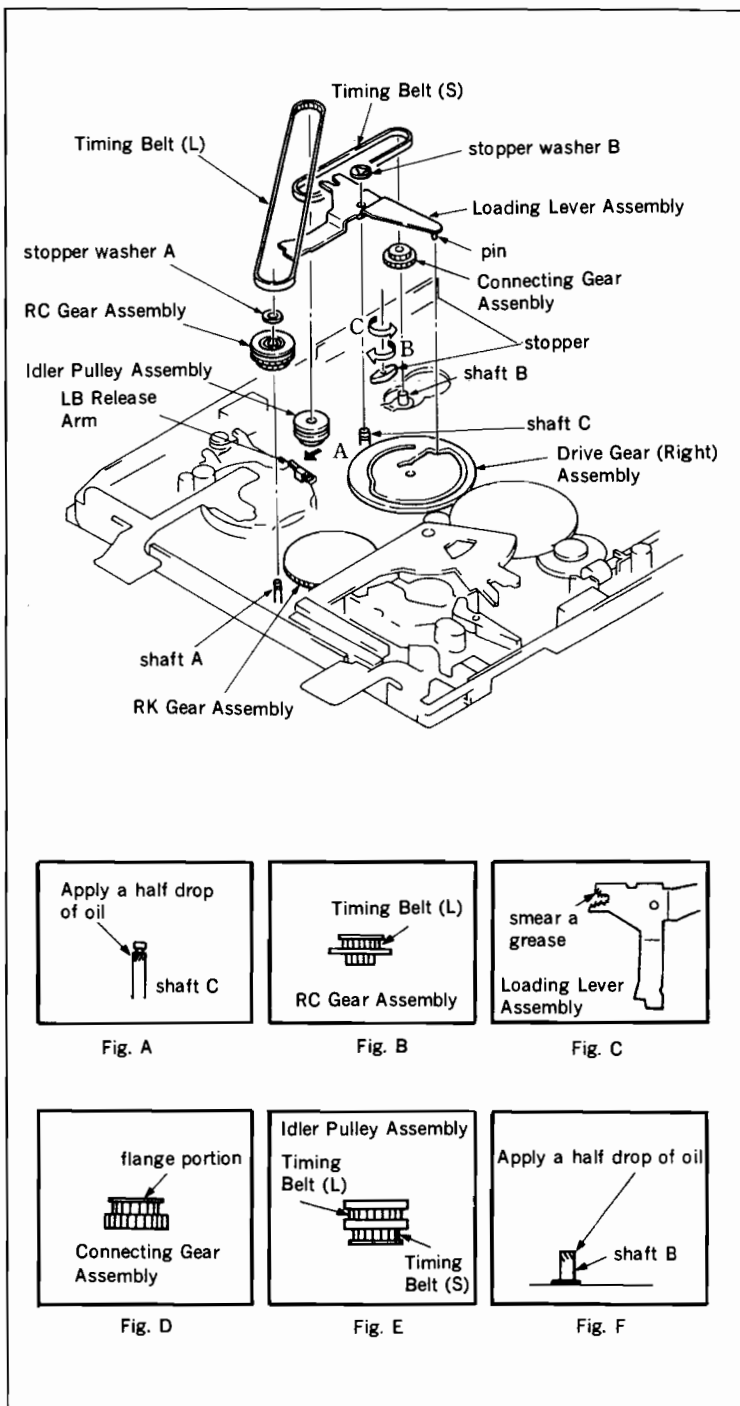

- (6) Move the LB Release Arm in the direction of arrow A and put the Loading Lever Assembly to shaft C. Put the pin of the Loading Lever Assembly into the groove of Drive Gear (Right) Assembly.
- (7) Fasten the stopper washer B.
- (8) Hook the Timing Belt (L) to the gear of the RC Gear Assembly as shown in figure B and hook the opposite side of it to the gear of the Idler Pulley Assembly. (Fig. E)
- (9) Install the RC Gear Assembly with the Timing Belt (L) on to shaft A. Engage the RC Gear Assembly with the gear of RK Gear Assembly.
- (10) Fasten the stopper washer A.
- (11) Smear a grease to the Loading Lever Assembly as shown in fig. C.
- (12) Install the Pinch Sub Arm Assembly referring to Section 3-16.
- (13) After putting the unit into the ULD mode, install the Capstan Motor referring to Section 3-3.

3-18. REPLACEMENT OF IDLER PULLEY, TS BRAKE ASSEMBLY, LB GEAR ASSEMBLY AND RK GEAR ASSEMBLY


Tool: Mode Selector
Sony Oil

Removal:

- (1) Remove the Capstan Motor referring to Section 3-3.
- (2) Remove the Switch Lever Assembly referring to Section 3-16.
- (3) Remove the Timing Belt (L), RC Gear Assembly, Loading Lever Assembly, Timing Belt (S) and Connecting Gear Assembly referring to Section 3-17.
- (4) Remove stopper washer A and remove Idler Pulley. Be careful not to touch the flange portion of the Idler Pulley, (Fig. C)
- (5) Release the claw and remove TS Brake Assembly.
- (6) Remove torsion spring (LB).
- (7) Remove stopper washer B and remove LB Gear Assembly.
- (8) Remove RK Gear Assembly.

Installation:

- (1) Apply a half drop of oil to shaft A. (Fig. A)
- (2) Install the RK Gear Assembly horizontally to the shaft A.
- (3) Apply a half drop of oil to shaft B. (Fig. B)
- (4) Install the LB Gear Assembly to shaft B with stopper washer B.
- (5) Put torsion spring (LB) into shaft C. Hook it to the notch of the mechanical chassis and A portion of the LB Gear Assembly.
- (6) Install the TS Brake Assembly and lock the claw.
- (7) Apply a half drop of oil to shaft D. (Fig. D)
- (8) Install the Idler Pulley to shaft D. Fasten the stopper washer A.
- (9) Install the Timing Belt (L), RC Gear Assembly, Loading Lever Assembly, Timing Belt (S) and Connecting Gear Assembly referring to Section 3-17.
- (10) Install the Switch Lever Assembly referring to 3-16.
- (11) After putting the unit into the **ULD** mode, install the Capstan Motor referring to Section 3-3.

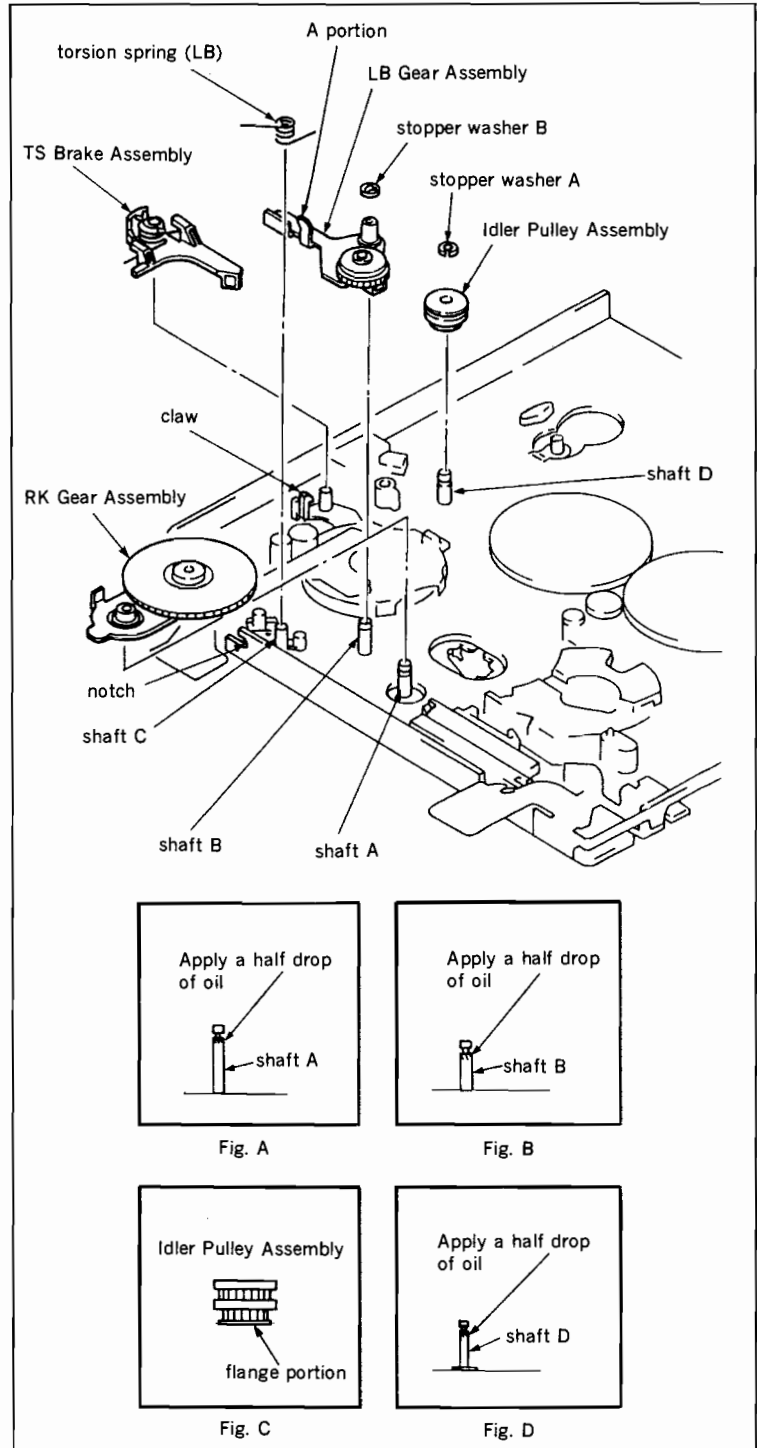

3-19. REPLACEMENT OF UL GEAR, UL BRAKE, UL ARM AND LB LEAF SPRING


Tool : Sony Oil

Removal :

- (1) Remove the Switch Lever Assembly referring to Section 3-16.
- (2) Remove stopper washer and remove UL Gear.
- (3) Remove UL Arm, 1.6 mm-diameter poly washer and LB Leaf Spring.
- (4) Remove UL Brake.

Installation :

- (1) Install the UL Brake.
- (2) Apply a half drop of oil to the shaft. (Fig. A)
- (3) Install the LB Leaf Spring to the shaft and fasten it with the 1.6 mm-diameter poly washer as shown in fig. B.
- (4) Install the UL Arm to the shaft so that the projection is put into the groove of the UL Brake.
- (5) Install the UL Gear to the shaft. Engage it with the gear of the Drive Gear (Left) Assembly.
- (6) Fasten the stopper washer.
- (7) Install the Switch Lever Assembly referring to Section 3-16.

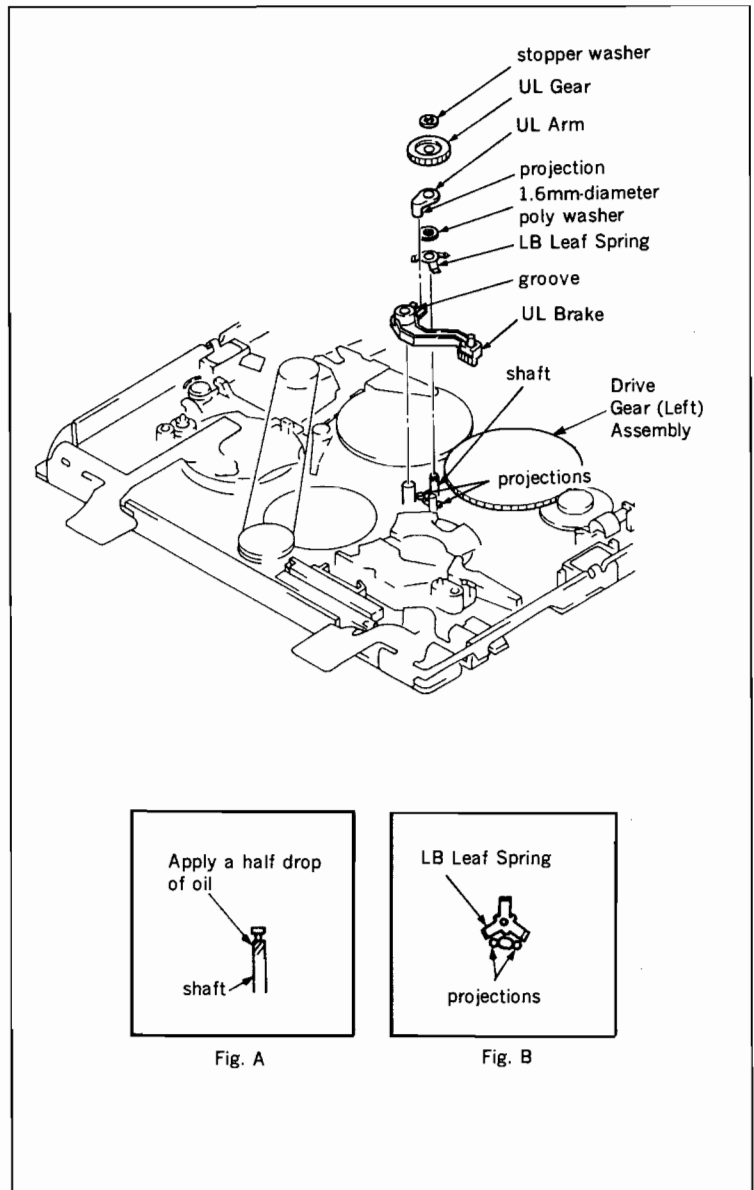

3-20. REPLACEMENT OF COASTER (RIGHT) ASSEMBLY AND DRIVE GEAR (RIGHT) ASSEMBLY

Tool : Mode Selector
Sony Oil
Sony Grease

Removal :

- (1) Remove the Capstan Motor referring to Section 3-3.
- (2) Remove the Drum Assembly referring to Section 3-14.
- (3) Remove the Switch Lever Assembly referring to Section 3-16.
- (4) Remove the Timing Belt (L), RC Gear Assembly and Loading Lever Assembly referring to Section 3-17.
- (5) Remove fixing screw A. Remove the Coaster Leaf Spring and Coaster (Right) Assembly.
- (6) Remove two fixing screws B and remove Reinforcement Plate TT.
- (7) Remove the stopper washer 1.5 and remove the Drive Gear (Right) Assembly.

Installation :

- (1) Smear a grease to the mechanical chassis as shown in fig. A.
- (2) Apply a half drop of oil to shaft A. (Fig. F)
- (3) Smear a grease to pin, shaft and projection of the Coaster (Right) Assembly. (Fig. D)
- (4) Install the pin and shaft of the Coaster (Right) Assembly to the longitudinal hole A of the mechanical chassis.
- (5) Move the Brake Release Arm in the direction of the arrow A.

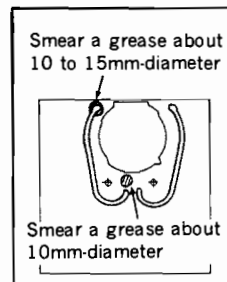
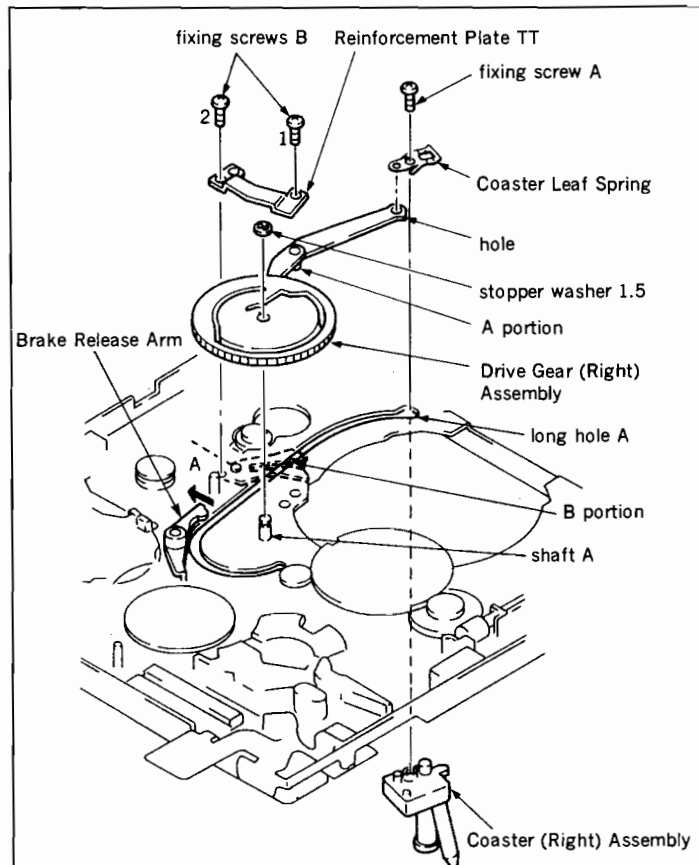


Fig. A

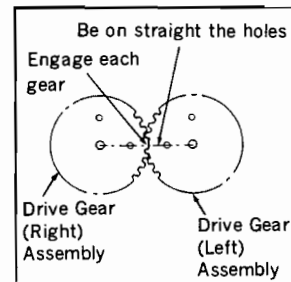


Fig. B

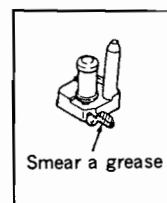


Fig. C

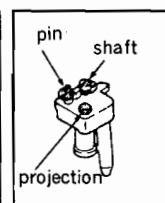


Fig. D

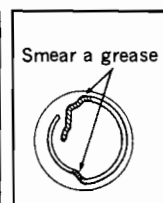


Fig. E

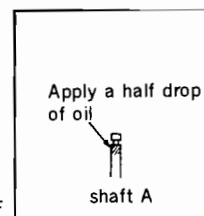


Fig. F

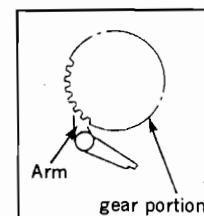


Fig. G

- (6) Put the A portion of the Drive Gear (Right) Assembly into the B portion and put the hole of it to the pin of the Coaster (Right) Assembly. Install the Drive Gear (Right) Assembly to shaft A. Engage it with Drive Gear (Left) Assembly as shown in fig. B. Check that the Brake Release Arm Assembly is under the gear portion of the Drive Gear Assembly. (Fig. G)
- (7) Fasten the stopper washer 1.5.
- (8) Put the Coaster Leaf Spring to the shaft and pin of the Coaster (Right) Assembly and install it with fixing screw A. At this time, the tightening torque of fixing screw A is about 0.05 N·m {500gf·cm}. If tightened too much, the Coaster (Right) Assembly and Coaster Leaf Spring will be damaged.
- (9) Install the Reinforcement Plate TT to the projection of chassis and tighten the two fixing screws B in order.
- (10) Smear a grease as shown in figures C and F.
- (11) Install the Timing Belt (L), RC Gear Assembly and Loading Lever Assembly referring to Section 3-17.
- (12) Install the Switch Lever Assembly referring to Section 3-16.
- (13) After putting the unit into the ULD mode, install the Drum Assembly referring to Section 3-14.
- (14) Install the Capstan Motor referring to Section 3-3.

Note : After replacement, perform the Tape Path Adjustment referring to Section 5.

3-21. REPLACEMENT OF COASTER (LEFT) ASSEMBLY AND DRIVE GEAR (LEFT) ASSEMBLY

Tool : Mode Selector
Sony Oil
Sony Grease

Removal :


- (1) Remove the Capstan Motor referring to Section 3-3.
- (2) Remove the Drum Assembly referring to Section 3-14.
- (3) Remove the Switch Lever Assembly and Pinch Sub Arm Assembly referring to Section 3-16.
- (4) Remove the Timing Belt (L), RC Gear Assembly and Loading Lever Assembly referring to Section 3-17.
- (5) Remove the Coaster (Right) Assembly and Drive Gear (Right) Assembly referring to 3-20.
- (6) Remove two fixing screws and remove Reinforcement Plate SS Assembly.
- (7) Remove a fixing screw. Remove Coaster Leaf Spring and Coaster (Left) Assembly.
- (8) Remove stopper washer 1.5 and remove Drive Gear (Left) Assembly.

Installation :

- (1) Smear a grease to the mechanical chassis as shown in fig. A.
- (2) Apply a half drop of oil to the shaft. (Fig. E)
- (3) Smear a grease to the pin, shaft and projection of the Coaster (Left) Assembly. (Fig. B)
- (4) Install the pin and shaft of the Coaster (Left) Assembly to the longitudinal hole of the mechanical chassis.
- (5) Put the Drive Gear (Left) Assembly into the shaft and put the A portion into longitudinal hole. Install the gear portion so that the gear portion is engaged with Wheel Gear and UL Gear.

- (6) Put the hole of the Drive Gear (Left) Assembly to the pin of the Coaster (Left) Assembly.
- (7) Fasten the stopper washer 1.5.
- (8) Put the Coaster Leaf Spring to the shaft and pin of the Coaster (Left) Assembly and install it with fixing screw. At this time, the tightening torque of the fixing screw is about $0.05 \text{ N}\cdot\text{m}$ $\{500\text{gf}\cdot\text{cm}\}$. If tightened too much, the Coaster (Left) Assembly and Coaster Leaf Spring will be damaged.
- (9) Put the Reinforcement Plate SS Assembly to the projection of chassis and tighten the two fixing screws in order.
- (10) Smear a grease as shown in figures C and D.
- (11) Install the Coaster (Right) Assembly and Drive Gear (Right) Assembly referring to Section 3-20.
- (12) Install the Timing Belt (L), RC Gear Assembly and Loading Lever Assembly referring to Section 3-17.
- (13) Install the Switch Lever Assembly and Pinch Sub Arm Assembly referring to Section 3-16.
- (14) After putting the unit into the **ULD** mode, install the Drum Assembly referring to Section 3-14.
- (15) Install the Capstan Motor referring to Section 3-3.

Note: After replacement, perform the Tape Path Adjustment referring to Section 5.

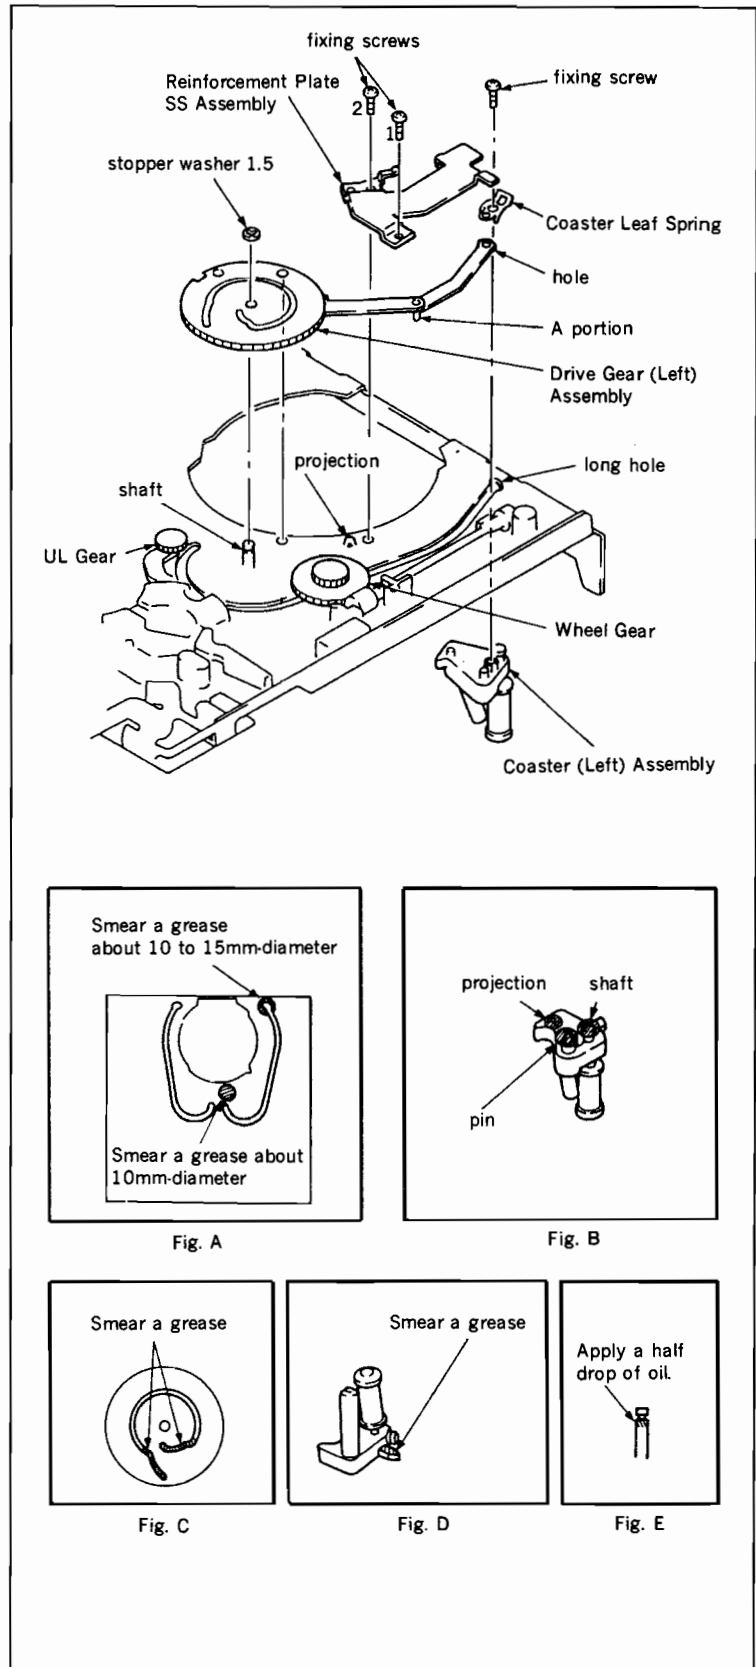

3-22. REPLACEMENT OF LOADING MOTOR, BRAKE RELEASE ARM, WHEEL GEAR AND WORM ASSEMBLY


Tool : Mode Selector
Sony Oil
Sony Grease

Removal :

- (1) Remove the Capstan Motor referring to Section 3-3.
- (2) Remove the Switch Lever Assembly and Pinch Sub Arm Assembly referring to Section 3-16.
- (3) Remove the Timing Belt (L), RC Gear Assembly and Loading Lever Assembly referring to Section 3-17.
- (4) Remove the Drive Gear (Right) Assembly referring to Section 3-20.
- (5) Remove the Drive Gear (Left) Assembly referring to Section 3-21.
- (6) Remove two fixing screws and remove Loading Motor Assembly.
- (7) Remove Brake Release Arm.
- (8) Remove stopper washer and remove Wheel Gear.
- (9) Remove Worm Assembly from six claws.

Installation :


- (1) Install the Worm Assembly to the six claws.
- (2) Smear a grease to the five shaded portions of the Worm Assembly. (Fig. A)
- (3) Apply a half drop of oil to the shaft. (Fig. B)
- (4) Put the Wheel Gear to the shaft. Engage it with the gear of the Worm Assembly.
- (5) Install the Brake Release Arm.
- (6) Smear a grease to the whole gear portion of the Loading Motor Assembly.
- (7) Install the Loading Motor Assembly to the mechanical chassis with the two fixing screws.
- (8) Install the Drive Gear (Left) Assembly referring to Section 3-21.
- (9) Install the Drive Gear (Right) Assembly referring to Section 3-20.
- (10) Install the Timing Belt (L), RC Gear Assembly and Loading Lever Assembly referring to Section 3-17.
- (11) Install the Switch Lever Assembly and Pinch Sub Arm Assembly referring to Section 3-16.
- (12) After putting the unit into the **ULD** mode, install the Capstan Motor referring to Section 3-3.

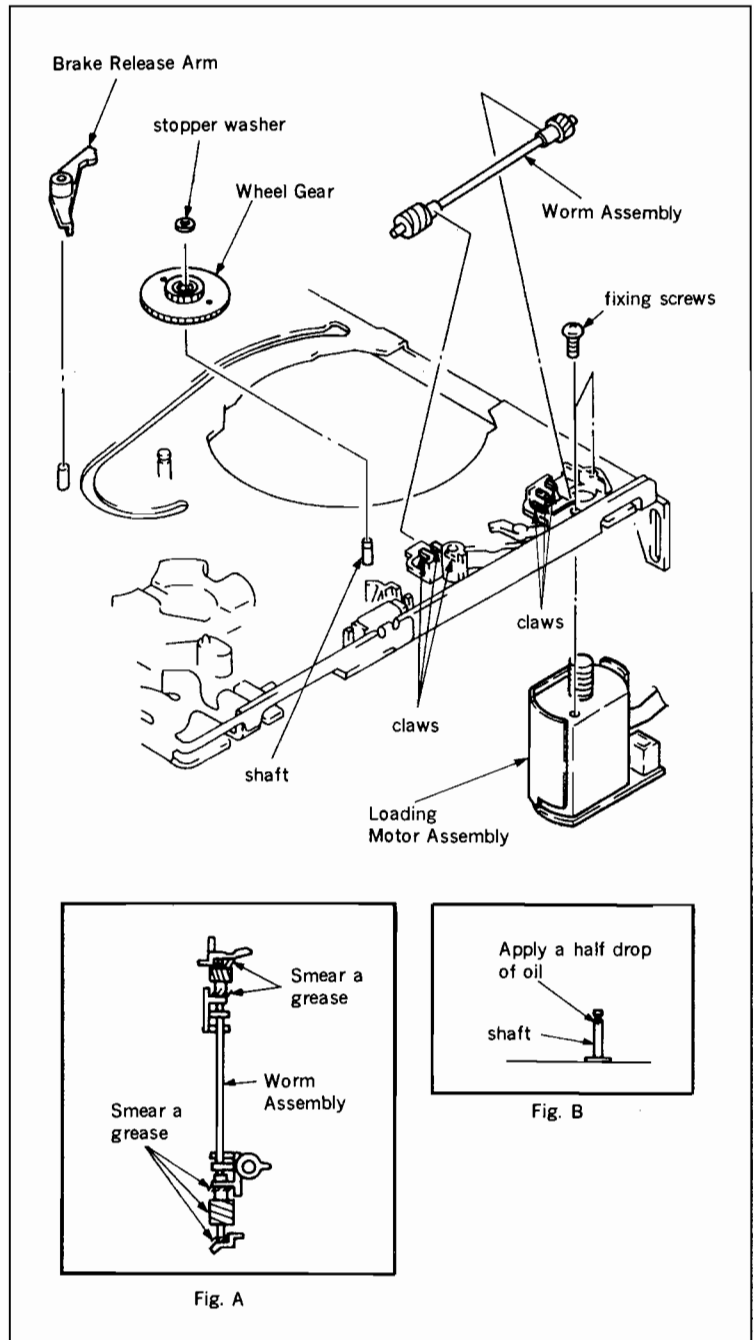

3-23. REPLACEMENT OF CCD UNIT

3-23-1. Replacement of CCD Unit


- (1) Remove the Side Panel (Left) Assembly referring to Section 1-1.
- (2) Disconnect the four connectors CN7, CN8, CN9 and CN21 on the MB-384/384P board.

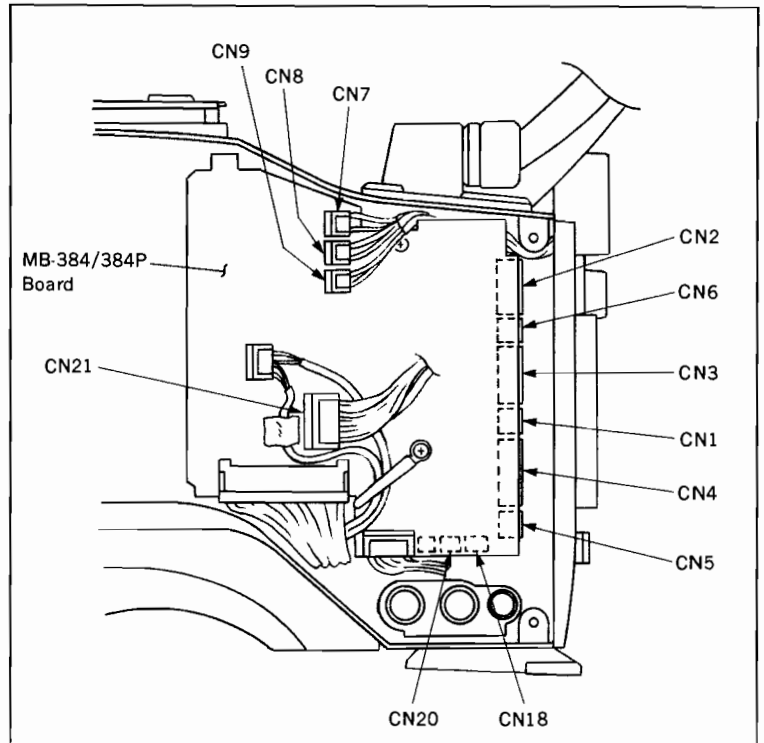

- (3) Remove the four screws and pull out the CCD unit slowly.
- (4) Disconnect the eight connectors CN1, CN2, CN3, CN4, CN5, CN6, CN18 and CN20 on the MB-384/384P board.


Note: When handling the CCD unit, pay attention not to stress any of PA boards.

- (5) Install the CCD unit in the reverse order of removal.

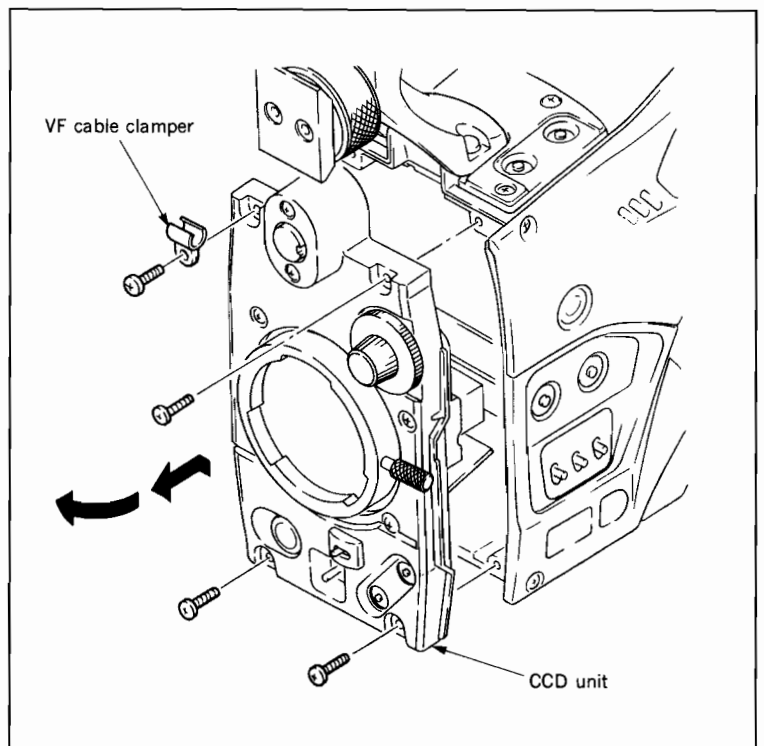


3-23-2. Replacement of LENS Connector

- (1) Pull out the CCD unit referring to Section 3-23-1, steps 1 to 3.
- (2) Disconnect the connector CN20 on the MB-384/384P board.

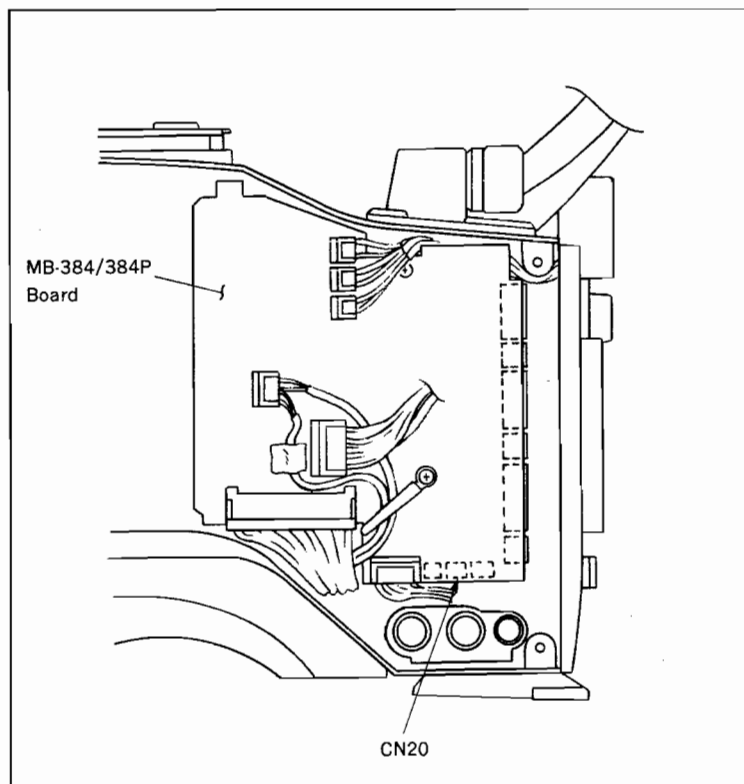

- (3) Remove the two screws and pull out the LENS connector.
- (4) After replacing the LENS connector with a new one, assemble the unit in the reverse order of removal.

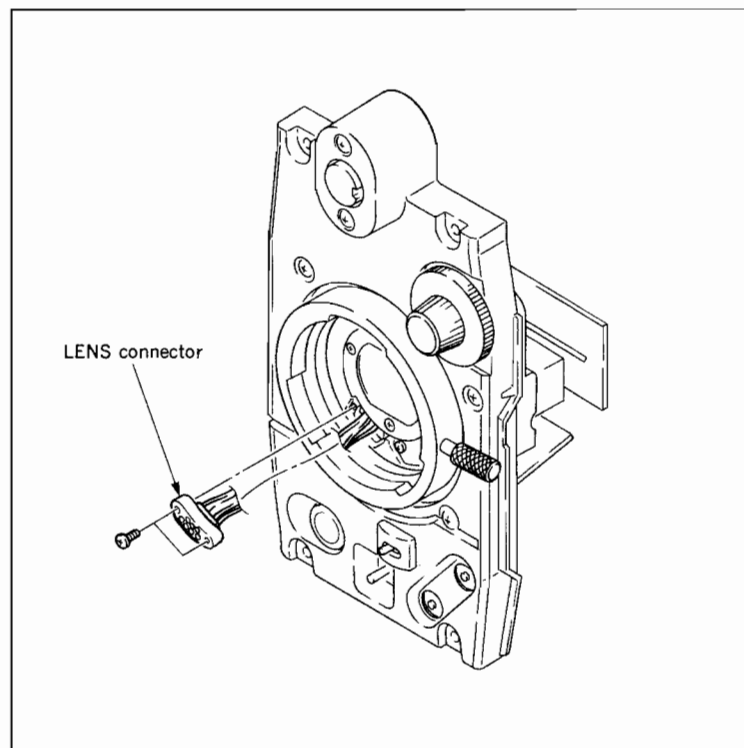


SECTION 4

TORQUE AND BACK TENSION ADJUSTMENT

4-1. FWD BACK TENSION ADJUSTMENT

- (1) Insert a torque cassette to the unit.
- (2) Put the unit into the PLAY mode. Check that the torque reading of S Reel Table meets required specification.
Spec. 0.9×10^{-3} to 1.3×10^{-3} N·m
{9 to 13 gf·cm}
- (3) If the torque reading do not meet the required specification, adjust the Adjust Arm.

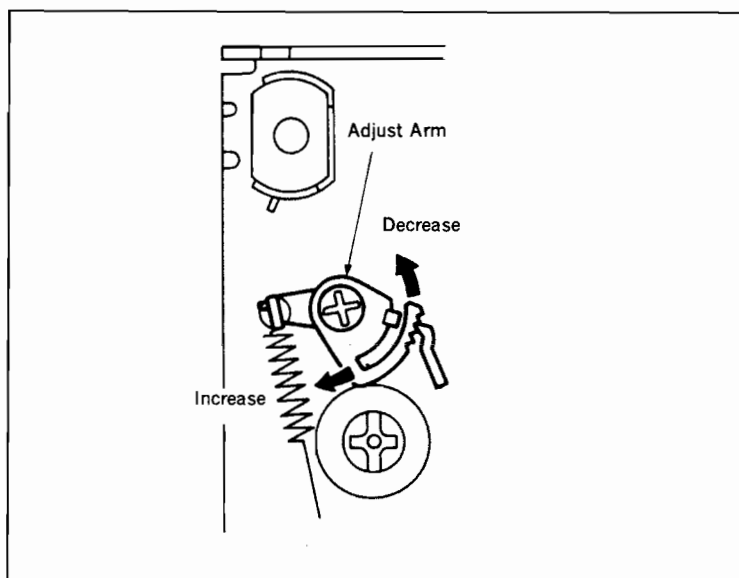

4-2. CHECK OF REEL TORQUE

• Setting of REV mode

Press PLAY button and then, press REW button continuously.

- (1) Insert a torque cassette to the unit.
- (2) Put the unit into the PLAY mode and check that the torque reading of T Reel Table meets required specification.
Spec. 0.7×10^{-3} to 1.5×10^{-3} N·m
{7 to 15 gf·cm}
- (3) Put the unit into the REV mode and check that the torque reading of the S Reel Table meets required specification.
Spec. 2.3×10^{-3} to 3.5×10^{-3} N·m
{23 to 35 gf·cm}
- (4) Put the unit into the REV mode and check that the torque reading of the T Reel Table meets required specification.
Spec. 1.3×10^{-3} to 2.5×10^{-3} N·m
{13 to 25 gf·cm}
- (5) If the readings do not meet the required specifications, replace each Reel Table.

SECTION 5


TAPE PATH ADJUSTMENT

Alignment Information

[Track Shift]

8mm Video System employs a high precision tracking ATF (Automatic Track Finding) System which instantaneously controls tape running speed with four kinds of pilot signals. In this way, Tracking Adjustment Knob is unnecessary and it is possible to trace with accuracy. On the other hand, the adjustment of Tape Path System was difficult in the ATF System. It was impossible to adjust perfectly because the ATF System is automatically corrected even when it small miss-tracking occurs. When perform Tracking Fine Adjustment, put into the Track Shift mode. The Track Shift mode can forcibly operate the ATF System and can shift the constant tracking amount about one-fifth. Therefore, the Tracking Fine Adjustment can perform easily. Track Shift Tool is not required.

Setting Procedures of Track Shift Mode

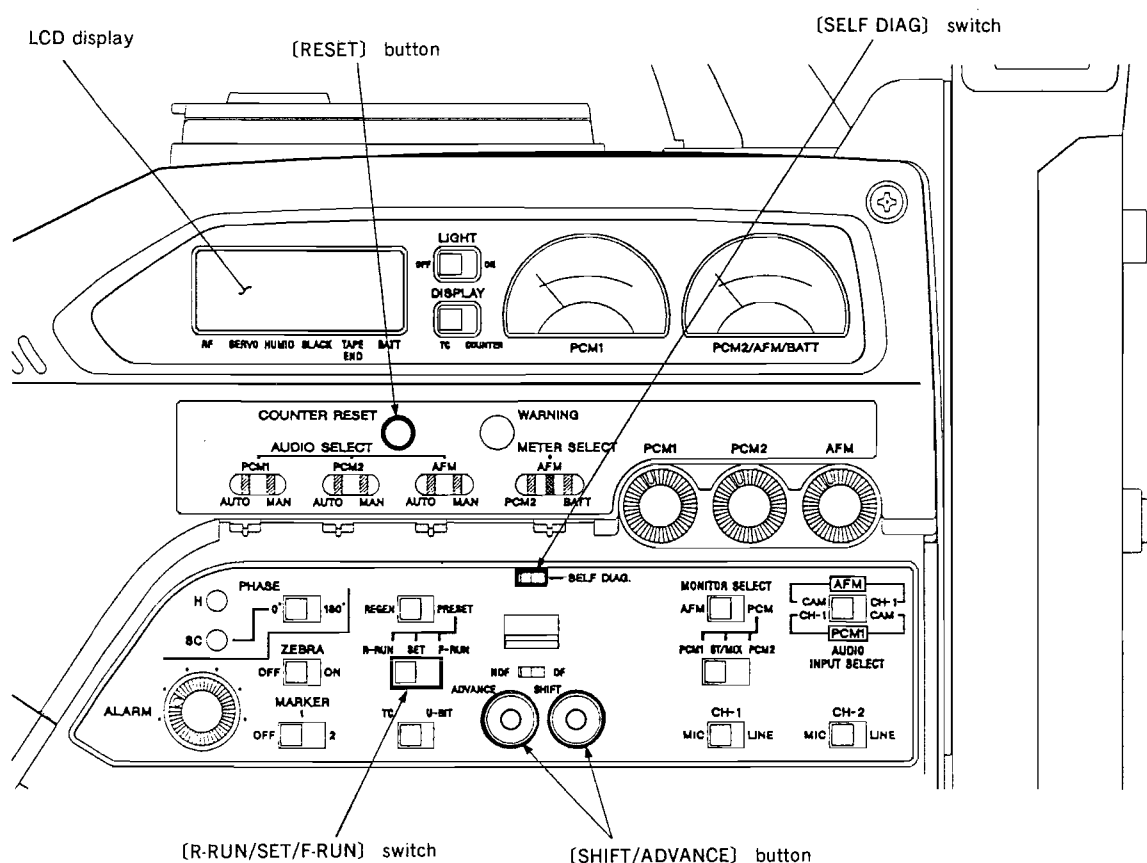

1. Turn on the [SELF DIAG] switch on the operation panel of the Side Panel.
2. Set the [R-RUN/SET/F-RUN] switch to [SET] position.
3. Select the menu [105] with the [SHIFT] or [ADVANCE] button.

105 00

(LCD display)

4. Set the [R-RUN/SET/F-RUN] switch to [R-RUN] position.
5. Select the data [11] by pressing the [SHIFT] button once.

105 11

(LCD display)

6. Press the [RESET] button to set data.


After the TRACKING FINE ADJUSTMENT is completed, be sure to reset the mode as follows.

1. Turn off the [SELF DIAG] switch.
2. Turn off the power momentarily.

[Tape Guide Adjustment]

There are four Adjustment Guides as TG-2, 3, 6, and 7 Guides. If you want to adjust each guide, turn the Adjustment Screw as follows.

Guide	Adjustment Screw	Guide Adjustment
TG-2, 3, 6	Counter-clockwise	UP
	Clockwise	Down
TG-7	Counter-clockwise	Down
	Clockwise	Up

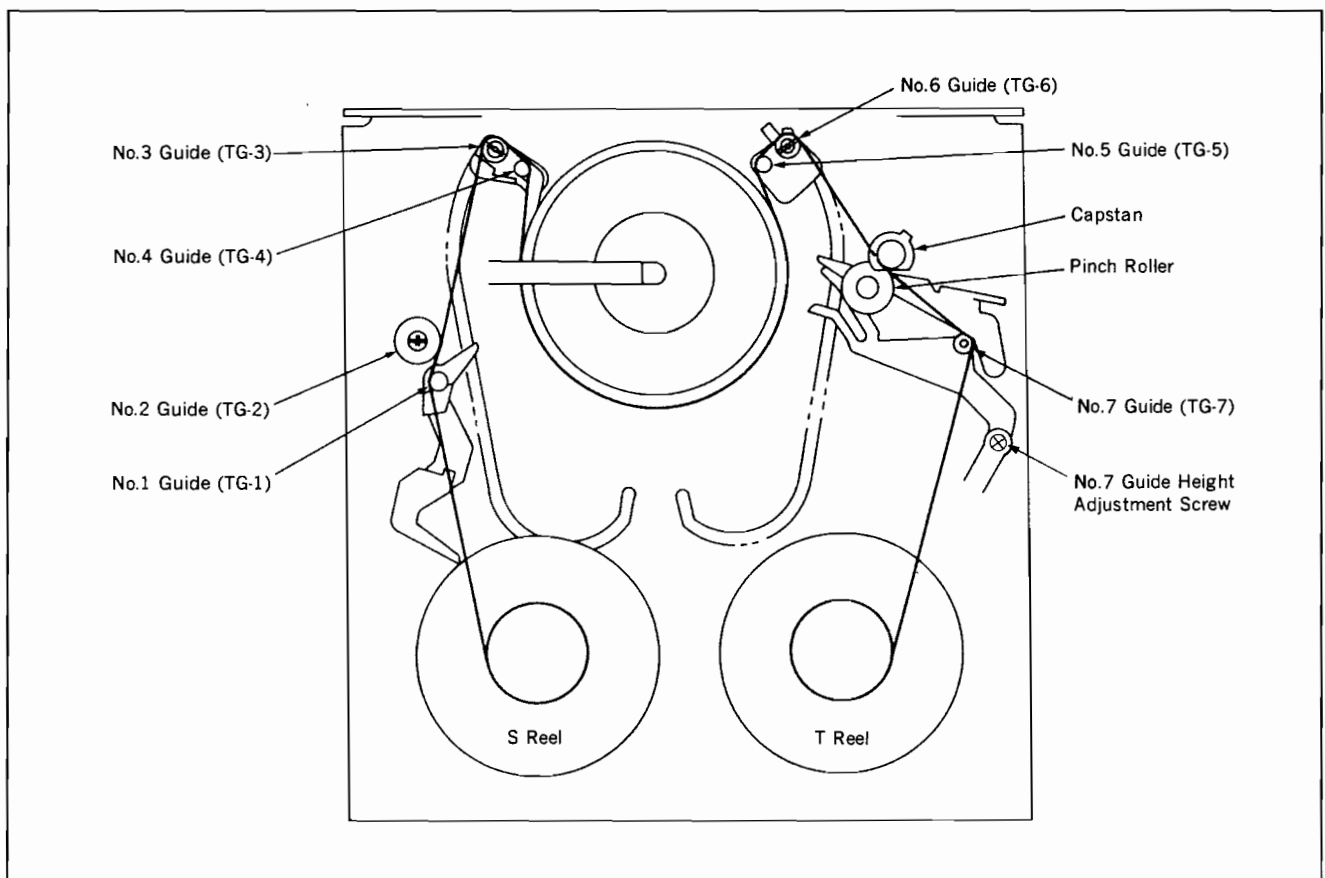

5-1. PREPARATION FOR ADJUSTMENT

Tool : Oscilloscope

Tracking Adjustment Tool JH-541


Alignment tape for tracking

(WR5-1NP for EVW-300)

(WR5-1CP for EVW-300P)

Adjustment procedure :

- (1) Clean tape path surfaces as Tape Guides, Drum, Capstan Shaft and Pinch Roller.
- (2) Connect the tracking adjustment tool JH-541 to CN24 on the MB-384/384P board. Connect the oscilloscope as follows.
CH-1 : TP4/JH-541
CH-2 : TP5/JH-541
TRIG : TP6/JH-541
- (3) Play back the alignment tape.
- (4) Check that the RF waveform of both entrance and exit sides are flat. (Fig. A)
If there is the level difference between the PCM and video signals, adjust the PCM/RF RATIO control of the tracking adjustment tool JH-541.
- (5) Set the Track Shift mode.
- (6) Check that the form and fluctuation of the RF waveform meet the specification 1. (Fig. B)
- (7) If do not meet the specifications at step (4) and (6), adjust as follows.

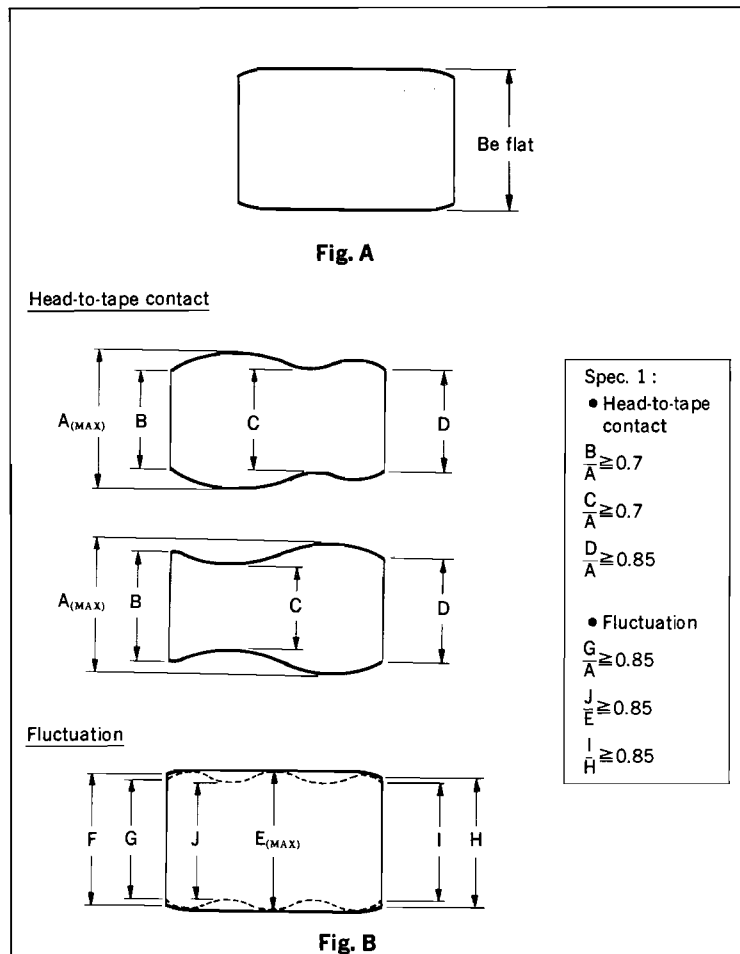

5-2. TRACKING ADJUSTMENT

Tool: Oscilloscope

Alignment tape for tracking


(WR5-1NP for EVW-300)

(WR5-1CP for EVW-300P)

Adjustment procedure:

- (1) Pull out the Mechanical Deck Block.
- (2) Play back the alignment tape.
- (3) Put a precision screwdriver into hole A and loosen locking screw A a little. Turn No. 3 Guide (TG-3) and flatten the waveform of entrance side.
- (4) Put a precision screwdriver into hole B and loosen locking screw B a little. Turn No. 6 Guide (TG-6) and flatten the waveform of exit side.

Note: Be careful not to turn the locking screws so much or the guides will move easily.

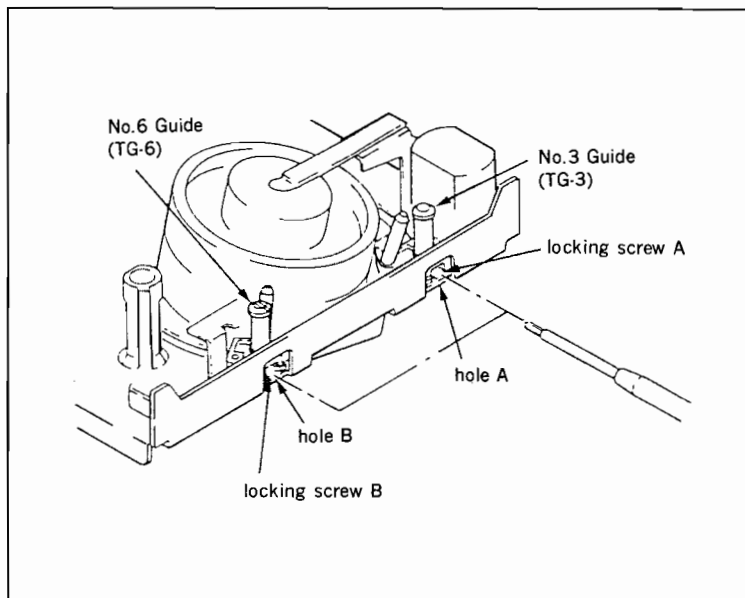

5-3. TRACKING FINE ADJUSTMENT

Tool: Oscilloscope

Alignment tape for tracking

(WR5-1NP for EVW-300)


(WR5-1CP for EVW-300P)

Cassette tape (E6-120ME for EVW-300)

(E5-90HME for EVW-300P)

Adjustment procedure:

- (1) Set the Track Shift mode.
- (2) Play back the alignment tape.
- (3) Perform Tape Entrance Side Adjustment.
 - (i) Turn the No. 3 Guide so that the form and fluctuation of the RF waveform meet specification 1. (Fig. A)
 - (ii) Tighten locking screw A. Check that the waveform of entrance side does not change.

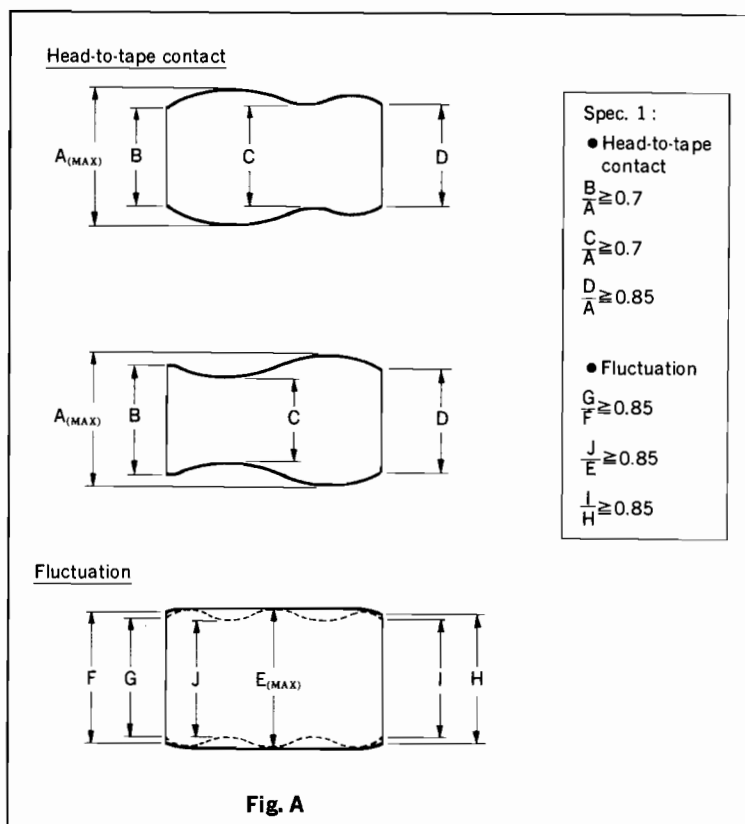

- (4) Perform Tape Exit Side Adjustment.
 (i) Turn the No. 6 Guide so that the form and fluctuation of the RF waveform meet specification 1. (Fig. A)

When the RF waveform of exit side is flat.

- (ii) Turn the No. 6 Guide clockwise a little and adjust the waveform as shown in fig. B.
 (iii) Tighten locking screw B. Check that the waveform of exit side does not change.
 (5) Perform Waveform Check of the Selfrecording and Play Back.
 (i) Eject the alignment tape.
 (ii) Perform the recording with no signal to the cassette tape which part is between tape top and tape middle.
 (iii) Check that the form and fluctuation of the RF waveform meet specification 2. (Fig. C)
 If do not meet the specification, perform steps (2) to (4) again.
 (6) After adjustment, perform Section 5-7. Check After Adjustment.



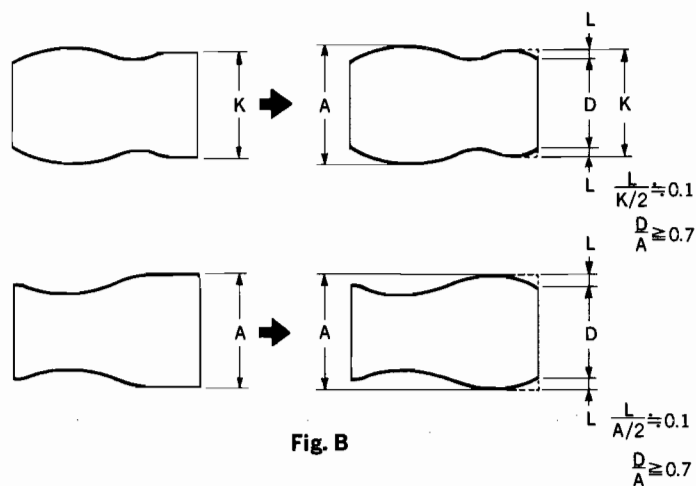


Fig. B

Head-to-tape contact

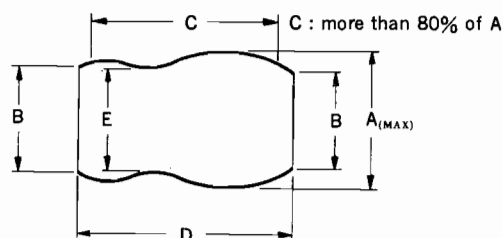

Fluctuation

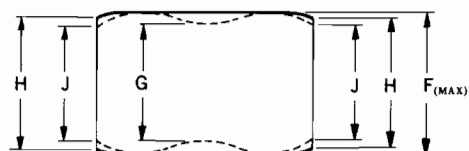

Spec. 2:

- Head-to-tape contact $\frac{B}{A} \geq 0.7$ $\frac{C}{D} \geq 0.8$ $\frac{E}{A} \geq 0.8$
- Fluctuation $\frac{G}{F} \geq 0.9$ $\frac{J}{H} \geq 0.9$


Fig. C

5-4. No. 2 GUIDE ADJUSTMENT

When turning or replacing No. 2 Guide, adjust after performing No. 2 Guide (TG-2) Height Preset.

5-4-1. No. 2 Guide (TG-2) Height Preset

- (1) Turn TG-2 Upper Flange and adjust the height of the TG-2 as shown in the figure.

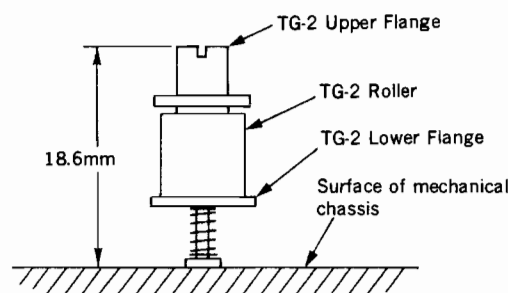

5-4-2, No. 2 Guide (TG-2) Adjustment

Tool : Oscilloscope

Alignment tape for tracking

(WR5-1NP for EVW-300)

(WR5-1CP for EVW-300P)

Cassette tape (E6-120ME for EVW-300)

(E5-90HME for EVW-300P)

Small adjustment mirror


Note : Setting of REV mode and CUE mode are as follows.

REV mode : While pressing PLAY button, press REW button. If removing a hand from the REW button, the unit returns to the PLAY mode.

CUE mode : While pressing PLAY button, press F FWD button. If removing a hand from the F FWD button, the unit returns back to the PLAY mode.


Adjustment procedure :

- (1) Play back a cassette tape and put into the REV mode.
- (2) Check that the tape does not curl at the lower flange of the No. 2 Guide. (Fig. A) If the tape curls, turn the upper flange of the No. 2 Guide clockwise with a screwdriver and lower the guide until the tape curl disappears.
- (3) Play back the alignment tape.
- (4) Perform the Tracking Adjustment and Tracking Fine Adjustment referring to Section 5-2 and 5-3.
- (5) Put into the Track Shift mode and play back after the CUE/REV mode. Check that the RF waveform recovers flatly within two seconds.
- (6) If the RF waveform does not recovers flatly (Fig. B), turn the upper flange of the No. 2 Guide counterclockwise at 90 degrees. Perform step (5) again.
- (7) Repeat steps (5) and (6) until the correct waveform can be obtain. At this time, check that the tracking waveform has not changed.
- (8) If the tracking waveform has changed, perform the Entrance Side Tracking Fine Adjustment and perform step (5) again.

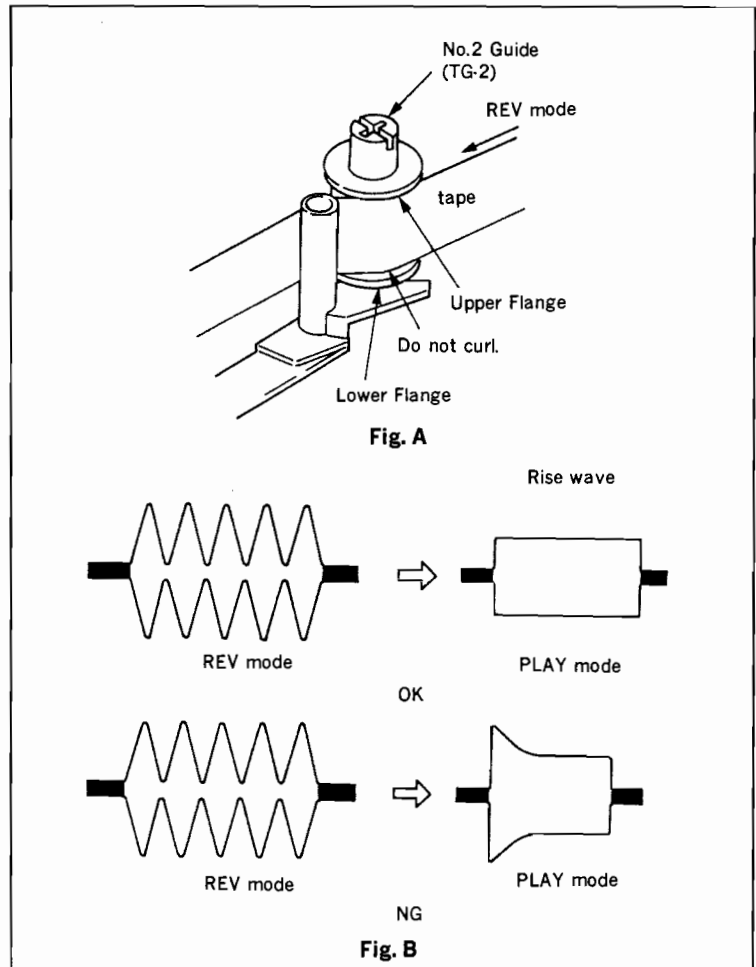

5-5. No. 7 GUIDE (TG-7) ADJUSTMENT


- The No. 7 Guide (TG-7) Height Adjustment Screw is away from the No. 7 (TG-7) Guide. Refer to Alignment Information. Therefore, modify a cassette tape (E6-120ME for EVW-300, E5-90HME for EVW-300P) as shown in the figure and it is possible to adjust the No. 7 Guide in the PLAY mode.

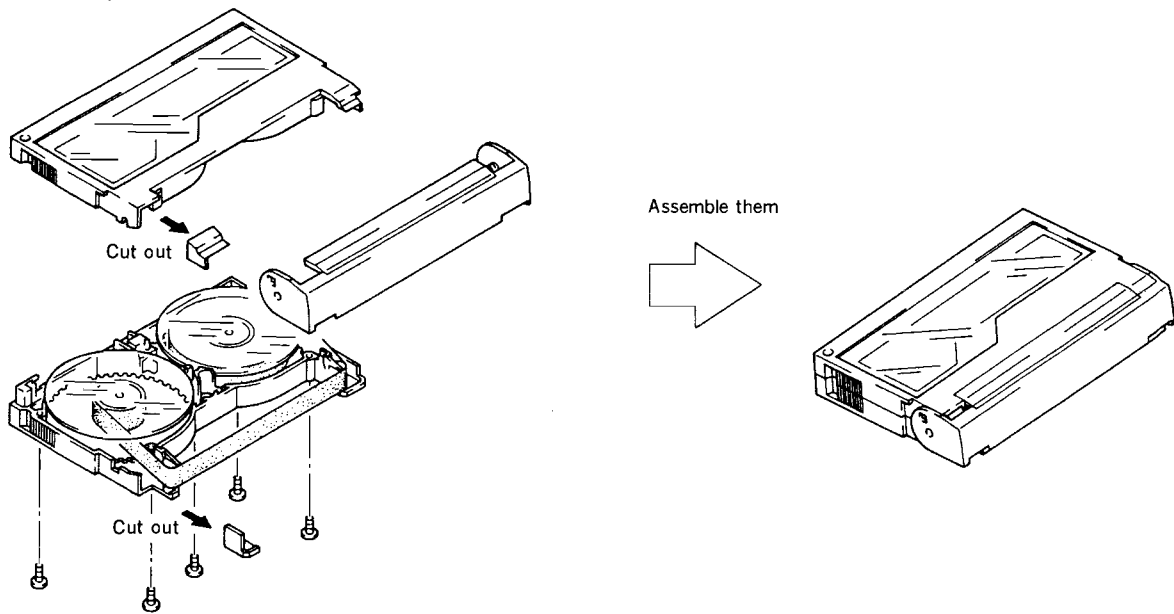

Tool : Modified cassette tape
 (E6-120ME for EVW-300)
 (E5-90HME for EVW-300P)
 Small adjustment mirror

Adjustment procedure :

- (1) Play back the modified cassette tape which has been backed twenty minutes from tape end and put into the REV mode.
- (2) Check that the tape deflection between the No. 6 Guide (TG-6) and Capstan Shaft is less than 0.5 mm. If it is more than 0.5 mm, turn and adjust the No. 7 Guide (TG-7) Height Adjustment Screw.
- (3) Play back the modified cassette tape again and check that the tape deflection between the No. 7 Guide (TG-7) and Capstan Shaft is less than 0.5 mm. If it is more than the 0.5 mm, turn and adjust the No. 7 Guide (TG-7) Height Adjustment Screw. When putting into the REV mode, check that the tape deflection between the No. 6 Guide (TG-6) and Capstan Shaft is less than 0.5 mm.

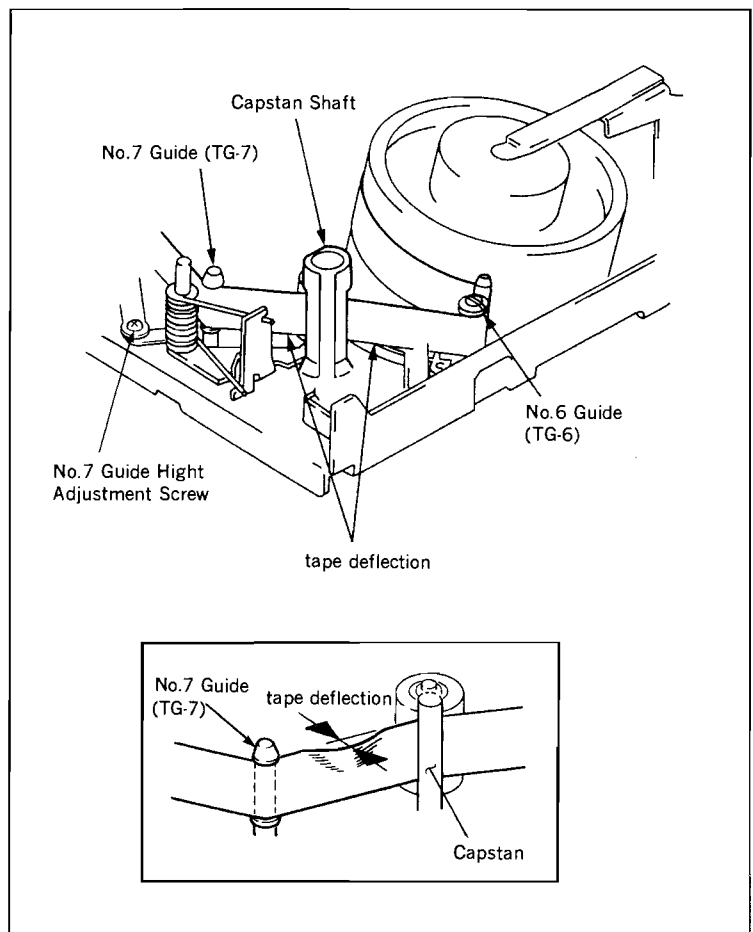

5-6. CHECK OF CUE AND REV WAVEFORMS

Tool : Oscilloscope


Alignment tape for tracking

(WR5-1NP for EVW-300)

(WR5-1CP for EVW-300P)

Adjustment procedure :

- (1) Play back the alignment tape and put into the REV mode. In this time, check that the pitches of the waveform are uniform more than five seconds as shown in the figure. If not, perform Section 5-3. Tracking Fine Adjustment and Section 5-5. No.7 Guide (TG-7) Adjustment.
- (2) Put into the CUE mode. In this time, check that the pitches of the waveform are uniform more than five seconds as shown in the figure. If not, perform Section 5-3. Tracking Fine Adjustment.

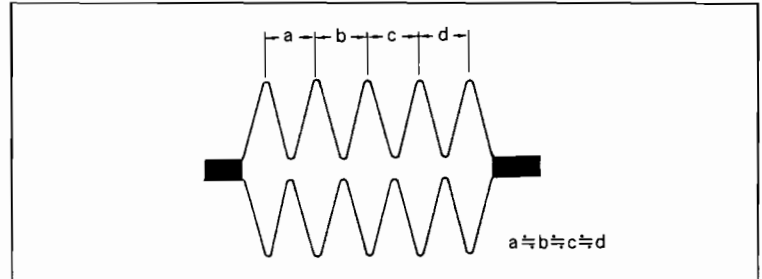

5-7. CHECK AFTER ADJUSTMENT

Tool : Oscilloscope


Alignment tape for tracking

(WR5-1NP for EVW-300)


(WR5-1CP for EVW-300P)

5-7-1. Tracking Check

- (1) When putting into the Track Shift mode, check that the amplitude of the RF waveform is about four-fifth as shown in the figure.
- (2) In this time, check that amplitude minimum value (E_{min}) is more than 70% of maximum value (E_{max}) as shown in the figure.
- (3) Check that the fluctuation of the RF waveform is as shown in the figure.

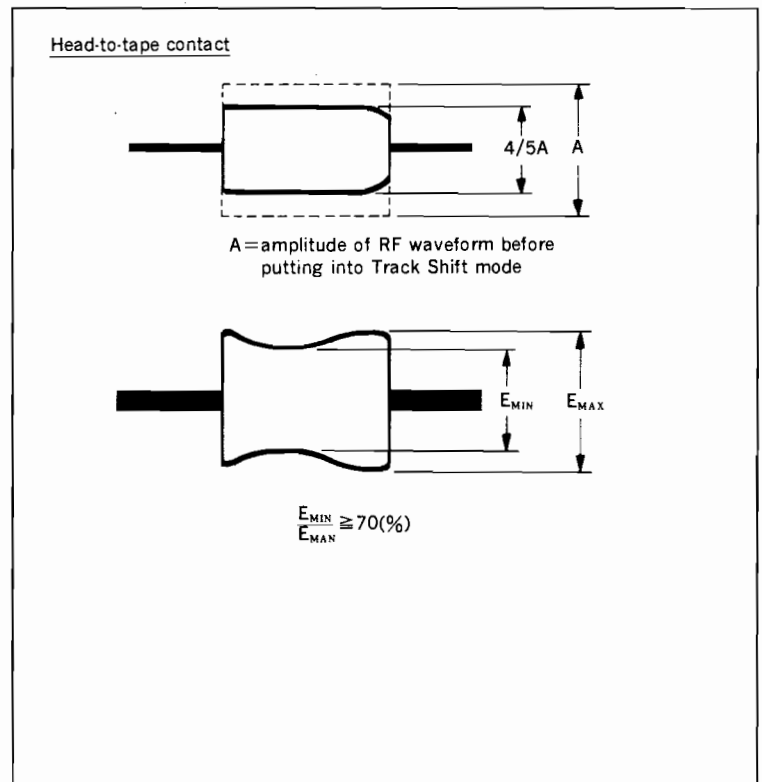

Fluctuation

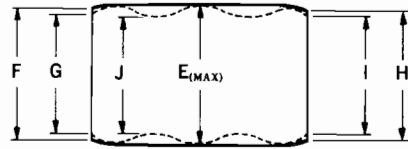

Fluctuation	$\frac{G}{F} \geq 0.85$	$\frac{J}{E} \geq 0.85$	$\frac{I}{H} \geq 0.85$
-------------	-------------------------	-------------------------	-------------------------

5-7-2. Recovery Check of Waveform

Tool : Oscilloscope



Alignment tape for tracking

(WR5-1NP for EVW-300)

(WR5-1CP for EVW-300P)

Small adjustment mirror

- (1) Play back the alignment tape.
- (2) Put the Track Shift mode to OFF.
- (3) Put into the EJECT mode and perform threading again.
- (4) Put into the PLAY mode and check that the RF waveform recovers flatly within 2.5 seconds. Then check that there is no tape deflection around the Pinch Roller.
- (5) Play back the alignment tape after putting into the CUE/REV or FF/REW mode. Check that the RF waveform recovers flatly within 2.5 seconds. Then check that there is no tape deflection around the Pinch Roller.
- (6) Repeat steps (3) to (5).

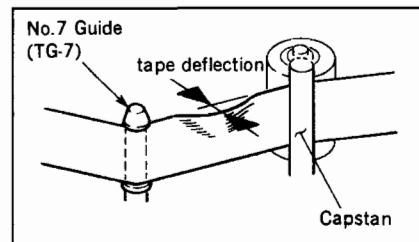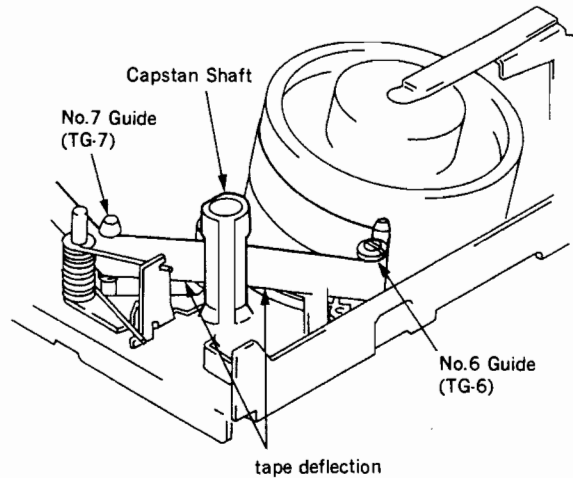

5-7-3. Tape Running Check


Tool: Cassette tape (E6-120ME for EVW-300)
(E5-90HME for EVW-300P)

Small adjustment mirror

- (1) When playing back a cassette tape, check that the tape runs without space between tape and guide flange and tape curling (more than 0.3 mm) do not exist at five positions.

Lower flange of No. 2 Guide
Upper flange of No. 3 Guide
Upper flange of No. 6 Guide
Lower and upper flanges of No. 7

- (2) When putting into the CUE mode or REV mode, check that the tape runs without space between tape and guide flange and tape curling (more than 0.3 mm) do not exist at each flange of the guide.

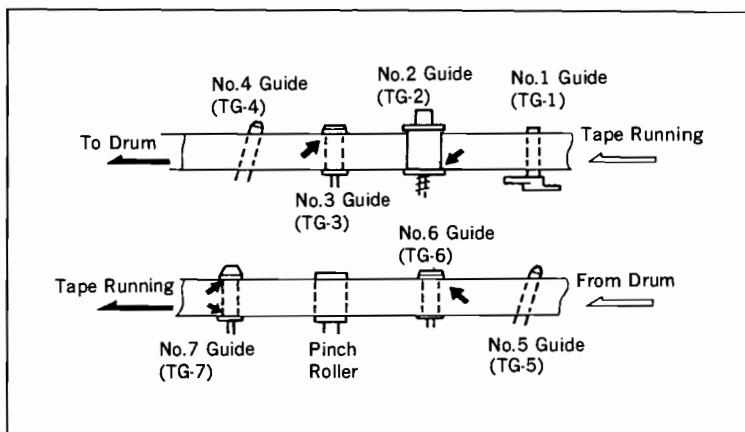


5-8. SWITCHING POSITION ADJUSTMENT

Tool: Oscilloscope

Alignment tape for switching position adjustment (WR2-3NS for EVW-300)
(WR2-3CS for EVW-300P)

Adjustment procedure:

- (1) Connect the oscilloscope as follows.
CH-1: CN24 pin-1/MB-384/384P Board
CH-2: CN24 pin-3/MB-384/384P Board
Trigger: CH-2
- (2) Connect TP502 on the FP-40/40P to ground with a shorting clip.
- (3) Turn on the [SELF DIAG] switch on the operation panel of the Side Panel.
- (4) Set the [R-RUN/SET/F-RUN] switch to [SET] position and select the menu [101] by pressing the [SHIFT] button once.
- (5) Play back the alignment tape.
- (6) Adjust switching position with [R-RUN/SET/F-RUN] switch to meet specification A.
Set the switch to [F-RUN] position for coarse adjustment.
Set the switch to [R-RUN] position for fine adjustment. Variable minimum unit is 1 μ sec with the switch set to [R-RUN] position.
- (7) Check that it meets specification B within specification A.
- (8) After adjustment, press the [COUNTER RESET] button, and turn off the [SELF DIAG] switch on the Side Panel, and lastly disconnect a shorting clip.



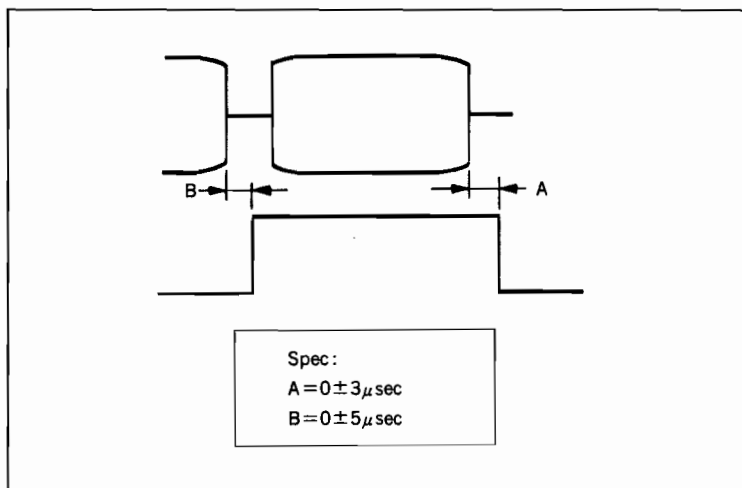





SECTION 6 CAMERA ALIGNMENT

6-1. Preparation


6-1-1. EQUIPMENT REQUIRED

- Digital voltmeter
- Oscilloscope (100 MHz or more)
- Vectorscope
- Waveform monitor
- B/W monitor (Sony PVM-91CE/122CE or equivalent)
- Color monitor (Sony PVM-1320P or equivalent)
- AC adaptor (Sony CMA-8CE/8ACE)
- Frequency counter

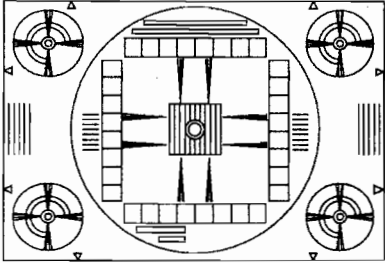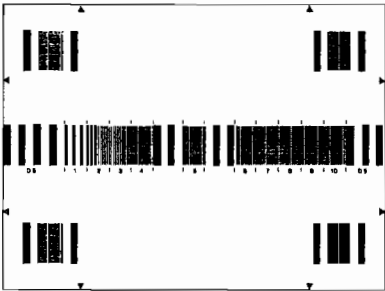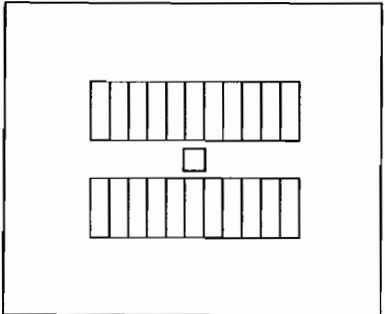J-6026-100-A	Resolution Chart
	
J-6026-110-A	Burst Chart
	
J-6026-130-B	Gray Scale Chart
	

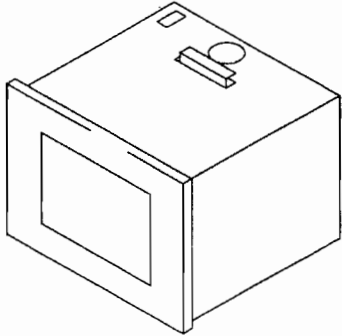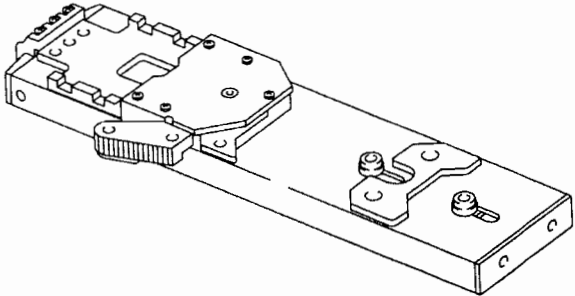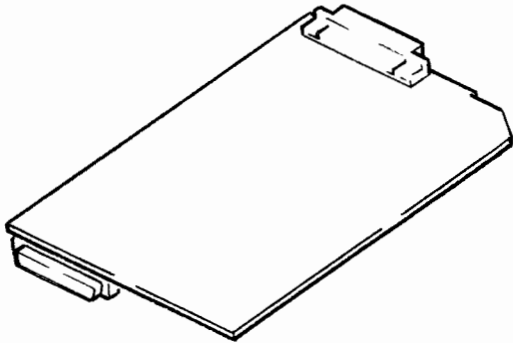J-6029-140-B	Pattern Box PTB-500
• Light source for test chart AC90-240V (PTB-500) 	
Tripod Adaptor VCT-12 	
J-6391-180-A	Extension board EX-337
• For adjustment of IE-33P, PR-159P and ES-4P boards 	

6-1-2. CONNECTION

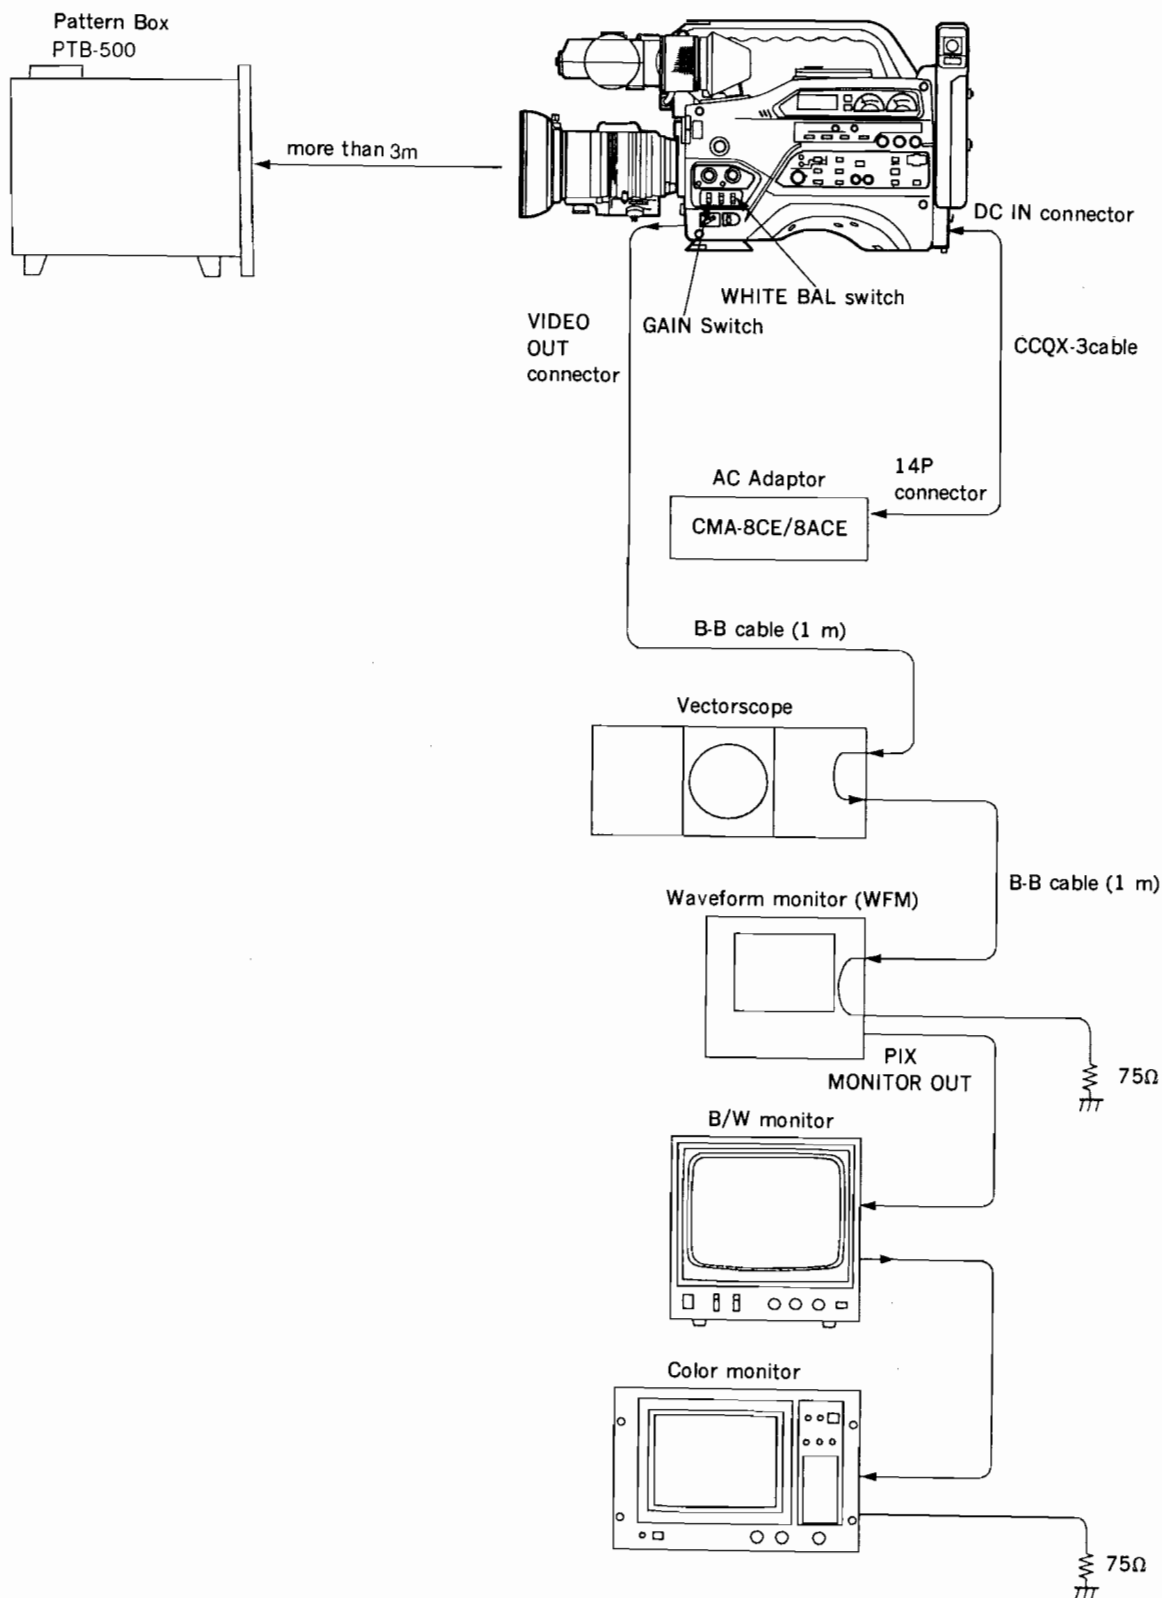

6-1-3. SWITCH SETTING BEFORE ADJUSTMENT

Switch Setting of the camera side panel

GAIN switch : 0dB
OUTPUT switch : CAM
WHITE BAL switch : PRESET
FILTER knob : 1
SHUTTER switch : OFF

IRIS(Lens): Manual
ZOOM(Lens): Manual

ES-4P Board

S1(VTR↔TEST): VTR (Upper side)

AT-70 Board


S1(FRM/FLD): FLD
S2(FULL FUNC/OPE): OPE
S3(OPE/KNEE HI): OPE
S4(ADJ/OPE): ADJ

Note : After the adjustment, return the S4(ADJ/OPE)/AT-70 board to "OPE" position.

6-1-4. Note on adjustment

Note

- (1) As the following adjusting control has no turning stopper, take care not to over-turn it.

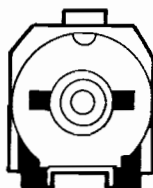

(TOP VIEW)

Potentiometer
Mechanical center condition

- (2) Before adjustment, be sure to allow for 10-minute warm-up time.
- (3) If the amplitude level of the measured waveform is blurred on the waveform monitor screen, set the RESPONSE switch on the waveform monitor to "LUM" mode.

6-1-5. ADJUSTMENT ITEM

6-2. CCD DRIVE SYSTEM ADJUSTMENT

6-2-1. G/R/B V SUBSTRATE VOLTAGE ADJUSTMENT

6-2-2. G/R/B RG VOLTAGE ADJUSTMENT

6-3. SYNC SIGNAL SYSTEM ADJUSTMENT

6-3-1. SUB-CARRIER FREQUENCY ADJUSTMENT

6-4. ENCODER SYSTEM ADJUSTMENT

6-4-1. COLOR-BAR 75%/100% ADJUSTMENT

6-4-2. CARRIER BALANCE ADJUSTMENT

6-4-3. COLOR-BAR SIZE ADJUSTMNT

6-4-4. INT CB Y ADJUSTMENT

6-4-5. COLOR VECTOR ADJUSTMNT

6-4-6. MATRIX ADJUSTMENT

6-5. VIDEO PROCESS SYSTEM ADJUSTMENT

6-5-1. 1H OUT BALANCE ADJUSTMENT

6-5-2. 2H OUT BALANCE ADJUSTMENT

6-5-3. 1H GAIN ADJUSTMENT

6-5-4. 2H GAIN ADJUSTMENT

6-5-5. G-ch/B-ch/R-ch INPUT GAIN ADJUSTMENT

6-5-6. G-ch GAIN/GAMMA/PED ADJUSTMENT

6-5-7. R-ch/B-ch GAIN/PED ADJUSTMENT

6-5-8. G-ch BLACK SET AND PEDESTAL ADJUSTMENT

6-5-9. R-ch/B-ch BLACK SET AND PEDESTAL ADJUSTMNT

6-5-10. KNEE ADJUSTMENT

6-5-11. PRE KNEE ADJUSTMENT

6-5-12. PR WHITE CLIP ADJUSTMENT

6-5-13. ALIASING ADJUSTMENT

6-5-14. APERTURE CRISPENING ADJUSTMENT

6-5-15. Y_H LEVEL ADJUSTMENT

6-5-16. DTL CRISPENING ADJUSTMENT

6-5-17. DTL ALIASING ADJUSTMENT

6-5-18. H/V RATIO ADJUSTMENT

6-5-19. DETAIL LEVEL ADJUSTMNT

6-5-20. ES WHITE CLIP ADJUSTMENT

6-5-21. ZEBRA LEVEL ADJUSTMNT

6-5-22. AUTO IRIS ADJUSTMENT

6-2. CCD DRIVE SYSTEM ADJUSTMENT

6-2-1. G/R/B V SUBSTRATE VOLTAGE ADJUSTMENT

Note : Perform this adjustment only when replacing the adjusting control on the MB-384P board or replacing the mounted circuit board "MB-384P" or replacing the front unit Assy. When the adjusting control on the MB-384P board was turned by accident, this adjustment is required.

Equipment: Digital voltmeter

Adjustment Procedure

- Perform adjustment in order of G-ch, R-ch and B-ch as shown below.

MB-384P Board

	Test point (GND : E1)	Adjusting point
G-ch	TP4	RV4
R-ch	TP5	RV5
B-ch	TP6	RV6

Adjust to the V SUB voltage (± 0.2 V) shown on the label sticking to the front unit Assy.

(Example)

	Vsub	RG
R	13.5	2.0
G	13.5	2.0
B	12.5	2.0
	↑	↑
	Vdc	Vdc

6-2-2. G/R/B RG VOLTAGE ADJUSTMENT

Note : Perform this adjustment only when replacing the adjusting control on the MB-384P board or replacing the mounted circuit board "MB-384P" or replacing the front unit Assy. When the adjusting control on the MB-384P board was turned by accident, this adjustment is required.

Equipment: Oscilloscope


Adjustment Procedure

- Perform adjustment in order of G-ch, R-ch and B-ch as shown below.

MB-384P Board

	Test point (GND : E1)	Adjusting point
G-ch	TP1	RV1
R-ch	TP3	RV3
B-ch	TP2	RV2

Adjust to the RG voltage (± 0.2 V) shown on the label sticking to the front unit Assy.

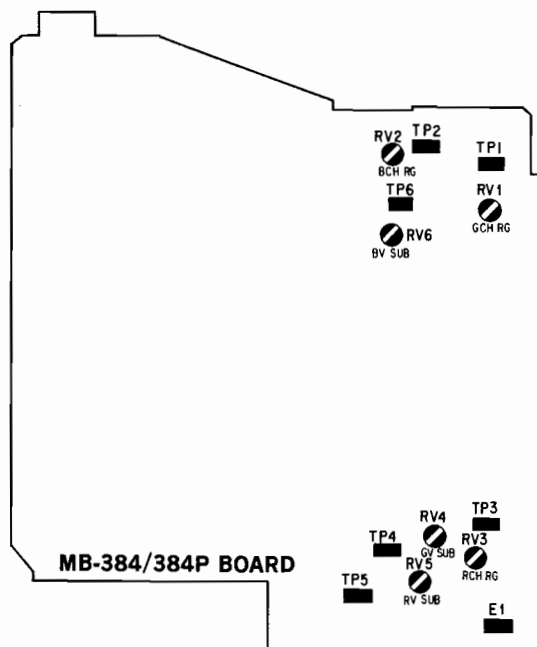

6-3. SYNC SIGNAL SYSTEM ADJUSTMENT

6-3-1. SUB-CARRIER FREQUENCY ADJUSTMENT

Equipment: Frequency counter
 To be extended: ES-4P Board
 Test point: TP5(GND: E1)/ES-4P Board
 Adjusting point: ●RV15/ES-4P Board
 Specification: $4,433,618 \pm 10$ Hz


6-4. ENCODER SYSTEM ADJUSTMENT

6-4-1. COLOR-BAR 75%/100% ADJUSTMENT


Equipment: Oscilloscope
 To be extended: IE-33P Board
 Preparation: OUTPUT switch/camera side panel→BARS
 Adjustment Procedure

1. Test point: pin A19/extension board
 Adjusting point: ●RV16/IE-33P Board
 Specification: $A = 0.75 \pm 0.01$ V


2. Test point: pin A19/extension board
 Adjusting point: ●RV17/IE-33P Board
 Specification: $B = 1.00 \pm 0.01$ V

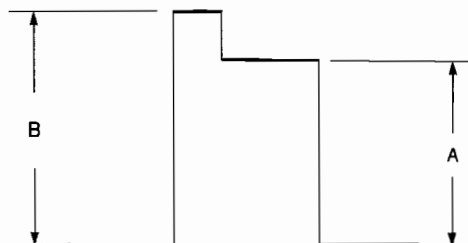

ES-4/4P BOARD

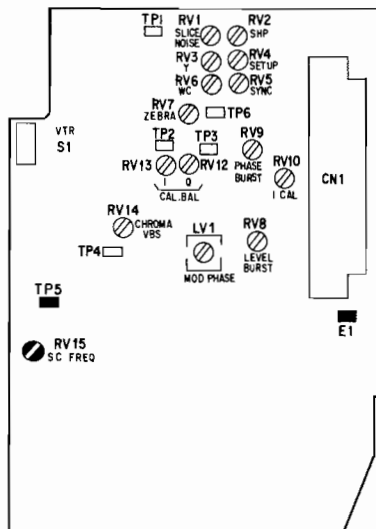

IE-33/33P BOARD

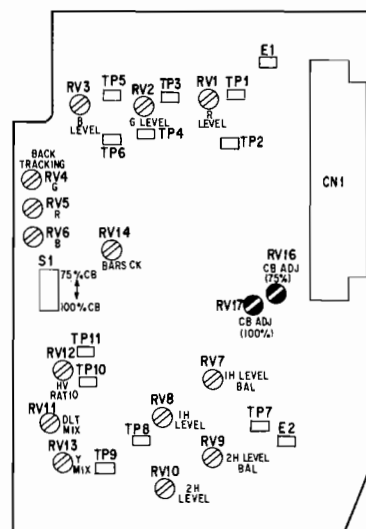

6-4-2. CARRIER BALANCE ADJUSTMENT


Equipment: Vectorscope (MAX GAIN)

To be extended: ES-4P Board

Preparation: OUTPUT switch/camera side panel→BARS

Adjustment Procedure

Adjust ●RV12 and ●RV13/ES-4P board so that the black beam spot is positioned in the center of the vectorscope screen.

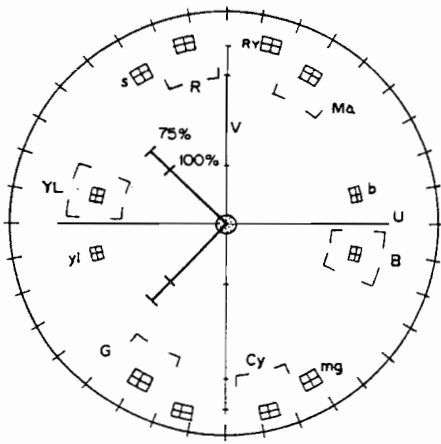

6-4-3. COLOR-BAR SIZE ADJUSTMENT


Equipment: Oscilloscope

To be extended: IE-33P Board


Preparation: OUTPUT switch/camera side panel→BARS

Adjusting point: ●RV14/IE-33P Board


Specification: $A = 4.0 \pm 0.2 \mu s$

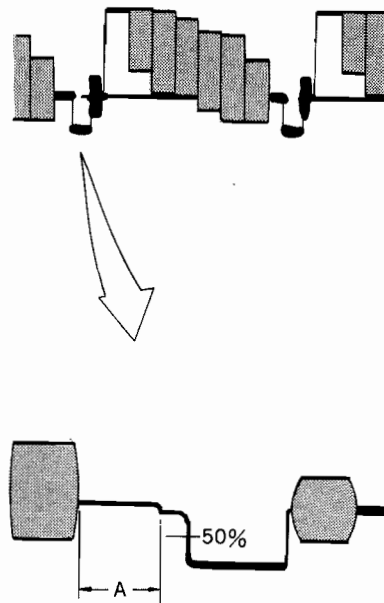

ES-4/4P BOARD

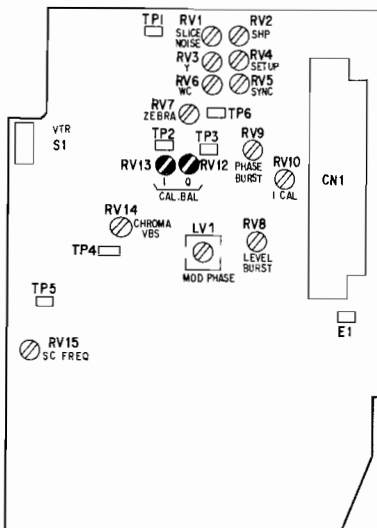

IE-33/33P BOARD

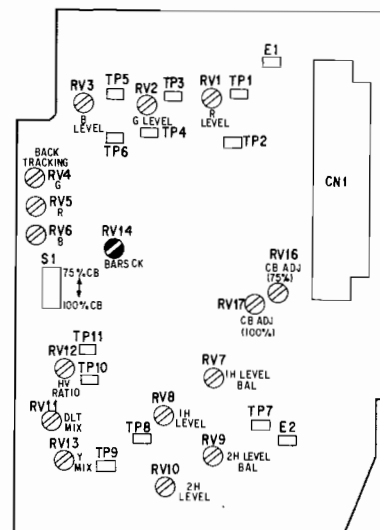

6-4-4. INT CB Y ADJUSTMENT

Equipment: Waveform monitor

To be extended: ES-4P Board

Preparation: OUTPUT switch/camera side panel→BARS

Adjustment Procedure


1. Turn **RV4**/ES-4P board counterclockwise slowly from fully counterclockwise and stop where the SET UP level "A" becomes 0 ± 4 mV.

2. Adjusting point: **RV3**/ES-4P Board

Specification: $B = 700 \pm 10$ mV

3. Adjusting point: **RV5**/ES-4P Board

Specification: $C = 300 \pm 10$ mV

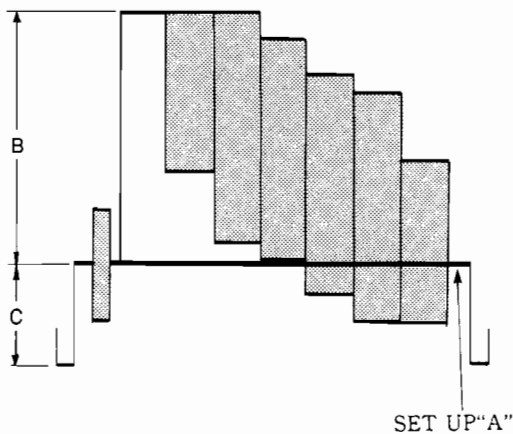

6-4-5. COLOR VECTOR ADJUSTMENT

Equipment: Vectorscope

To be extended: ES-4P Board

Preparation:

- GAIN switch/Vectorscope→75% CAL
- Adjust the PHASE control on the vectorscope so that the burst spot is overlapped to the 75% axis.
- OUTPUT switch/camera side panel→BARS


Adjustment Procedure

1. Adjust **RV8**/ES-4P board so that the burst spot is located at 75% scale mark on the vectorscope screen.


2. Adjust the following controls alternately so that each beam spot stays inside the reference frame "□".

- **LV1**/ES-4P board
- **RV9**/ES-4P board
- **RV10**/ES-4P board
- **RV14**/ES-4P board


3. Repeat procedures 1 through 2 several times.

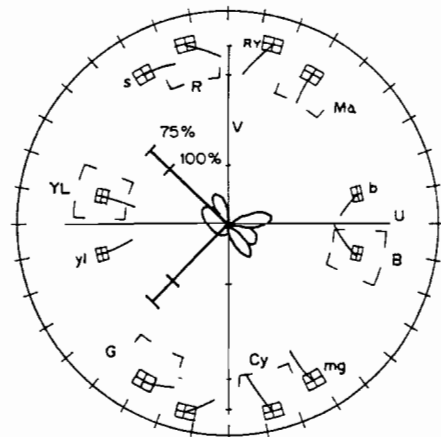

ES-4/4P BOARD

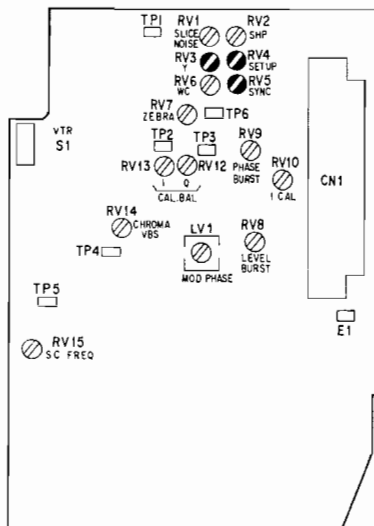

ES-4/4P BOARD

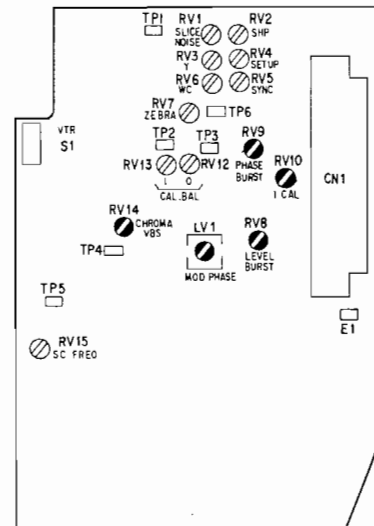

6-4-6. MATRIX ADJUSTMENT


Equipment: Waveform monitor

To be extended: PR-159P Board


Preparation: OUTPUT switch/camera side panel→BARS

Adjustment Procedure

- Adjust **RV18** and **RV2/PR-159P** board alternately so that the carrier leakage "A" is minimum.

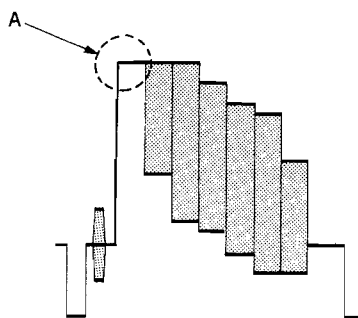

PR-159/159P BOARD

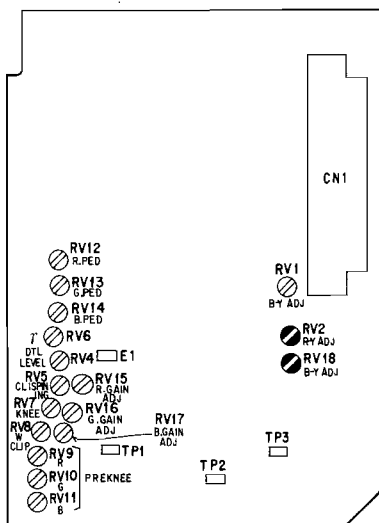

6-5-2. 2H OUT BALANCE ADJUSTMENT

Note : Perform the adjustment only when replacing the delay line (IC16 or IC17).


Object : Burst chart

Equipment : Oscilloscope, Waveform monitor


To be extended : IE-33P Board

Adjustment Procedure

1. Make sure that the lens is best focused. And adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

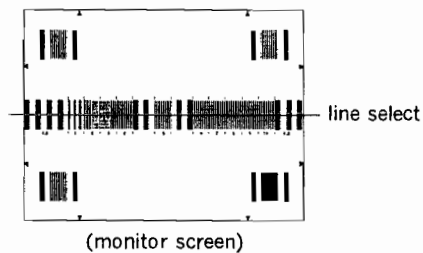

2. Adjust the lens iris so that the VIDEO OUT level is 700 ± 10 mV.

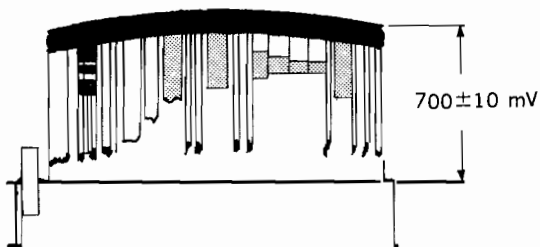


3. Test point : TP9(GND : E1)/IE-33P board.


(To get the following picture, set the LINE SEL switch on the waveform monitor to "15 LINES". And select the center of the monitor screen by using the VAR control of LINE SEL)

Adjusting point : ● RV9/IE-33P board

Specification : Make sure that a double waveform does not appear.

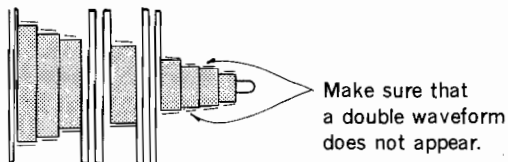

IE-33/33P BOARD

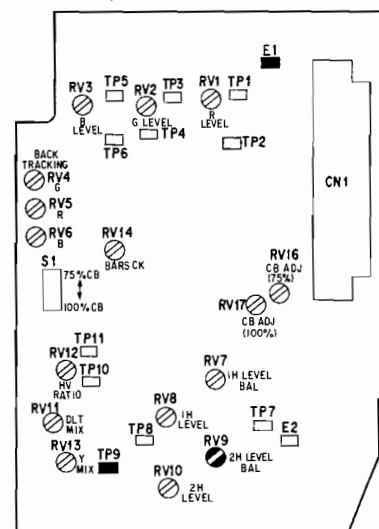

6-5-3. 1H GAIN ADJUSTMENT

Object : Grayscale chart

Equipment : Oscilloscope, Waveform monitor


To be extended : IE-33P Board

Preparation :

- WHITE BAL switch/camera side panel→PRESET


Adjustment Procedure

1. Adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

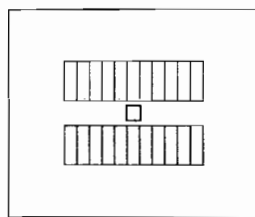


(monitor screen)

2. Adjust the lens iris so that the video level at VIDEO OUT is 700 ± 10 mV.

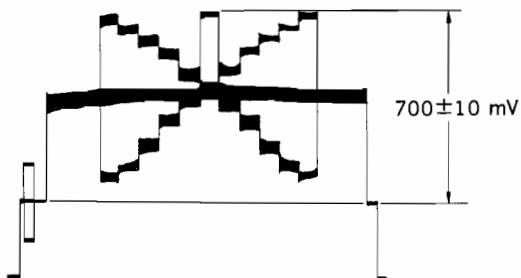


3. Put the oscilloscope into GAIN ADD mode and into CH-2 INVERT mode.
4. Connect CH-1 and CH-2 of oscilloscope to TP7 (GND : E1) on the IE-33P board. Adjust CH1-VAR or CH2-VAR control on the oscilloscope so that the waveform becomes flat for gain correction.
5. Connect CH-1 of oscilloscope to TP7 and CH-2 to TP8 on the IE-33P board.

6. Adjust RV8/IE-33P board so that the waveform becomes flat.

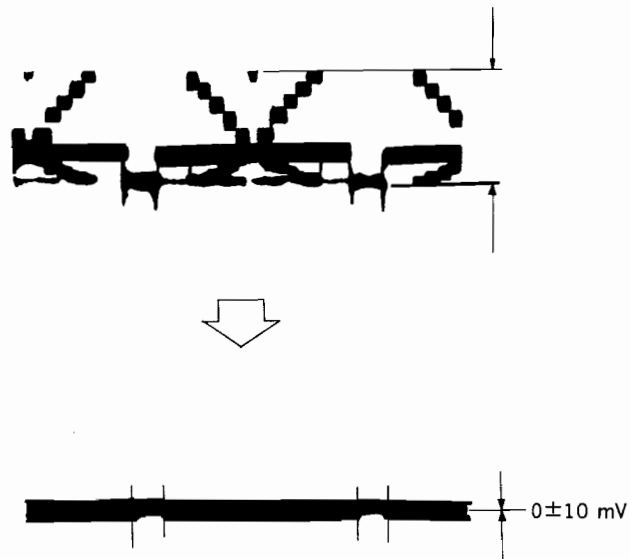

IE-33/33P BOARD

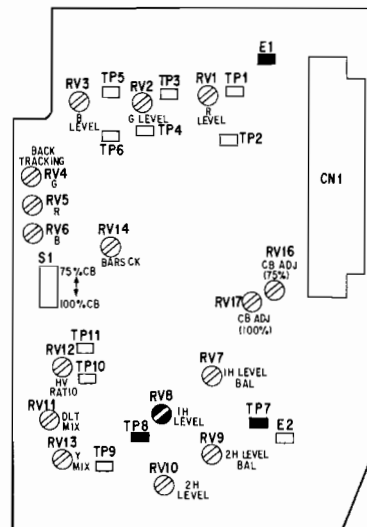

6-5-4. 2H GAIN ADJUSTMENT

Object: Grayscale chart

Equipment: Oscilloscope, Waveform monitor


To be extended: IE-33P Board

Preparation:

- WHITE BAL switch/camera side panel→PRESET

Adjustment Procedure

1. Adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

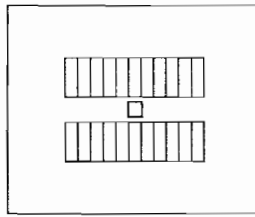

(monitor screen)

2. Adjust the lens iris so that the video level at the VIDEO OUT is 700 ± 10 mV.




3. Put the oscilloscope into GAIN ADD mode and into CH-2 INVERT mode.
4. Connect CH-1 and CH-2 of oscilloscope to TP7 (GND: E1) on the IE-33P board. Adjust CH1-VAR or CH2-VAR control on the oscilloscope so that the waveform becomes flat for gain correction.
5. Connect CH-1 of oscilloscope to TP7 and CH-2 to TP9 on the IE-33P board.

6. Adjust RV10/IE-33P board so that the waveform becomes flat.



IE-33/33P BOARD

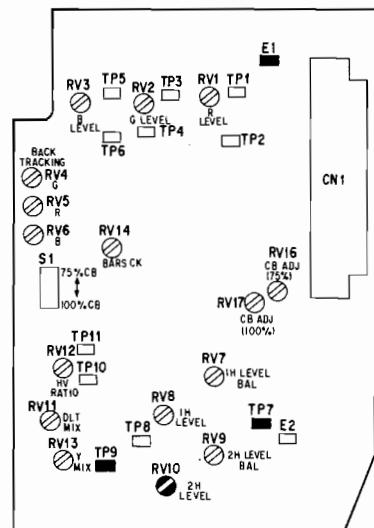

6-5-5. G-ch/B-ch/R-ch INPUT GAIN ADJUSTMENT

Note : Use a reflection type white chart for G-ch/B-ch/R-ch INPUT GAIN ADJUSTMENT. Control the light so that the white area of chart is exactly 3200K of color temperature. If the pattern box is used, PTB-500 should be used.

Object : Grayscale chart

Equipment : Oscilloscope


To be extended : IE-33P Board

Preparation :

- WHITE BAL switch/camera side panel→PRESET
- OUTPUT switch/camera side panel→CAM

Adjustment Procedure

1. Adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

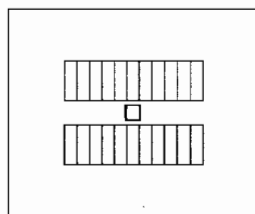


(monitor screen)

2. Test point : TP3(GND : E1)/IE-33P Board

Adjusting point : Lens iris


Specification : $A=260\pm5$ mV

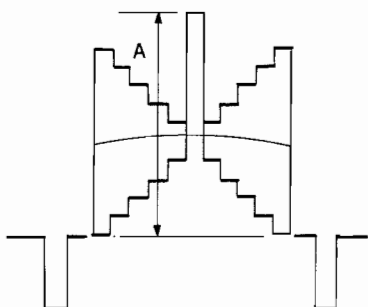


3. Perform adjustment in order of G-ch, R-ch and B-ch as shown below.

IE-33P Board

	Test point (GND : E1)	Adjusting point	Specification
G-ch	TP4	RV2	$B=115\pm5$ mV
R-ch	TP2	RV1	
B-ch	TP6	RV3	

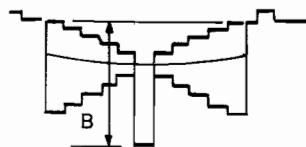

IE-33/33P BOARD

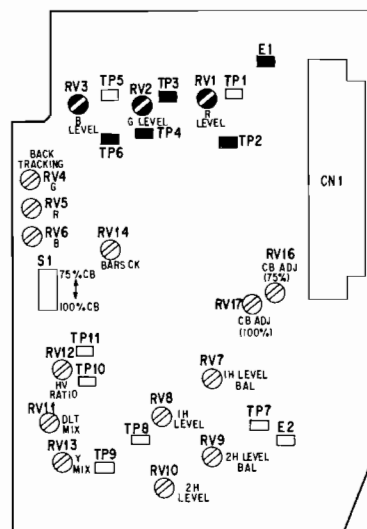

6-5-6. G-ch GAIN/GAMMA/PED ADJUSTMENT

- Note:**
- The item 6-5-5. G-ch/B-ch/R-ch INPUT GAIN ADJUSTMENT must be complete before beginning this adjustment.
 - When this adjustment is done, perform Section 6-5-7. R-ch/B-ch GAIN/PED ADJUSTMENT through Section 6-5-12. PR WHITE CLIP ADJUSTMENT continuously.

Object: Grayscale chart

Equipment: Oscilloscope

To be extended: PR-159P Board

Preparation:


- RV7/PR-159P board → fully counterclockwise
- RV8/PR-159P board → fully clockwise
- RV9/PR-159P board → fully counterclockwise
- RV10/PR-159P board → fully counterclockwise
- RV11/PR-159P board → fully counterclockwise

Trigger: pin A10/extension board

Preparation: GAIN switch/camera side panel → OdB


Adjustment Procedure

1. Adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

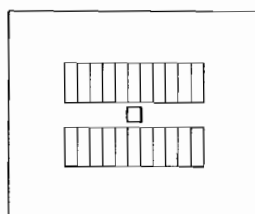

(monitor screen)

2. Adjust the lens iris so that the video level at pin A26(GND: pin B1)/extension board is 115 ± 5 mV.

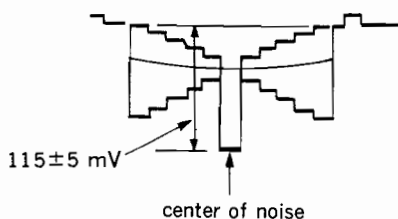


3. Put the cap on the lens.

4. Test point: pin B21(GND: pin B1)/extension board

Adjusting point: RV13/PR-159P Board

Specification: $A = 30 \pm 2$ mV




5. Remove the cap from the lens.

6. Test point: pin B21(GND: pin B1)/extension board

Specification: $B = 550 \pm 20$ mV; RV6/PR-159P Board


$C = 1000 \pm 10$ mV; RV16/PR-159P Board

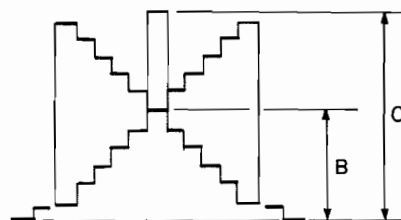

7. Repeat procedures 3 through 6 several times.

Note: After the adjustment, carry out Section 6-5-7. R-ch/B-ch GAIN/PED ADJUSTMENT.

PR-159/159P BOARD

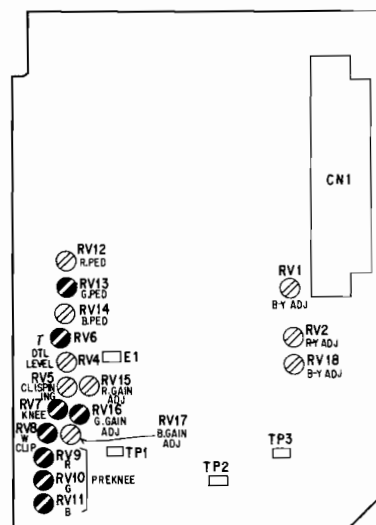

6-5-7. R-ch/B-ch GAIN/PED ADJUSTMENT

Note: The item 6-5-6. G-ch GAIN/GAMMA/PED ADJUSTMENT must be complete before beginning this adjustment.

Object: Grayscale chart

Equipment: Waveform monitor

To be extended: PR-159P Board


Preparation:

- RV7/PR-159P board→fully counterclockwise ⤿
- RV8/PR-159P board→fully clockwise ⤿
- RV9/PR-159P board→fully counterclockwise ⤿
- RV10/PR-159P board→fully counterclockwise ⤿
- RV11/PR-159P board→fully counterclockwise ⤿


Test point: VIDEO OUT

Adjustment Procedure

1. Adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

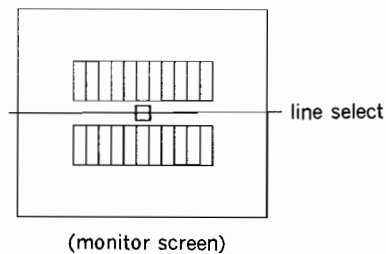


2. Adjust the lens iris so that the video level at pin A26(GND: pin B1)/extension board is 115 ± 5 mV.

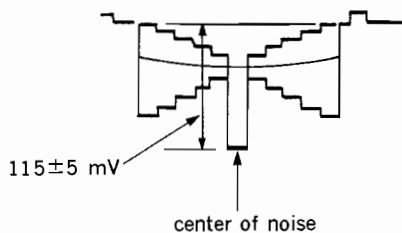

3. Put the cap on the lens.


4. Adjusting point: ●RV12, ●RV14/PR-159P Board
- Specification: A=Minimum

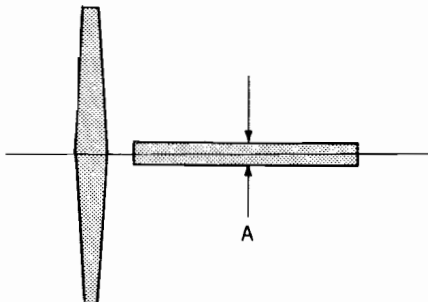

5. Remove the cap from the lens.

6. To get the following picture, set the LINE SEL switch on the waveform monitor to "15 LINES". And select the center of the monitor screen by using the VAR control of LINE SEL.


7. Adjusting point: ●RV15, ●RV17/PR-159P Board
- Specification: B=Minimum
(WFM: BPF 4.43 mode)

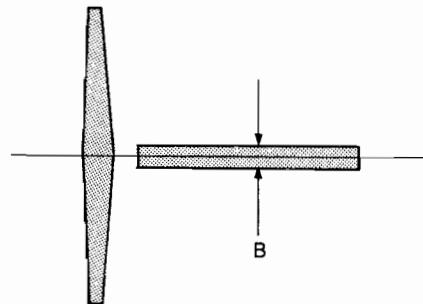

8. Repeat Procedures 3 through 7 several times.

Note: After the adjustment, carry out Section 6-5-8. G-ch BLACK SET AND PEDESTAL ADJUSTMENT.

PR-159/159P BOARD

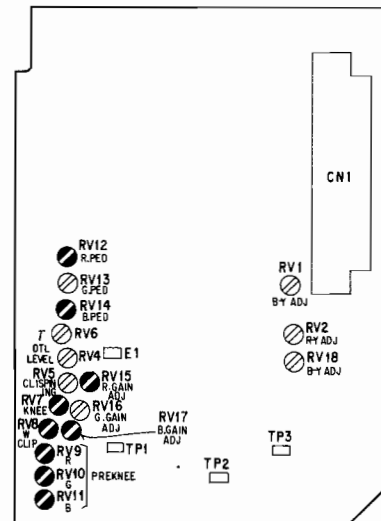

6-5-8. G-ch BLACK SET AND PEDESTAL ADJUSTMENT

Note : Section 6-5-7. R-ch/B-ch GAIN/PED ADJUSTMENT must be complete before beginning this adjustment. Make sure that 18dB gains is set with the GAIN switch (camera side panel) set to HIGH position.

Lens iris: Close "C"

Equipment: Oscilloscope

To be extended: PR-159P Board


Preparation:

- RV7/PR-159P board→fully counterclockwise
- RV8/PR-159P board→fully clockwise
- RV9/PR-159P board→fully counterclockwise
- RV10/PR-159P board→fully counterclockwise
- RV11/PR-159P board→fully counterclockwise

Trigger: pin A10/extension board

Adjustment Procedure

1. Adjust ●RV5/IE-33P board so that the pedestal level does not change when the GAIN switch on the side of the camera is switched over from 0 dB to HIGH(18dB).

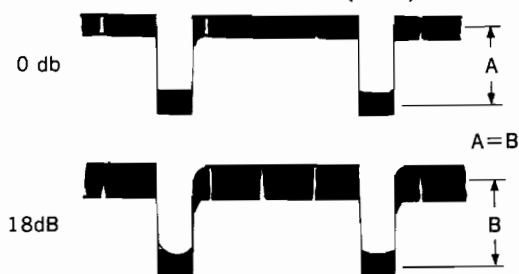

2. GAIN switch/camera side panel→0dB

3. Test point: B21(GND: pin B1)/extension board


Adjusting point: ●RV13/PR-159P Board

Specification: $C = 30 \pm 2$ mV



Note : After the adjustment, carry out Section 6-5-9. R-ch/B-ch BLACK SET AND PEDESTAL ADJUSTMENT.

PR-159/159P BOARD

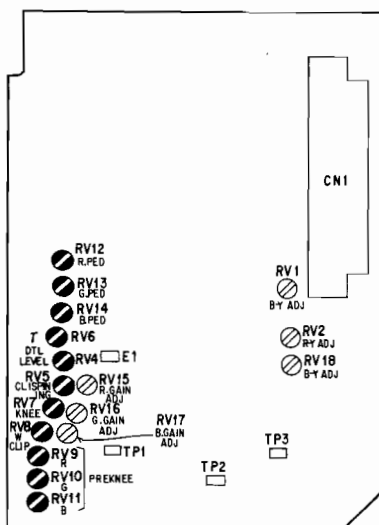

EVW-300P (EK)

6-5-9. R-ch/B-ch BLACK SET AND PEDESTAL ADJUSTMENT

Note : • Section 6-5-8. G-ch BLACK SET AND PEDESTAL ADJUSTMENT must be complete before beginning this adjustment.

- Make sure that 18dB gains is set with the GAIN switch (camera side panel) set to HIGH position.
- Set the GAIN switch/vectorscope to MAX.

Lens iris: Close "C"


Equipment: Vectorscope

To be extended: PR-159P Board

Test point: VIDEO OUT


Adjustment Procedure

1. GAIN switch/camera side panel→HIGH(18dB)
2. Adjust ●RV4 and ●RV6/IE-33P board so that the black beam spot is positioned in the center of the vectorscope.

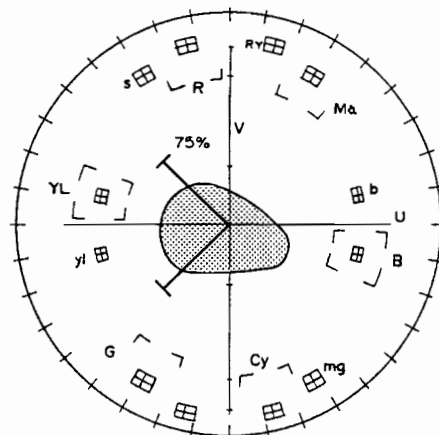

3. GAIN switch/camera side panel→0dB

4. Adjust ●RV12 and ●RV14/PR-159P board so that the black beam spot is positioned in the center of the vectorscope.

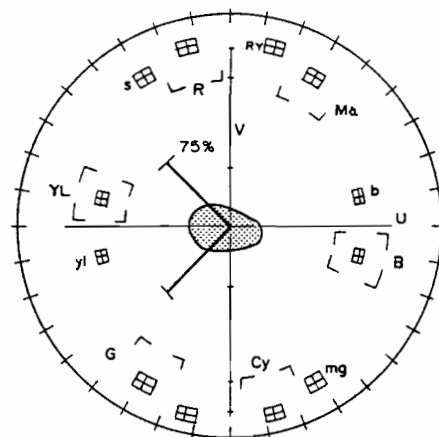

5. Repeat procedures 1 through 4 several times.

Note : After the adjustment, carry out Section 6-5-10. KNEE ADJUSTMENT.

6-5-10. KNEE ADJUSTMENT

Note : Section 6-5-9 R-ch/B-ch BLACK SET AND PEDESTAL ADJUSTMENT must be complete before beginning this adjustment.

Object: Grayscale chart


Equipment: Oscilloscope

To be extended: PR-159P Board

Test point: pin B21/extension board

Adjustment Procedure


1. Adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

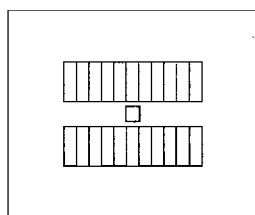

(monitor screen)


2. Adjusting point: Lens iris

Specification: $A = 1020 \pm_{-0}^{+10}$ mV

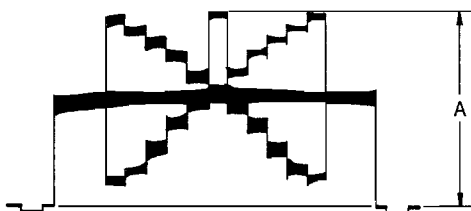


3. Adjusting point: RV7/PR-159P Board

Specification: $B = 1000 \pm_{-10}^{+0}$ mV

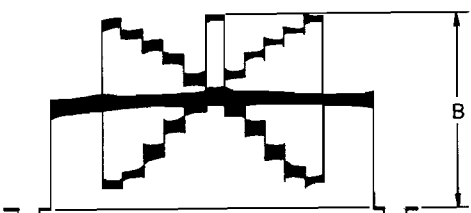

Note : After the adjustment, carry out Section 6-5-11. PRE KNEE ADJUSTMENT.

PR-159/159P BOARD

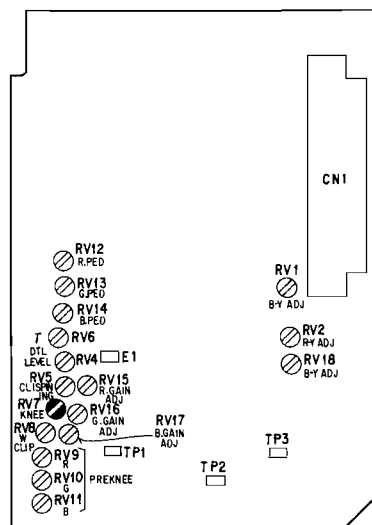

6-5-11. PRE KNEE ADJUSTMENT

Note : Section 6-5-10 KNEE ADJUSTMENT must be complete before beginning this adjustment.

Object : Grayscale chart


Equipment : Oscilloscope, Waveform monitor

To be extended : PR-159P Board

Trigger : pin A10/extension board

Adjustment Procedure

1. Adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

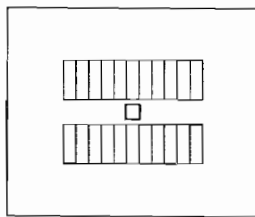


(monitor screen)

2. Test point : pin A26(GND : pin B1)/extension board

Adjusting point : Lens iris


Specification : $A = 350 \pm 10$ mV

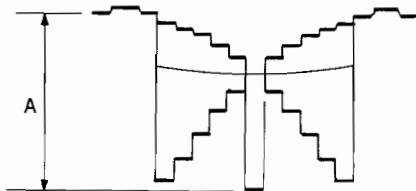

3. Test point : pin B21(GND : pin B1)/extension board

Adjusting point : ●RV10/PR-159P Board


Specification : $B = 1150 \pm 20$ mV

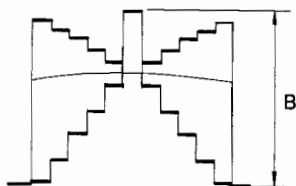

4. Test point : VIDEO OUT

Adjusting point : ●RV9, ●RV11/PR-159P Board

Specification : Carrier leakages C, D, E → Minimum

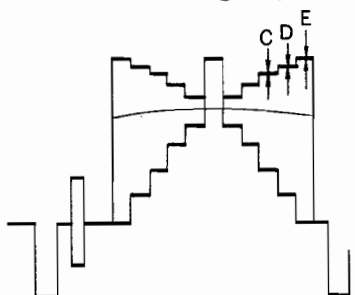

Note : After the adjustment, carry out Section 6-5-12 PR WHITE CLIP ADJUSTMENT.

6-5-12. PR WHITE CLIP ADJUSTMENT

Note : Section 6-5-11 PRE KNEE ADJUSTMENT must be complete before beginning this adjustment.

Make sure that 18dB gains is set with the GAIN switch (camera side panel) set to 18dB.

Object : Grayscale chart

Equipment : Oscilloscope


To be extended : PR-159P Board

Preparation : GAIN switch/camera side panel → 0dB

Test point : pin B21/extension board

Adjustment Procedure

1. Adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

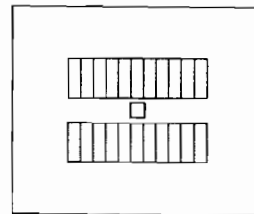

(monitor screen)

2. GAIN switch/camera side panel → HIGH(18dB)

Adjusting point : ●RV8/PR-159P Board


Specification : $A = 1150 \pm 10$ mV



Note : After the adjustment, set switch as follows.

GAIN switch/camera side panel → 0dB



PR-159/159P BOARD

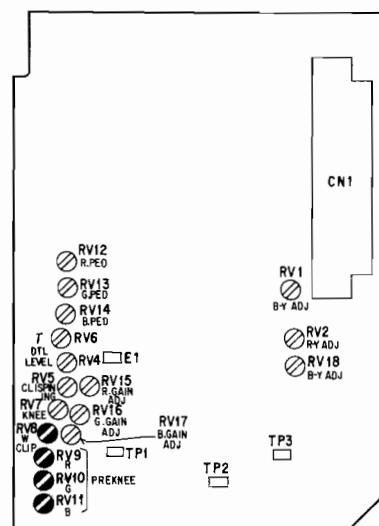

Note : When this adjustment is done, perform Section 6-5-14 APERTURE CRISPENING ADJUSTMENT through Section 6-5-18 DETAIL LEVEL ADJUSTMENT continuously.



Adjustment Procedure

1. Make sure that the lens is best focused. And adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

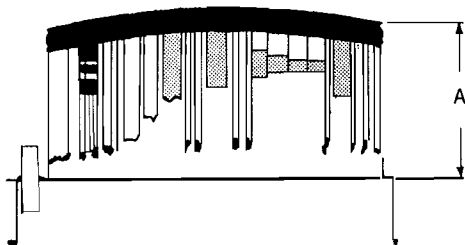

- Specification : B=Minimum

(To get the following picture, set the LINE SEL switch on the waveform monitor to "15 LINES". And select the center of the monitor screen by using the VAR control of LINE SEL.)

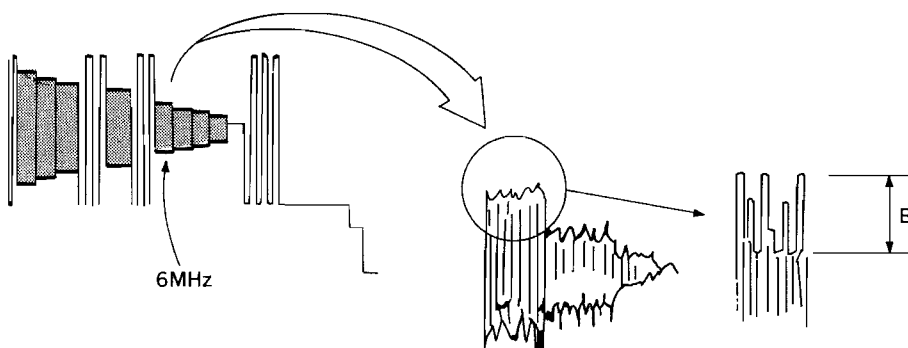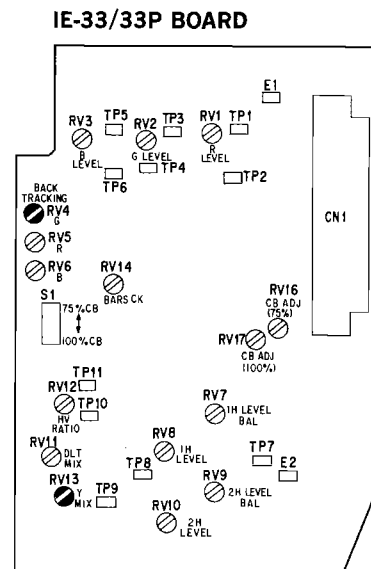

6-5-14. APERTURE CRISPENING ADJUSTMENT

Note : Section 6-5-13 ALIASING ADJUSTMENT must be complete before beginning this adjustment.

Equipment: Waveform monitor

To be extended: ES-4P

Preparation:

- Lens iris→Close "C"
- RV4/PR-159P board→Fully clockwise


Test point: VDIEO OUT

Adjustment Procedure


- Turn RV1/ES-4P board clockwise slowly and stop where just before the noise "A" on the black areas of the waveform starts to be reduced.



PR-159/159P BOARD

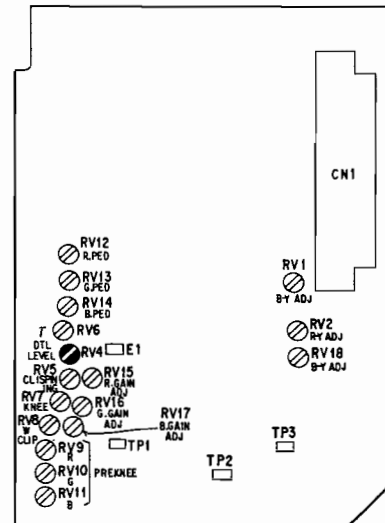

ES-4/4P BOARD

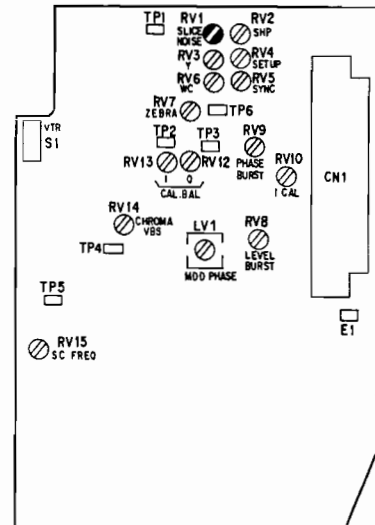

6-5-15. Y_H LEVEL ADJUSTMENT

Note : Section 6-5-14 APERTURE CRISPENING ADJUSTMENT must be complete before beginning this adjustment.

Object : Burst chart

Equipment : Waveform monitor


To be extended : ES-4P Board

Preparation : ●RV4/PR-159P board→Fully clockwise ○

Test point : VIDEO OUT

Adjustment Procedure


1. Make sure that the lens is best focused. And adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

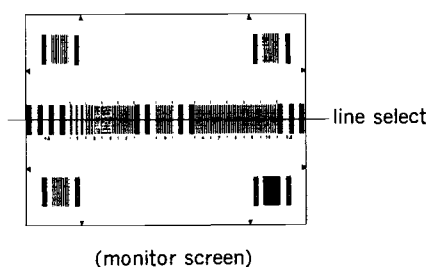

2. Adjusting point : Lens iris

Specification : $A = 560 \pm 10$ mV (0.5MHz LEVEL)

(To get the following picture, set the LINE SEL switch on the waveform monitor to "15 LINES". And select the center of the monitor screen by using the VAR control of LINE SEL.)

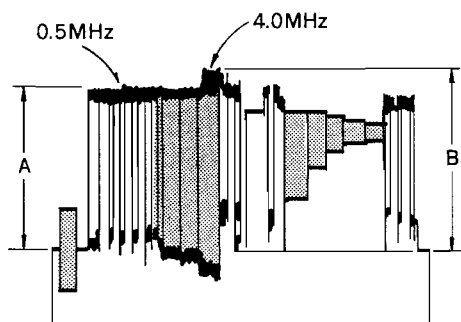


3. Adjusting point : ●RV2/ES-4P Board


Specification : $B = 595 \pm 15$ mV (4.0MHz LEVEL)

Note : After the adjustment, carry out Section 6-5-16. DTL CRISPENING ADJUSTMENT.

PR-159/159P BOARD

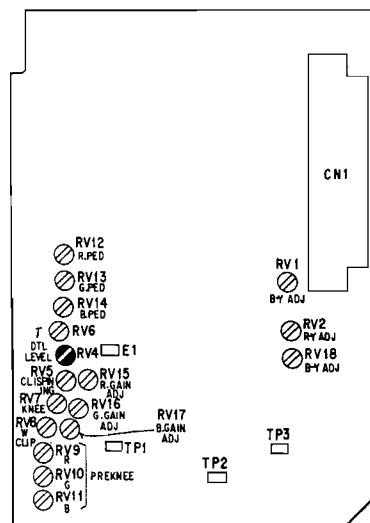

ES-4/4P BOARD

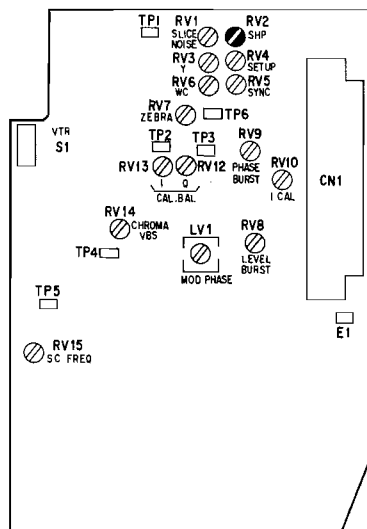

6-5-16. DTL CRISPENING ADJUSTMENT

Note: Section 6-5-15 Y_H LEVEL ADJUSTMENT must be complete before beginning this adjustment.

Object: Burst chart


Equipment: Oscilloscope, Waveform monitor

To be extended: PR-159P Board

Preparation: RV5/PR-159P board → Fully clockwise

Adjustment Procedure

1. Make sure that the lens is best focused. And adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

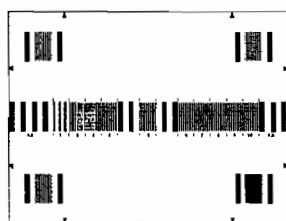


(monitor screen)

2. Test point: VIDEO OUT

Adjusting point: Lens iris


Specification: $A = 560 \pm 15$ mV

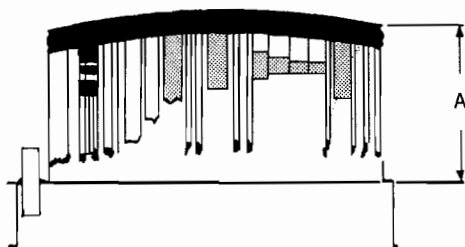

3. Test point: pin B15(GND: pin B1)/extension board

Adjusting point: RV4/PR-159P Board


Specification: $B = 250 \pm 10$ mV

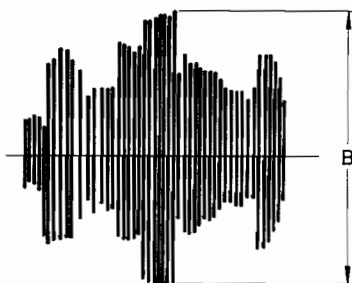

4. Test point: pin B15(GND: pin B1)/extension board


Adjusting point: RV5/PR-159P Board

Specification: $C = B \times 95\%$

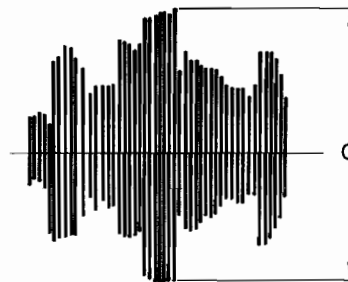

Note: After the adjustment, carry out Section 6-5-17. DTL ALIASING ADJUSTMENT.

PR-159/159P BOARD

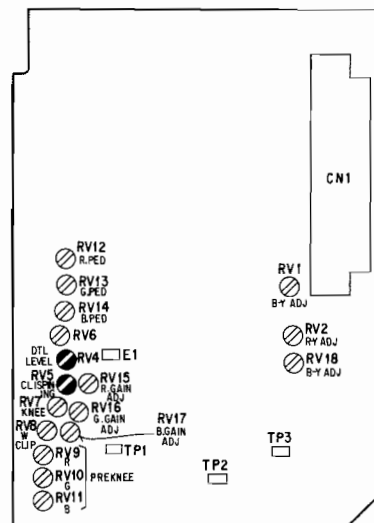

6-5-17. DTL ALIASING ADJUSTMENT

Note : Section 6-5-16 DTL CRISPENING ADJUSTMENT must be complete before beginning this adjustment.


Object : Burst chart

Equipment : Waveform monitor

Test point : VIDEO OUT


Adjustment Procedure

1. Make sure that the lens is best focused. And adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

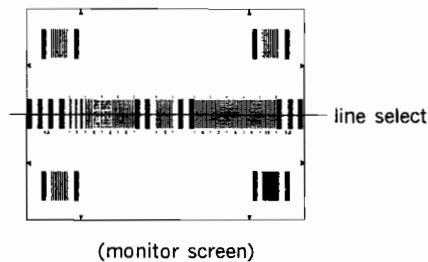

2. Adjusting point : Lens iris

Specification : $A = 560 \pm 15$ mV


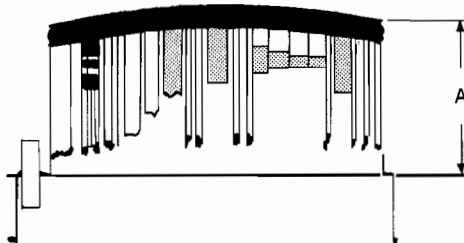


3. To get the following picture, set the LINE SEL switch on the waveform monitor to "15 LINES". And select the center of the monitor screen by using the VAR control of LINE SEL.

Adjusting point : RV11/IE-33P Board

Specification : B = Minimum

IE-33/33P BOARD

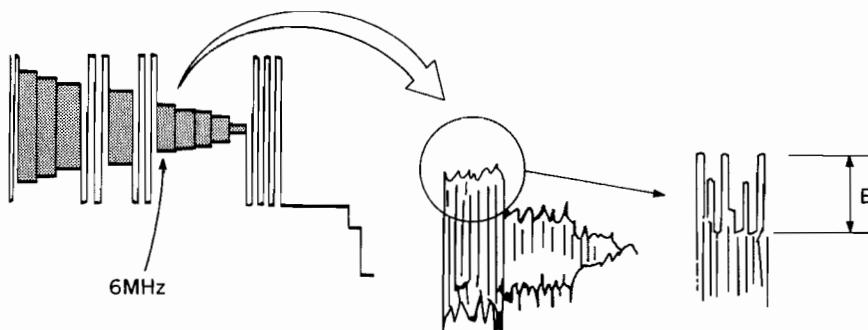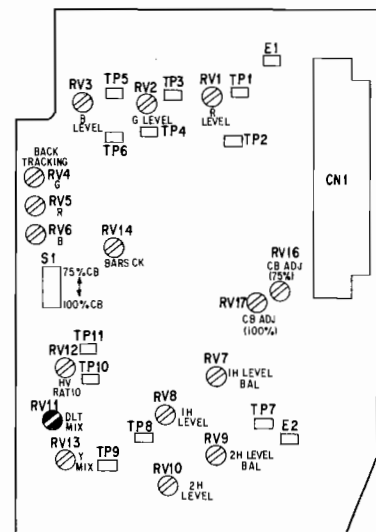

Note : After the adjustment, carry out Section 6-5-18 H/V RATIO ADJUSTMENT.

6-5-18. H/V RATIO ADJUSTMENT

Note : Section 6-5-17 DTL ALIASING ADJUSTMENT must be complete before beginning this adjustment.

Object : Grayscale chart

Equipment : B/W monitor screen

Preparation : WHITE BAL switch/camera side panel


→PRESET

Test point : VIDEO OUT

Adjusting point : ●RV12/IE-33P Board

Adjustment Procedure


1. Make sure that the lens is best focused. And adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

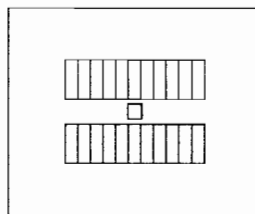


(monitor screen)

2. Adjusting point : Lens iris

Specification : $A = 560 \pm 10$ mV

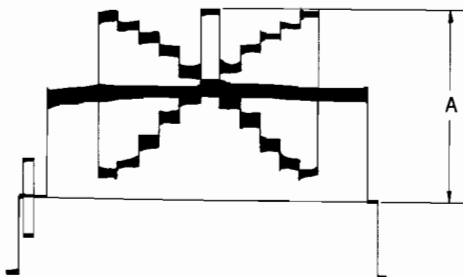


3. Observing the indicated point on the B/W monitor (See the figure below), adjust ●RV12/IE-33P board so that the DTL H and V are balanced.

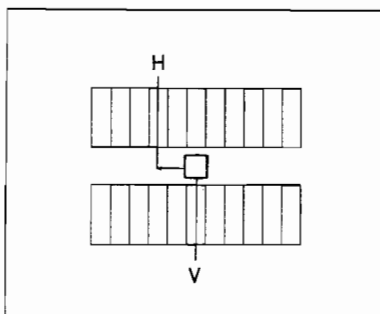

Note : After the adjustment, carry out Section 6-5-19. DETAIL ADJUSTMENT.

IE-33/33P BOARD

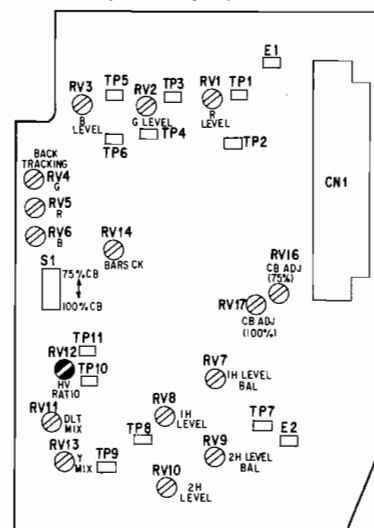

6-5-19. DETAIL LEVEL ADJUSTMENT

Note : Section 6-5-18 H/V RATIO ADJUSTMENT must be complete before beginning this adjustment.

Object : Grayscale chart

Equipment : Waveform monitor


Preparation : WHITE BAL switch/camera side panel
→PRESET

Test point : VIDEO OUT

Adjusting point : ●RV4/PR-159P Board


Adjustment Procedure

1. Adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

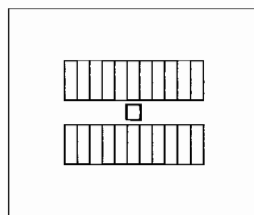


(monitor screen)

2. Adjust the lens iris so that the video level at VIDEO OUT is 560 ± 10 mV.
3. Adjust ●RV4/PR-159P board so that the detail level at both ends of the white level is 80 ± 10 mV. (Note: If the two DTL levels are not balanced, take the higher one.)

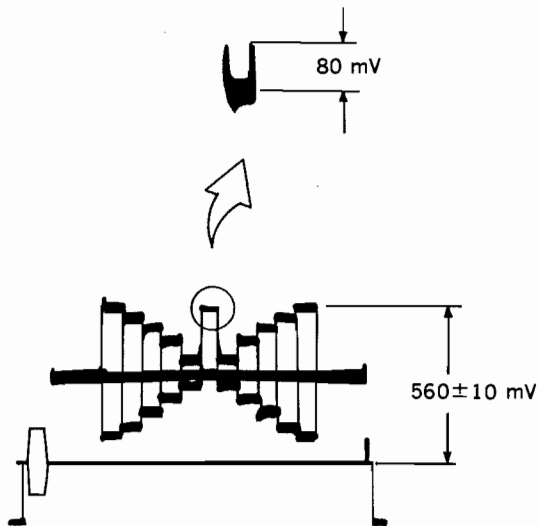

4. Repeat Section 6-5-18. H/V RATIO ADJUSTMENT and 6-5-19. DETAIL LEVEL ADJUSTMENT several times.

PR-159/159P BOARD

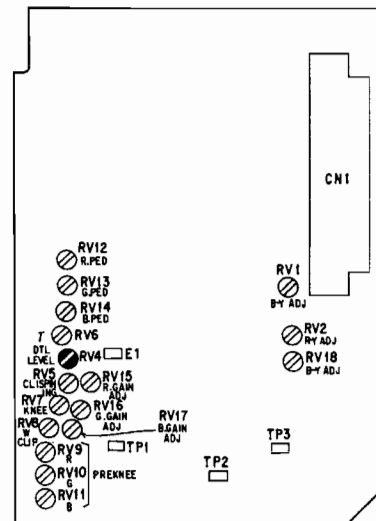

6-5-20. ES WHITE CLIP ADJUSTMENT

Object: Burst chart

Equipment: Waveform monitor

To be extended: ES-4P Board


Test point: VIDEO OUT

Preparation:

- WHITE BAL switch/camera side panel→PRESET
- GAIN switch/camera side panel→0dB

Adjustment Procedure

1. Make sure that the lens is best focused. And adjust the zoom control of the lens so that the chart frame touches the underscanned monitor frame.

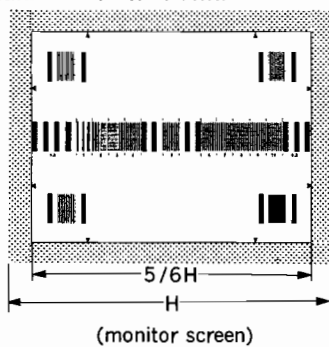


2. Adjusting point: Lens iris


Specification: $A = 770 \pm 10$ mV

3. Adjusting point: RV6/ES-4P Board

Specification: $B = 870 \pm 10$ mV (the highest level)

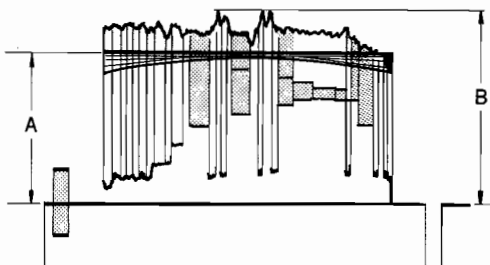

ES-4/4P BOARD

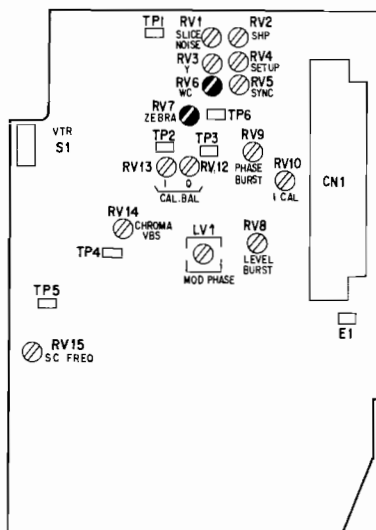

6-5-21. ZEBRA LEVEL ADJUSTMENT

Object: Grayscale chart

Equipment: Viewfinder screen


To be extended: ES-4P Board

Preparation: OUTPUT switch/camera side panel→CAM

Adjusting point: RV7/ES-4P Board


Adjustment Procedure

1. Adjust the zoom control so that the grayscale chart frame touches the understand picture frame on the monitor.

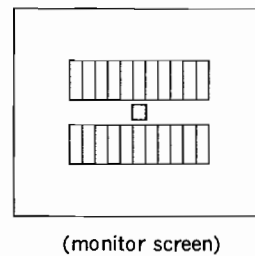


2. Adjusting point: Lens iris

Specification: $A = 490 \pm 10$ mV

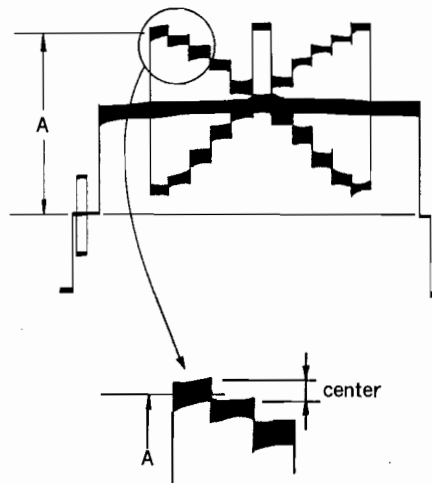

3. Adjust RV7/ES-4P board so that the zebra pattern appears in the portion A of the VF screen as shown below.

Viewfinder Screen

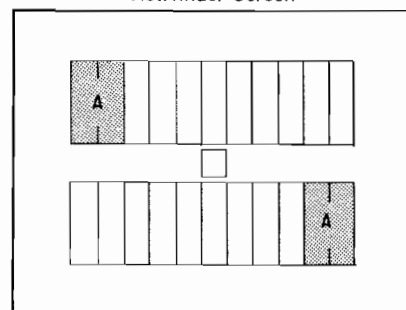


6-5-22. AUTO IRIS ADJUSTMENT

Object : Grayscale chart

Equipment : Viewfinder screen


Adjustment Procedure

1. Adjust the zoom control so that the grayscale chart frame touches the understand picture frame on the monitor.

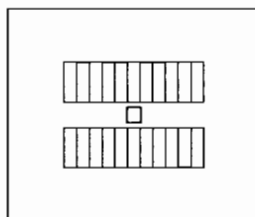

(monitor screen)

2. IRIS AUTO/MANU (Lens) → MANU
3. POWER switch/camera side panel → OFF
4. S2 (FULL FUNC ↔ OPE) / AT-70 board
→ FULL FUNC (Under side)
- S4 (ADJ/OPE) / AT-70 board → OPE (Upper side)
5. Turn the POWER switch/camera side panel ON while pressing both UP button and DOWN button on the front panel.
6. Adjust the lens iris so that the VIDEO OUT level "A" is 700 ± 5 mV.

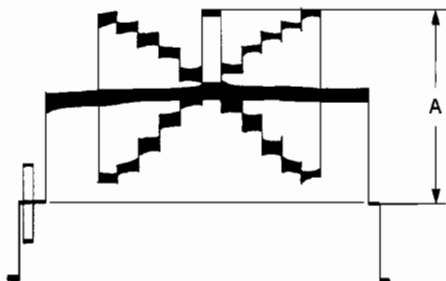

7. Press the UP button on the front panel only once for memorizing the auto iris level.

Note : After the adjustment, set S2 (FULL FUNC ↔ OPE) / AT-70 board to "OPE" (Upper side) position.

SECTION 7

VTR ELECTRICAL ALIGNMENT

7-1. PREPARATION

7-1-1. EQUIPMENT REQUIRED

- Oscilloscope (100 MHz or more)
- Vectorscope
- Waveform monitor
- Frequency counter
- Audio signal generator
- Audio level meter
- Shorting clip
- Blank tape(P5-60MP or equivalent),
(E5-60ME or equivalent)
- Alignment tape
- Variable voltage power supply (+12V, 5A)

Name (Part No.)	REC mode	Tape Type	Tape Speed	Contents	
				Video Area	PCM Area
Video freq. resp. WR5-7CE (8-967-995-18)	Hi8	ME	SP	RF Sweep 0 to 15MHz Marker : 2.0 MHz 4.5 MHz 7.0 MHz 8.5 MHz 10.0 MHz	
SP operation check WR5-5CSP (8-967-995-47)	STD	MP	SP	VIDEO SIGNAL Color-bar 4 min. Monoscope 4 min. AUDIO SIGNAL 400 Hz 60% mod.	AUDIO SIGNAL(PCM) Monoscope Section 20 Hz 20 sec. 400 Hz 20 sec. 14 kHz 20 sec. Color-bar Section 1 kHz 4 sec.
SP operation check WR5-8CSE (8-967-995-48)	Hi8	ME	SP		AUDIO SIGNAL(PCM) 400 Hz 20 min.


7-1-2. ADJUSTMENT FIXTURE

Adjustment Fixture for SS-50P board extension

- SS Flexible Board 1 (Type JH-099, 26-pin),
(Sony part No. J-6360-990-A) 2 pieces
- SS Flexible Board 2 (Type JH-100, 14-pin),
(Sony part No. J-6361-000-A) 1 piece
- SS Flexible Board 3 (Type JH-101, 13-pin),
(Sony part No. J-6361-010-A) 1 piece
- SS Flexible Board 4 (Type JH-102, 11-pin),
(Sony part No. J-6361-020-A) 1 piece

Tracking Adjustment Fixture (Type JH-541), (Sony part No. J-6365-410-A)

7-1-3. CONNECTION

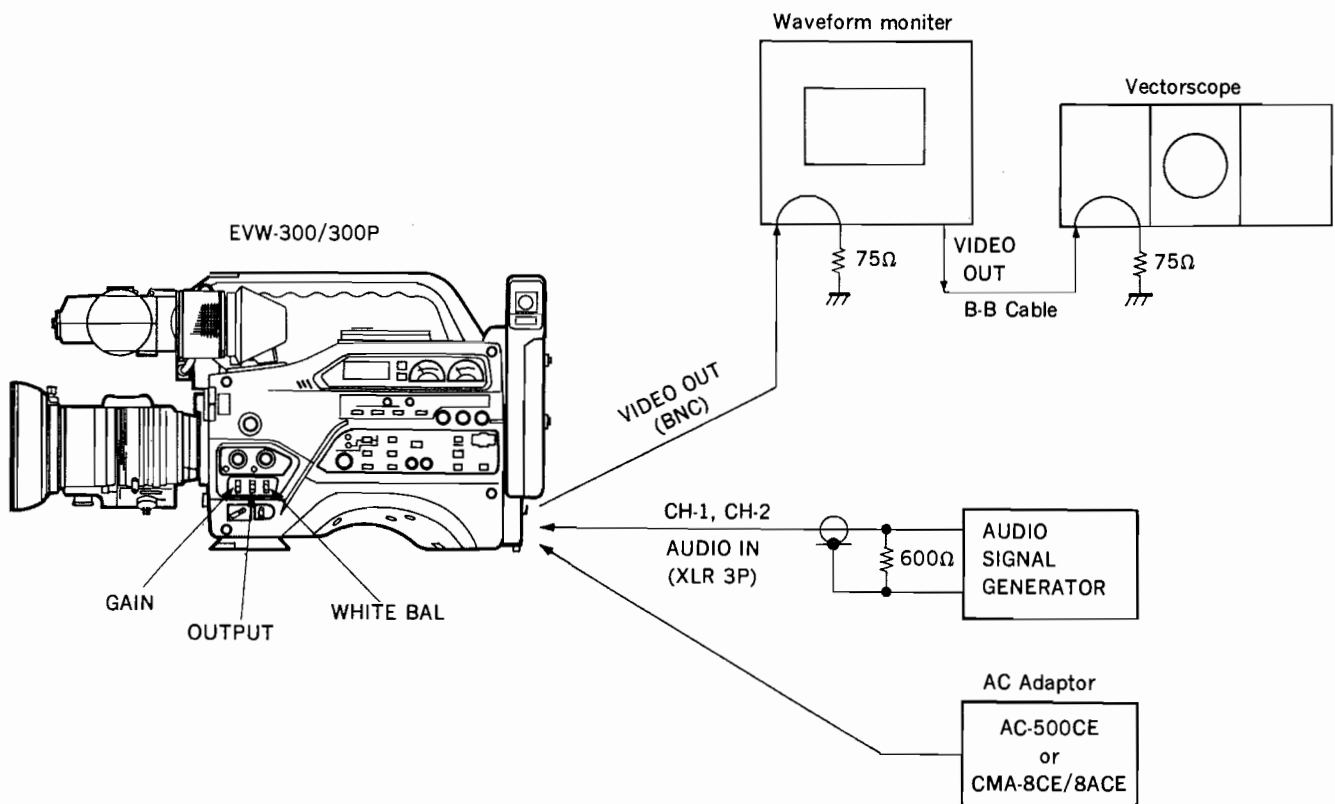

7-1-4. INITIAL SETTING AND ADJUSTMENT

• Initial Setting

Setting of the camera side

Side panel

GAIN switch : 0dB

OUTPUT switch : BARS

WHITE BAL switch : PRESET

Setting of the VTR side

Side panel

AUDIO SELECT PCM1 AUTO

PCM2 AUTO

AFM AUTO

MONITOR SELECT PCM, ST/MIX

CH1/CH2 Switches CH1.....LINE

CH2.....LINE

• Initial Adjustment

Note : 1. Before adjustment, connect the equipments referring to Section 7-1-3 CONNECTION. Check that it meets the specifications in Section 7-1-5 COLOR BAR SIGNAL.

2. Before adjustment, turn the POWER ON and allow for 10 minute warm-up time.


Note : Do not touch the switches as mentioned above without particular indication.

7-1-5. COLOR BAR SIGNAL

Equipment: Vectorscope, Waveform monitor

Preparation: OUTPUT switch/Camera side panel→BARS


Specification:

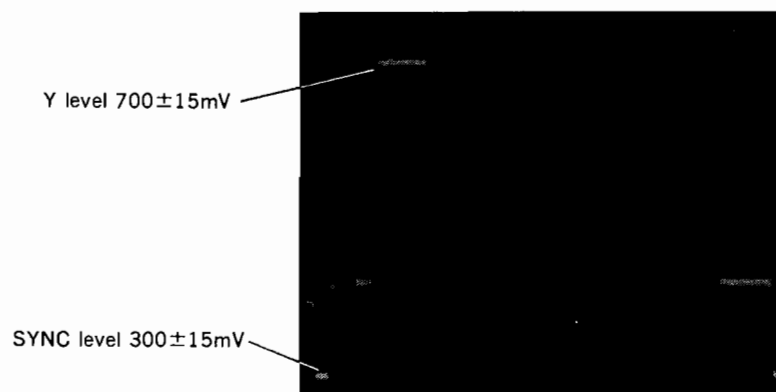

Note : Partial difference between scale and signal level is caused by photographic error.

Chroma Level

- Adjust the beam spots of each color (R, YL, G, CY, B and MG) to be inside the "田" mark.

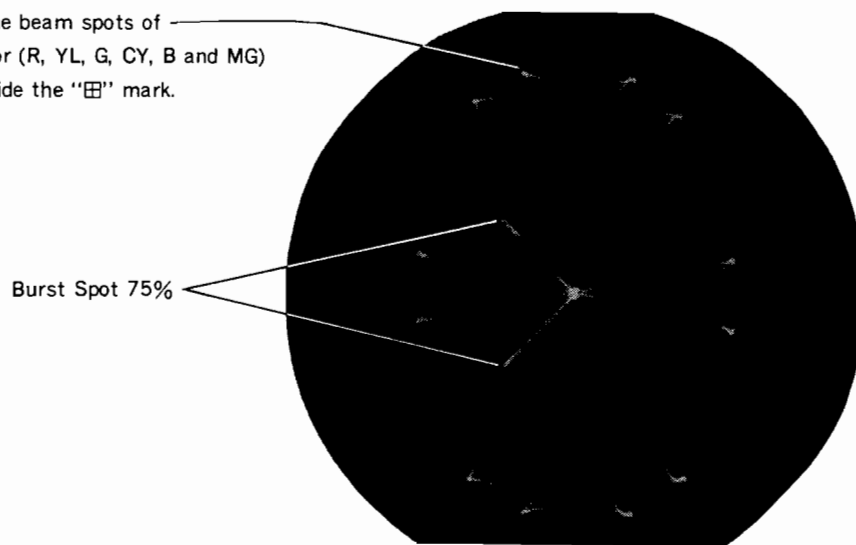

Note : When it does not meet the specifications, perform Section 6-4. Encoder System Adjustment.

7-2. SERVO SYSTEM ADJUSTMENT

7-2-1. PWM OSCILLATION FREQUENCY ADJUSTMENT

Equipment: Frequency counter

To be adjusted: SS-50P Board

Preparation:


- Play back the color-bar signal portion of the alignment tape WR5-5CSP.

Test point: Collector of the transistor Q300(GND: E1)/SS-50P Board

Adjusting point: ⚙ RV300/SS-50P Board

Specification: 400 ± 2 kHz

SS-50P BOARD

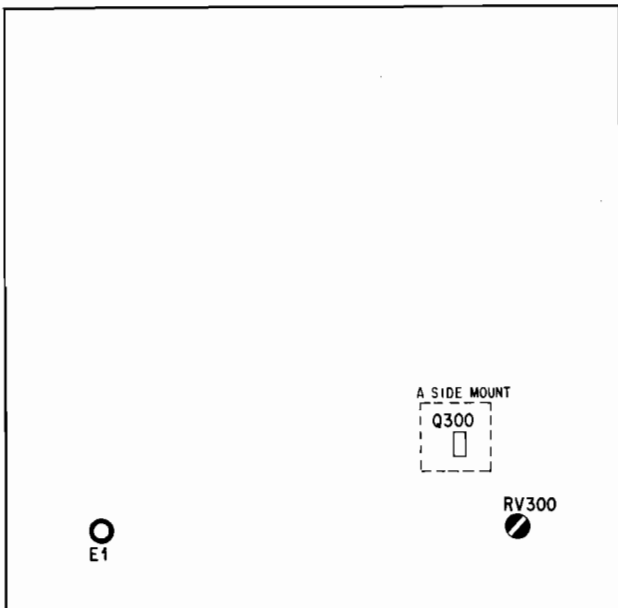

7-3. AUDIO SYSTEM ADJUSTMENT

7-3-1. AUDIO AGC ADJUSTMENT

Equipment: Audio level meter

To be adjusted: FP-40P Board

Preparation:

- AUDIO IN: CH-1 400 Hz, +4 dBu

- AUDIO INPUT SELECT:
PCM1 CH-1/CAM→CH-1

- AUDIO SELECT:
PCM1 AUTO/MAN→AUTO

- EE mode

Test point: TP3(GND: E1)/FP-40P Board

Adjusting point: ⚙ RV4/FP-40P Board

Specification: -10.0 ± 0.2 dBu

7-3-2. AUDIO AFM EE LEVEL ADJUSTMENT

Equipment: Audio level meter

To be adjusted: FP-40P Board

Preparation:

- AUDIO IN: CH-1 400 Hz, +4 dBu

- AUDIO INPUT SELECT:
PCM1 CH-1/CAM→CAM

- AUDIO SELECT:
AFM AUTO/MAN→AUTO


- EE mode

Test point: TP201(GND: E1)/FP-40P Board

Adjusting point: ⚙ RV203/FP-40P Board

Specification: -10.0 ± 0.2 dBu

FP-40P BOARD

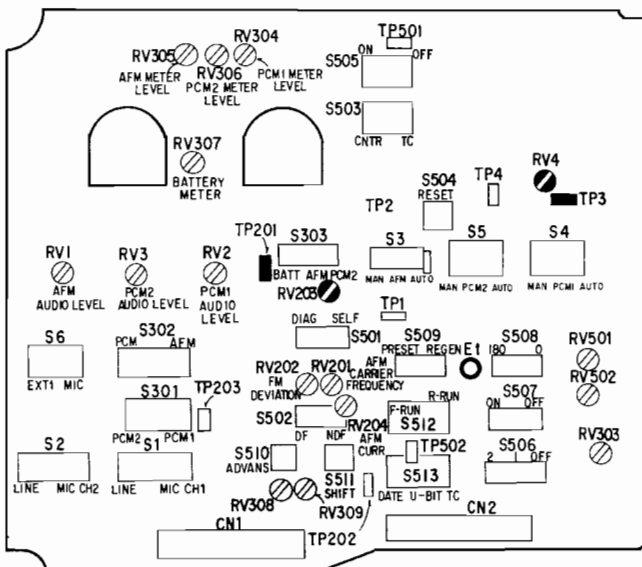

7-3-3. PCM MASTER CLOCK ADJUSTMENT

Equipment: Frequency counter

To be adjusted: AU-162P Board

Preparation:

1. Connect TP201/AU-162P and TP202/AU-162P with shorting clip.
2. Connect TP203/AU-162P and TP109/AU-162P with shorting clip.
3. EE mode

Test point: TP103(GND: E101)/AU-162P Board

Adjusting point: ● CV201/AU-162P Board

Specification: 11.50 ± 0.01 MHz

Note: After the adjustment, remove a shorting clip.

7-3-4. PCM PLAYBACK VCO FREE-FREQUENCY ADJUSTMENT

Equipment: Frequency counter

To be adjusted: AU-162P Board

Preparation:

1. Connect TP104/AU-162P and TP109/AU-162P with shorting clip.
2. Connect TP105/AU-162P and TP109/AU-162P with shorting clip.
3. Play back the Audio 400Hz portion of the alignment tape WR5-5CSP.

Test point: TP106(GND: E101)/AU-162P Board

Adjusting point: ● RV102/AU-162P Board

Specification: 11.50 ± 0.01 MHz

Note: After the adjustment, remove a shorting clip.

7-3-5. AUDIO PCM D/A CONVERTER LEVEL ADJUSTMENT

Equipment: Audio level meter

To be adjusted: AU-162P Board

Preparation:

- Play back the Audio 400Hz portion of the alignment tape WR5-5CSP.

Adjusting point: ● RV6/AU-162P Board

Specification: TP3(GND: E1)/AU-162P Board;

-10.0 ± 0.2 dBu

TP4(GND: E1)/AU-162P Board;

-10.0 ± 0.2 dBu

Note: If there is the level difference between the TP3 and TP4, adjust the RV6 to be on the center value.

7-3-6. AUDIO PCM NR DECODE LEVEL ADJUSTMENT

Equipment: Audio level meter

To be adjusted: AU-162P Board

Preparation:

- Play back the Audio 400Hz portion of the alignment tape WR5-5CSP.

Adjusting point: ● RV3/AU-162P Board

Specification: TP1(GND: E1)/AU-162P Board;


-14.0 ± 0.5 dBu

TP2(GND: E1)/AU-162P Board;

-14.0 ± 0.5 dBu

Note: If there is the level difference between the TP1 and TP2, adjust the RV3 to be on the center value.

AU-162P BOARD

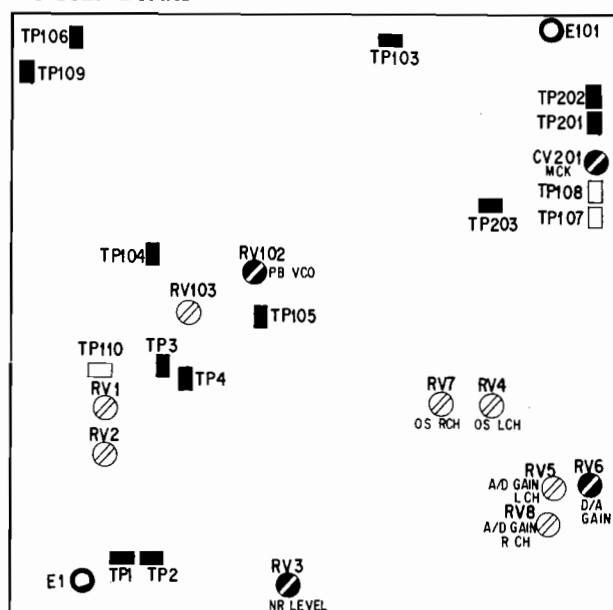

7-3-7. AUDIO PCM A/D CONVERTER OFFSET ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: AU-162P Board

Preparation:


- AUDIO IN: 400 Hz, $-\infty$
- AUDIO SELECT:
 - PCM1 AUTO/MAN→MAN
 - PCM2 AUTO/MAN→MAN
- REC mode
- AUDIO LEVEL PCM1 control(side panel)→Fully counter-clockwise
- AUDIO LEVEL PCM2 control(side panel)→Fully counter-clockwise

Test point: CH1 TP108(GND: E101)/AU-162P Board

CH2 TP107(GND: E101)/AU-162P Board

Adjusting point: ●RV4/AU-162P Board

●RV7/AU-162P Board

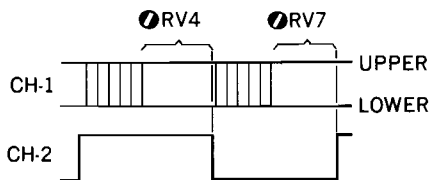

Adjust upper and lower brightnesses to be the same.

7-3-8. PCM1 EE LEVEL ADJUSTMENT

Equipment: Audio level meter

To be adjusted: AU-162P Board

Preparation:

- AUDIO IN: CH-1 400 Hz, +4 dBu
- AUDIO INPUT SELECT:
 - PCM1 CH-1/CAM→CH-1
- AUDIO SELECT:
 - PCM1 AUTO/MAN→AUTO
- EE mode

Test point: TP1(GND: E1)/AU-162P Board

Adjusting point: ●RV1/AU-162P Board

Specification: -18.0 ± 0.2 dBu

7-3-9. PCM2 EE LEVEL ADJUSTMENT

Equipment: Audio level meter

To be adjusted: AU-162P Board

Preparation:


- AUDIO IN: CH-2 400 Hz, +4 dBu
- AUDIO SELECT:
 - PCM2 AUTO/MAN→AUTO
- EE mode

Test point: TP2(GND: E1)/AU-162P Board

Adjusting point: ●RV2/AU-162P Board

Specification: -18.0 ± 0.2 dBu

AU-162P BOARD

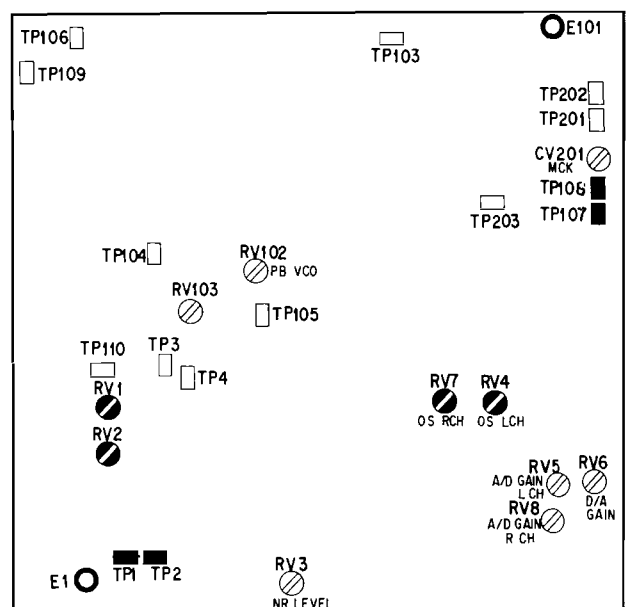

7-3-10. PCM1 REC LEVEL ADJUSTMENT

Equipment: Audio level meter

To be adjusted: AU-162P Board

Preparation:

- AUDIO IN: CH-1 400 Hz, +4 dBu
- AUDIO INPUT SELECT:
PCM1 CH1/CAM→CH-1
- AUDIO SELECT:
PCM1 AUTO/MAN→AUTO
- Adjust as follows while performing the self-recording/play back with a E5-60ME tape.

Test point: TP1(GND: E1)/AU-162P Board

Adjusting point: RV5/AU-162P Board

Specification: -14.0 ± 0.5 dBu

7-3-11. PCM2 REC LEVEL ADJUSTMENT

Equipment: Audio level meter

To be adjusted: AU-162P Board

Preparation:


- AUDIO IN: CH-2 400 Hz, +4 dBu
- AUDIO SELECT:
PCM2 AUTO/MAN→AUTO
- Adjust as follows while performing the self-recording/play back with a E5-60ME tape.

Test point: TP2(GND: E1)/AU-162P Board

Adjusting point: RV8/AU-162P Board

Specification: -14.0 ± 0.5 dBu

AU-162P BOARD

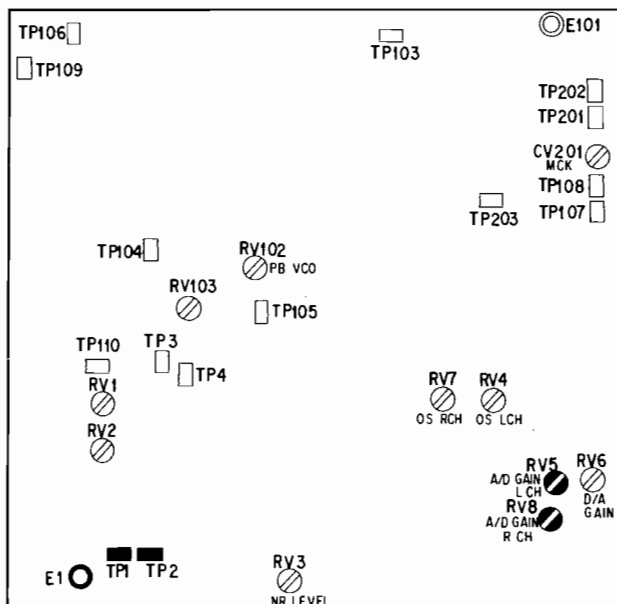

7-3-12. LINE AU-1 MONITOR OUT LEVEL ADJUSTMENT

Equipment: Audio level meter

To be adjusted: FP-40P Board

Preparation:

- AUDIO IN: CH-1 400 Hz, +4 dBu
- AUDIO INPUT SELECT:
PCM1 CH-1/CAM→CH-1
- AUDIO SELECT:
PCM1 AUTO/MAN→AUTO
- MONITOR SELECT:
AFM/PCM→PCM
PCM1/ST • MIX/PCM2→ST • MIX
- EE mode

Test point: AUDIO OUT-L connector(terminated with 47kΩ)

Adjusting point: RV308/FP-40P Board

Specification: -10.0 ± 0.2 dBu

7-3-13. LINE AU-2 MONITOR OUT LEVEL ADJUSTMENT

Equipment: Audio level meter

To be adjusted: FP-40P Board

Preparation:


- AUDIO IN: CH-2 400 Hz, +4 dBu
- AUDIO SELECT:
PCM2 AUTO/MAN→AUTO
- MONITOR SELECT:
AFM/PCM→PCM
PCM1/ST • MIX/PCM2→ST • MIX
- EE mode

Test point: AUDIO OUT-R connector(terminated with 47kΩ)

Adjusting point: RV309/FP-40P Board

Specification: -10.0 ± 0.2 dBu

FP-40P BOARD

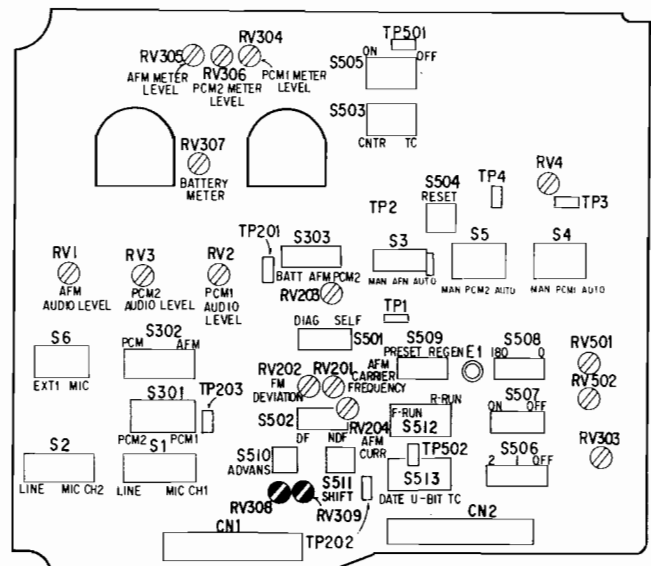

7-3-14. PCM1 METER ADJUSTMENT

Equipment: PCM1 level meter

To be adjusted: FP-40P Board


Preparation:

- AUDIO IN: CH-1 400 Hz, +4 dBu
- AUDIO INPUT SELECT:
PCM1 CH-1/CAM→CH-1
- AUDIO SELECT:
PCM1 AUTO/MAN→AUTO
- EE mode

Adjusting point: ●RV304/FP-40P Board

Specification: The pointer should stay at 0.

PCM1 level meter

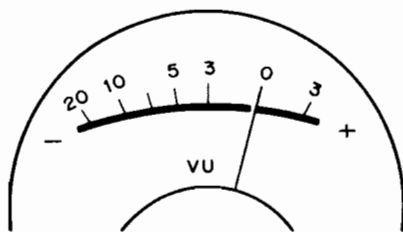

The pointer should stay at 0.

7-3-16. AFM METER ADJUSTMENT

Equipment: PCM2/AFM/BATT level meter

To be adjusted: FP-40P Board


Preparation:

- AUDIO IN: CH-1 400 Hz, +4 dBu
- AUDIO INPUT SELECT:
PCM1 CH-1/CAM→CAM
- AUDIO SELECT:
AFM AUTO/MAN→AUTO
- METER SELECT:
PCM2/AFM/BATT→AFM
- EE mode

Adjusting point: ●RV305/FP-40P Board

Specification: The pointer should stay at 0.

PCM2/AFM/BATT level meter

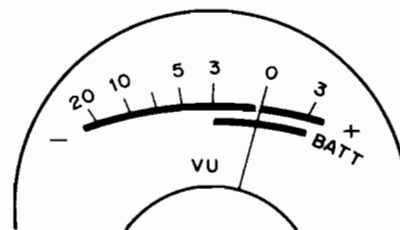

The pointer should stay at 0.

7-3-15. PCM2 METER ADJUSTMENT

Equipment: PCM2/AFM/BATT level meter

To be adjusted: FP-40P Board


Preparation:

- AUDIO IN: CH-2 400 Hz, +4 dBu
- AUDIO SELECT:
PCM2 AUTO/MAN→AUTO
- METER SELECT:
PCM2/AFM/BATT→PCM2
- EE mode

Adjusting point: ●RV306/FP-40P Board


Specification: The pointer should stay at 0.

PCM2/AFM/BATT level meter

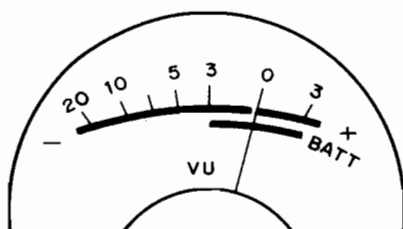

The pointer should stay at 0.

FP-40P BOARD

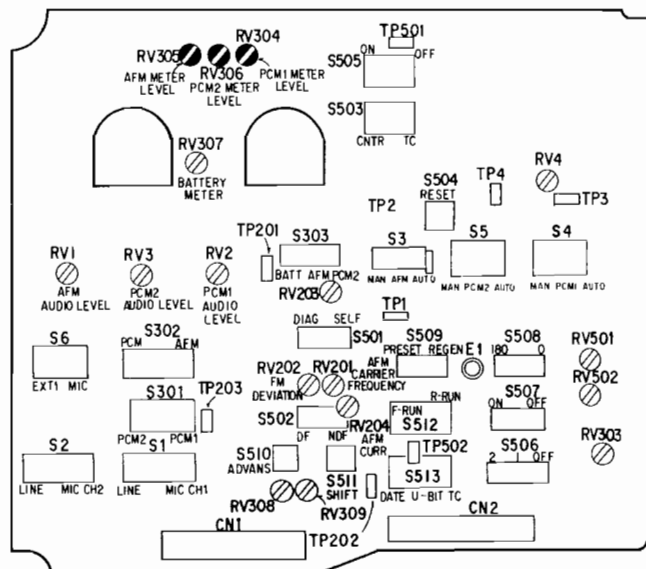


7-3-17. BATTERY METER ADJUSTMENT

Equipment: PCM2/AFM/BATT level meter

To be adjusted: FP-40P Board

Preparation:

1. POWER switch: OFF
2. METER SELECT switch (side panel)→"BATT"
3. Connect the DC IN connector/rear panel and the variable voltage power supply.

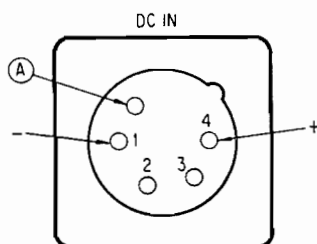


(To supply power without using the XLR plug, set the MICRO switch ① on the DC IN connector to ON. If the switch is OFF, power is not supplied to the EVW-300P unit.)

4. POWER switch: ON

Adjustment Procedure

1. Turn the VARIABLE control on the variable voltage power supply slowly until the WARNING lamp/side panel just starts to be light up.
2. Test point: PCM2/AFM/BATT level meter
Adjusting point: ①RV307/FP-40P Board
Specification: Adjust the ①RV307 so that the pointer stays on the left side of the green belt. (within a pointer width)

PCM2/AFM/BATT level meter

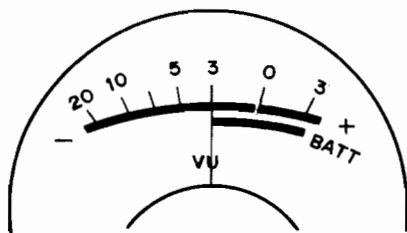

Adjust the RV307 so that the pointer stays on the left side of the green belt. (within a pointer width)

7-3-18. AUDIO AFM CARRIER FREQUENCY ADJUSTMENT

Equipment: Frequency counter

To be adjusted: FP-40P Board

Preparation:

- AUDIO IN: No signal
- AUDIO INPUT SELECT:
PCM1 CH-1/CAM→CAM
- AUDIO SELECT:
AFM AUTO/MAN→AUTO
- EE mode

Test point: TP203 (GND: E1)/FP-40P Board

Adjusting point: ①RV201/FP-40P Board

Specification: 1.5 ± 0.002 MHz

7-3-19. AFM DEVIATION ADJUSTMENT

Equipment: Audio level meter

To be adjusted: FP-40P Board

Preparation:


- Play back the Audio 400 Hz portion of the alignment tape WR5-5CSP.

Test point: TP201 (GND: E1)/FP-40P Board

Adjusting point: ①RV202/FP-40P Board

Specification: -10.0 ± 0.2 dBu

FP-40P BOARD

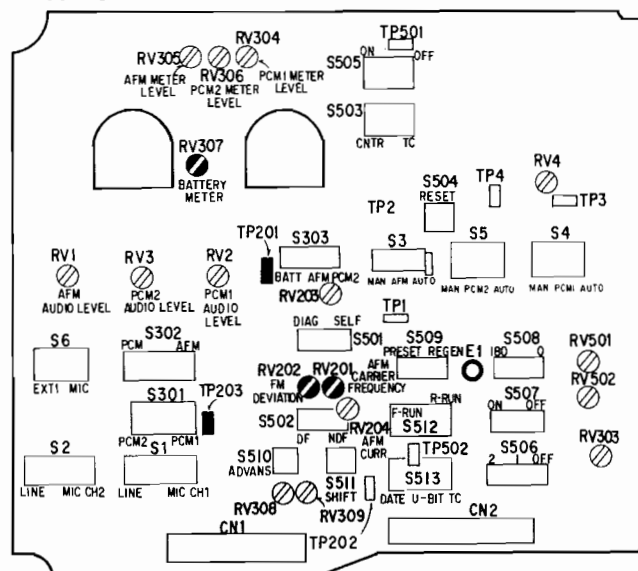

7-3-20. PCM REC CURRENT ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: AU-162P Board

Preparation:


- Insert a E5-60ME tape.
- REC mode

Test point: TP101/SBX-1508 Board


Trigger: TP110/AU-162P Board

Adjusting point: RV103/AU-162P Board


Specification: $A = 195 \pm 10$ mVp-p

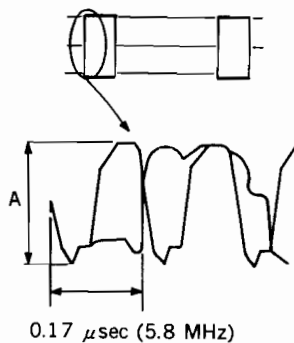

SBX-1508 BOARD

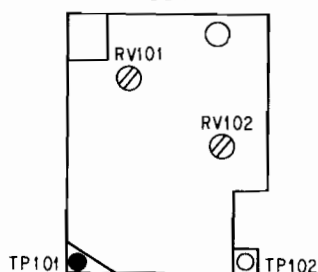

AU-162P BOARD

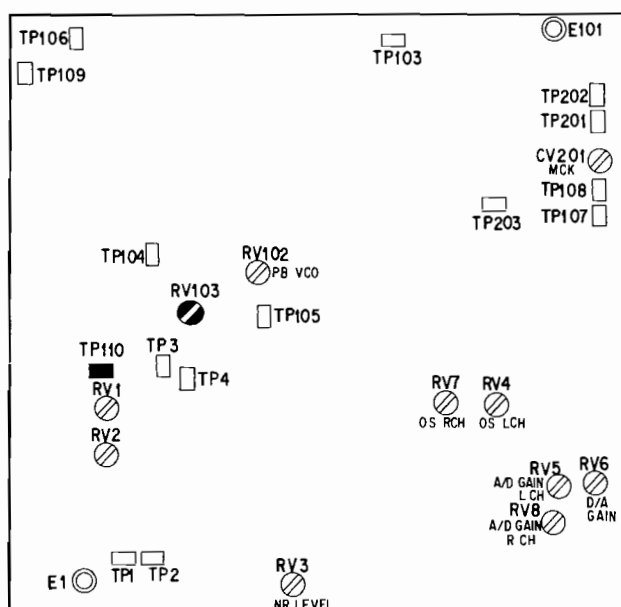


7-4. VIDEO SYSTEM ADJUSTMENT

Preparation:

- Open AU-162P board and remove four screws securing CR-43P board.

Turn the component side of CR-43P board toward you and fix with two screws as illustrated.

Be sure to put an insulating sheet between the CR-43P board and the unit.

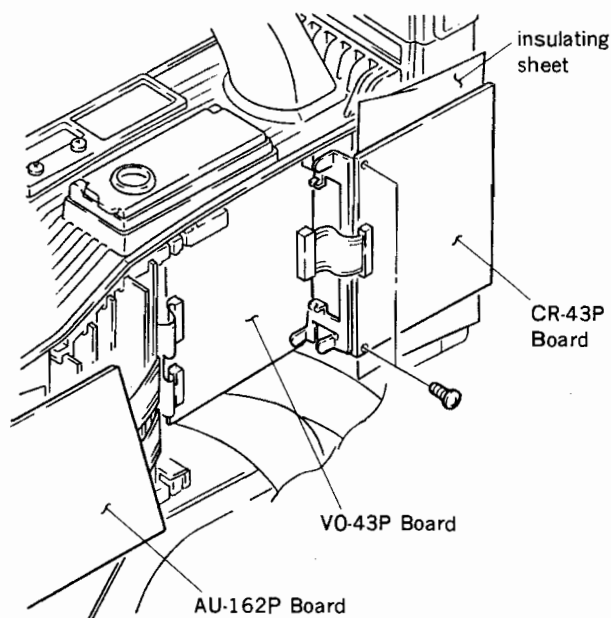

7-4-1. PB RF FREQUENCY ADJUSTMENT

Equipment: Oscilloscope

Preparation:


1. Connect the connector CN1 on the tracking adjustment fixture and the connector CN24 on the MB-384P Board.
2. Play back the alignment tape WR5-7CE.

Test point: TP4(GND: TPE1)/Tracking adjustment fixture


Trigger: TP3/Tracking adjustment fixture

Adjustment Procedure

1. TRIG mode/Oscilloscope → - side
2. Adjusting point: ●RV102/SBX-1508 Board
Specification: $A(8.5\text{MHz}) = B(4.5\text{MHz}) \times 67\%$

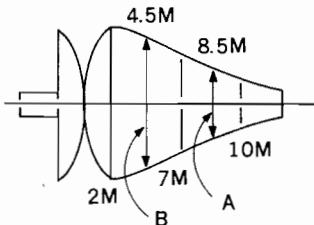


3. TRIG mode/Oscilloscope → + side
4. Adjusting point: ●RV101/SBX-1508 Board
Specification: $C(8.5\text{MHz}) = D(4.5\text{MHz}) \times 67\%$

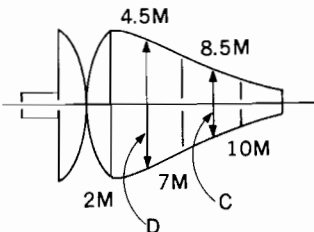

Note: After the adjustment, remove the connector CN1 on the tracking adjustment fixture.

SBX-1508 BOARD

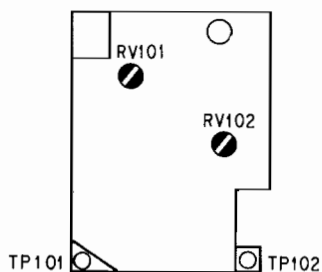

7-4-2. REC Y LEVEL ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: VO-43P Board


Preparation:

- OUTPUT switch/Camera side panel → BARS
- EE mode


Test point: TP1(GND: E1)/VO-43P Board

Adjusting point: ●RV251/VO-43P Board

Specification: $A = 0.5 \pm 0.05 \text{ Vp-p}$

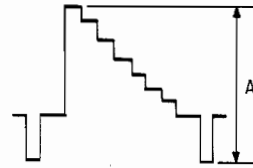

VO-43P BOARD

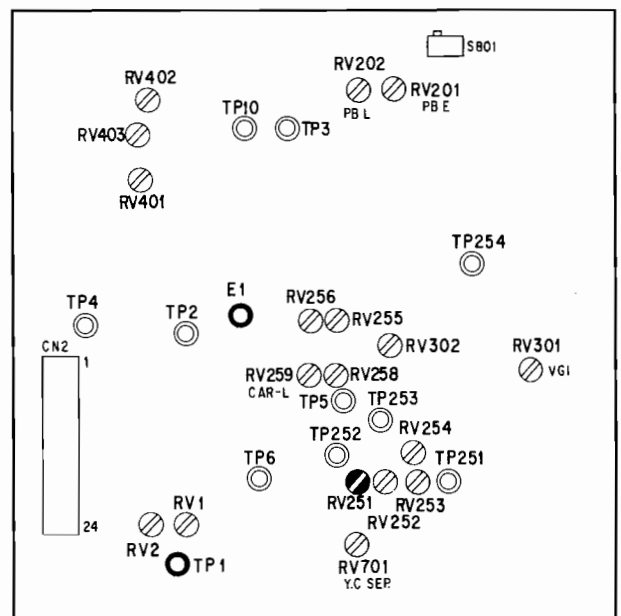

7-4-3. Y/C SEP ADJUSTMENT

Equipment : Oscilloscope

To be adjusted : VO-43P Board


Preparation :

1. OUTPUT switch/Camera side panel→BARS
2. Switch setting of the side panel
 - ①SELF DIAG switch→ON
 - ②REGEN/PRESET switch→PRESET
 - ③R-RUN/SET/F-RUN switch→SET
 - ④ADVANCE/SHIFT button→Set the Menu Number to 104.
 - ⑤R-RUN/SET/F-RUN switch→R-RUN
 - ⑥ADVANCE/SHIFT button→Set to 2.
 - ⑦Put the RESET button.

104 2

RF SERVO HUMID SLACK TAPE BATT
END

3. S801/VO-43P Board→A side

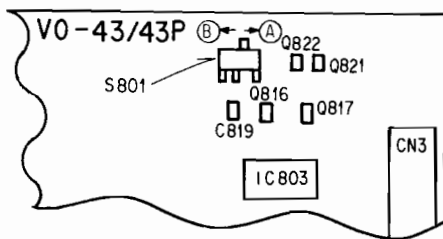


4. S1(VTR-TEST)/ES-4P Board→Under side

5. EE mode

Test point : TP254(GND : E1)/VO-43P Board

Adjusting point : RV252, RV701/VO-43P Board

Specification : Level "A"=Minimum (≤ 20 mV)

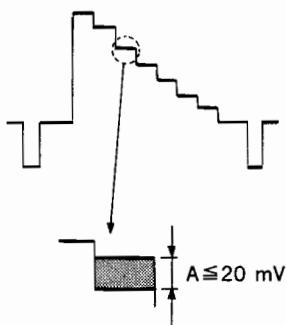


Note : After the adjustment, set switches as follows.

S801/VO-43P Board→B side

S1(VTR-TEST)/ES-4P Board→Upper side

SELF DIAG switch(side panel)→OFF

VO-43P BOARD

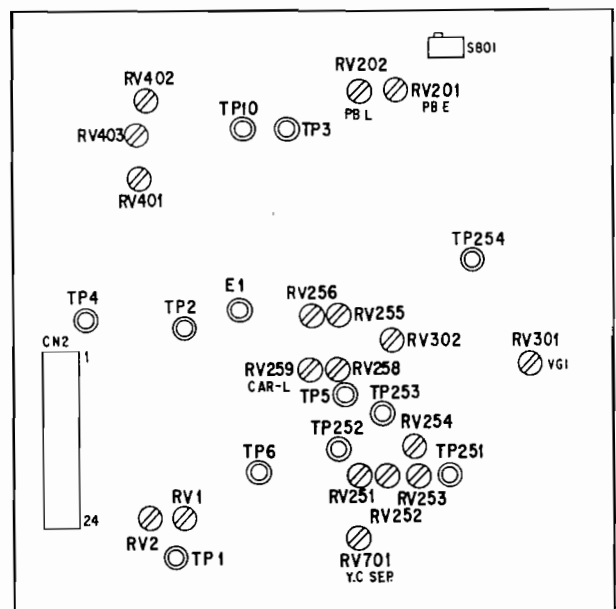

7-4-4. IR ADJUSTMENT

Equipment : Oscilloscope

To be adjusted : VO-43P Board


Preparation :

1. POWER switch→OFF
2. R848 (A SIDE ; zone A-3)/VO-43P Board→Delete
3. Connect the CL692(B SIDE ; zone C-3)/VO-43P Board to +5V line (A) of L701) with the resistor 3.9kΩ.
4. POWER switch→ON
5. OUTPUT switch/Camera side panel→BARS
6. Switch setting of the side panel
 - ①SELF DIAG switch→ON
 - ②REGEN/PRESET switch→PRESET
 - ③R-RUN/SET/F-RUN switch→SET
 - ④ADVANCE/SHIFT button→Set the Menu Number to 104.
 - ⑤R-RUN/SET/F-RUN switch→R-RUN
 - ⑥ADVANCE/SHIFT button→Set to 2.
 - ⑦Put the RESET button.

104 2

RF SERVO HUMID SLACK TAPE BATT
END

7. S801/VO-43P Board→A side

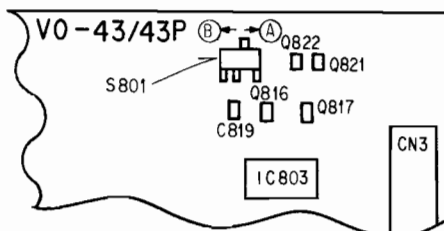


8. S1(VTR-TEST)/ES-4P Board→Under side

9. EE mode

Test point : TP252(GND : E1)/VO-43P Board

Adjusting point : RV254/VO-43P Board

Specification : Level "A"→Minimum

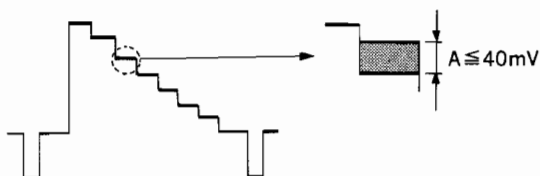

Note : After the adjustment, set switches as follows.

POWER switch→OFF

S801/VO-43P Board→B side

S1(VTR-TEST)/ES-4P Board→Upper side

R848/VO-43P Board→Return to normal position.

CL692(soldering side)/VO-43P Board→Return to normal position.

SELF DIAG switch(side panel)→OFF

7-4-5. EMPHASIS LEVEL ADJUSTMENT

Equipment : Oscilloscope

To be adjusted : VO-43P Board

Preparation :



• OUTPUT switch/Camera side panel→BARS

• EE mode


Test point : TP253(GND : E1)/VO-43P Board

Adjusting point : RV301/VO-43P Board

Specification : A=0.48±0.05 Vp-p

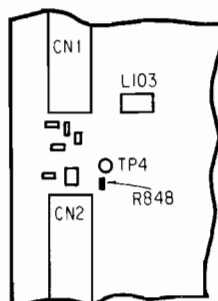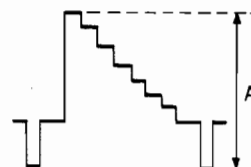


VO-43P A-SIDE

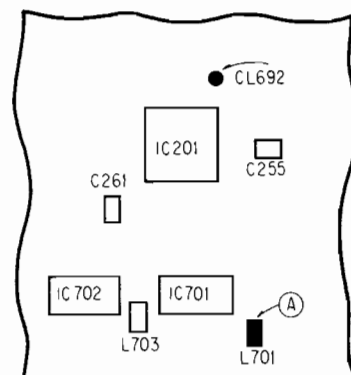

VO-43P B-SIDE

VO-43P BOARD

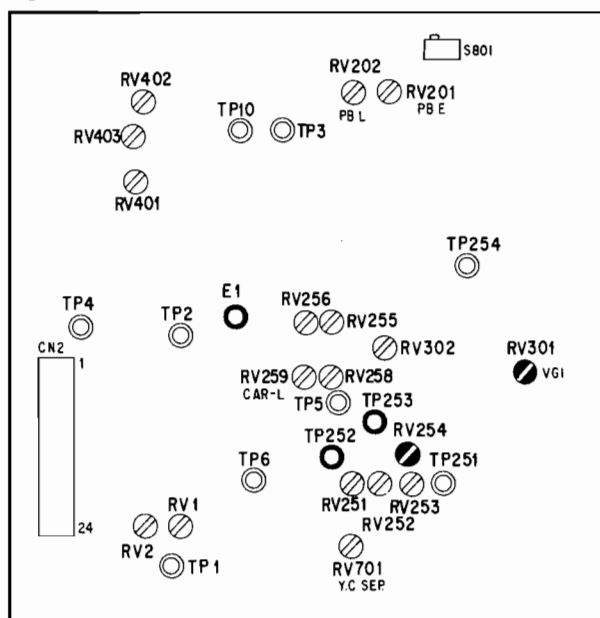

7-4-6. CHROMA EMPHASIS ADJUSTMENT

Equipment: Oscilloscope


To be adjusted: CR-43P Board

Preparation:

- OUTPUT switch/Camera side panel→BARS

Test point: TP601 (GND: E101)/CR-43P board

Adjusting point: ① FL602/CR-43P Board

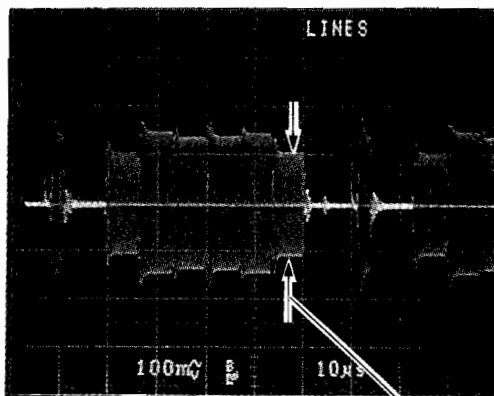

minimum

7-4-7. CHROMA JOG PHASE ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: CR-43P Board


Preparation:

- Insert a E5-60ME tape.
- EE mode


Test point: IC501-pin 18/CR-43P Board

Adjusting point: ① RV503/CR-43P Board

Specification: $A=3.0\pm0.1V_{dc}$

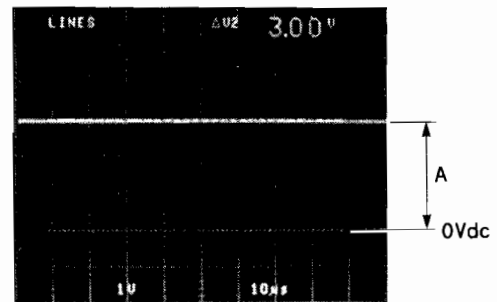

CR-43P BOARD

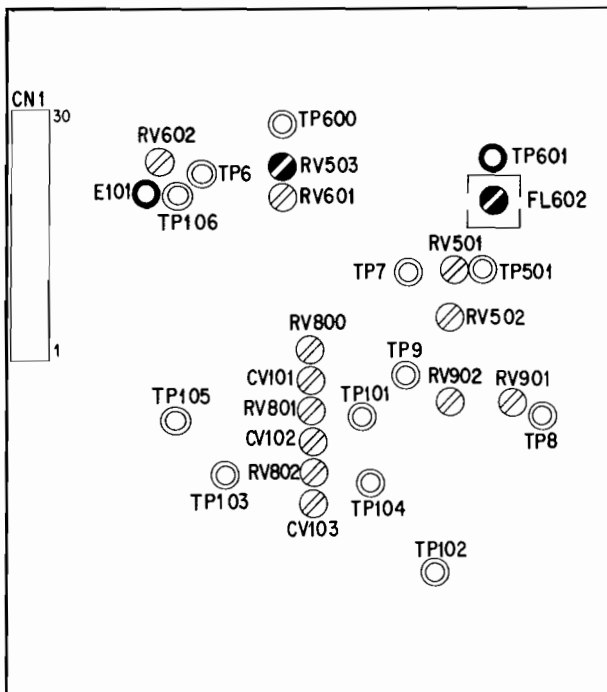

7-4-8. BURST ADJUSTMENT

Equipment: Vectorscope

To be adjusted: CR-43P Board

Preparation:


- Play back the color-bar signal portion of the alignment tape WR5-8CSE.
- Search FWD or search REV mode.

Test point: VIDEO OUT/EVW-300P rear panel

Adjusting point: ●RV502/CR-43P Board

Adjustment Procedure

- Adjust ●RV502/CR-43P Board so that the dimension of the circle is equal to the burst level.

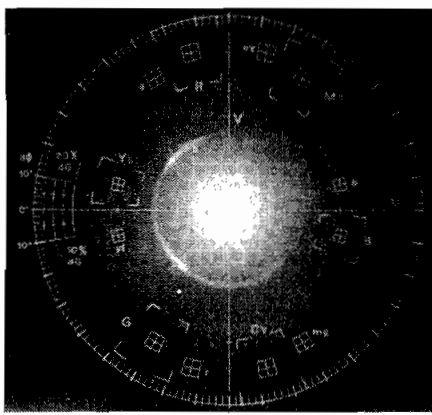

7-4-9. Hi8 MODE PB Y LEVEL ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: VO-43P Board


Preparation:

- Play back the color-bar signal portion of the alignment tape WR5-8CSE.


Test point: TP251(GND: E1)/VO-43P Board

Adjusting point: ●RV201/VO-43P Board


Specification: $A=0.5\pm0.05$ Vp-p

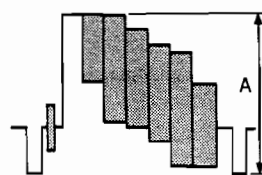

CR-43P BOARD

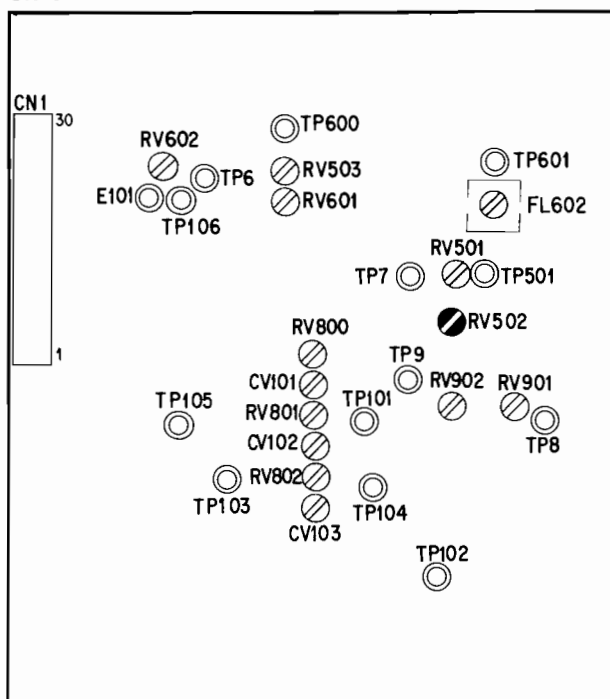

VO-43P BOARD

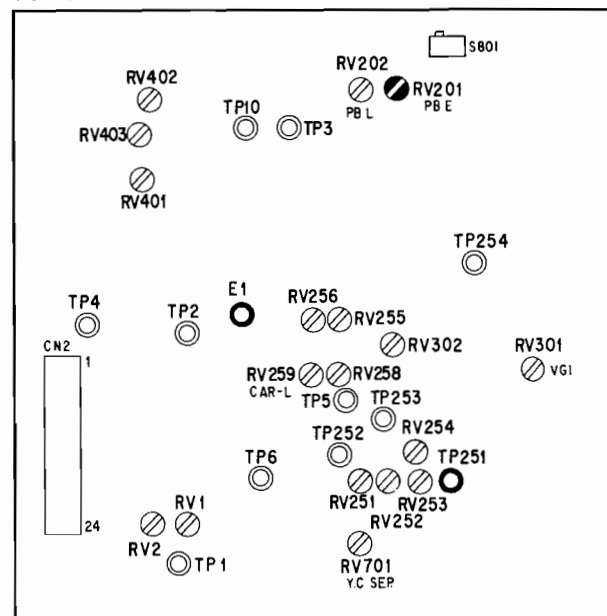

7-4-10. STD MODE PB Y LEVEL ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: VO-43P Board


Preparation:

- Play back the color-bar signal portion of the alignment tape WR5-5CSE.

Test point: TP251(GND: E1)/VO-43P Board

Adjusting point: ●RV202/VO-43P Board

Specification: $A = 0.5 \pm 0.05$ Vp-p

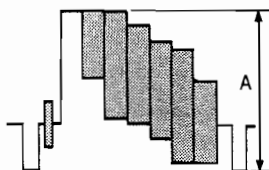

7-4-12. EE LINE OUT LEVEL ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: VO-43P Board


Preparation:

- OUTPUT switch/Camera side panel→BARS
- EE mode

Test point: VIDEO OUT

Adjusting point: ●RV1/VO-43P Board

Specification: $A = 1.0 \pm 0.05$ Vp-p (terminated with 75Ω)

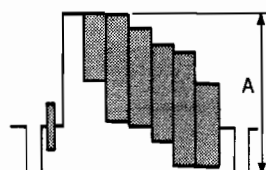

7-4-11. PB Y LEVEL ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: VO-43P Board


Preparation:

- Play back the color-bar signal portion of the alignment tape WR5-8CSE.


Test point: TP253(GND: E1)/VO-43P Board

Adjusting point: ●RV302/VO-43P Board

Specification: $A = 0.5 \pm 0.05$ Vp-p

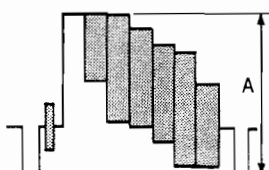

VO-43P BOARD

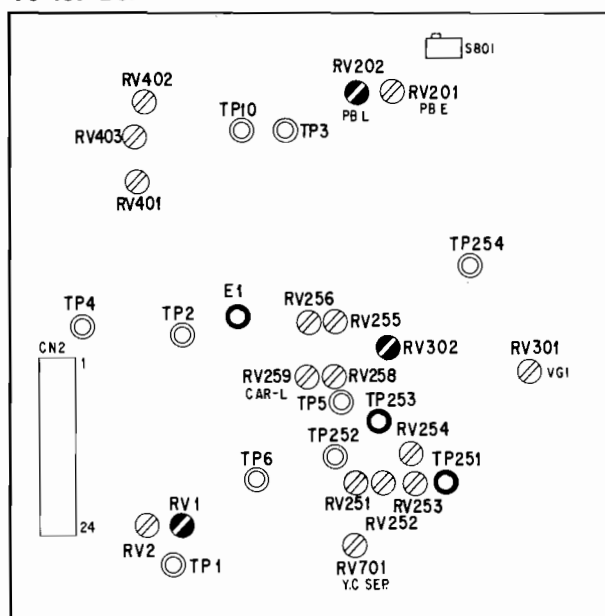

7-4-13. PB LINE OUT LEVEL ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: VO-43P Board


Preparation:

- Play back the color-bar signal portion of the alignment tape WR5-8CSE.

Test point: VIDEO OUT

Adjusting point: RV2/V0-43P Board

Specification: $A=1.0\pm0.05$ V_{p-p} (terminated with 75Ω)

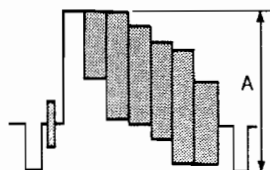


7-4-14. LOW BAND MODE Y FM CARRIER ADJUSTMENT

Equipment : Oscilloscope, Frequency counter

To be adjusted: VO-43P Board

Preparation :

- Connect the oscilloscope and frequency counter as follows.

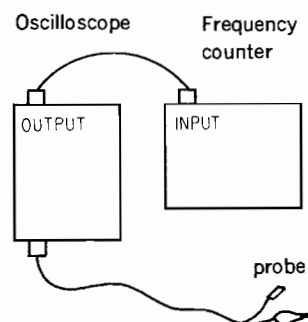


- SELF DIAG switch/side panel→ON
- Insert a P5-60MP tape.
- EE mode

Test point: TP10(GND: E1)/VO-43P Board

Adjusting point:  RV259/VO-43P Board


Specification: 4.40 ± 0.02 MHz

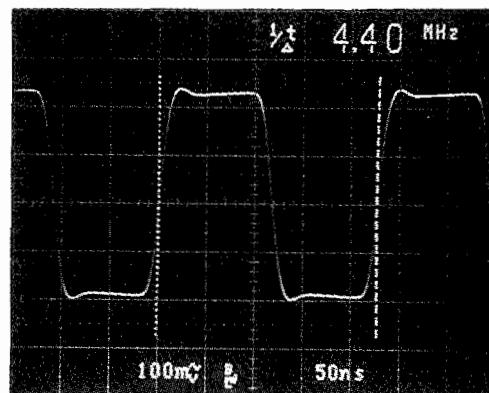

Note : After the adjustment, set the switches as follows.

- ①SELF DIAG switch/side panel→OFF
②POWER switch/side panel→OFF

VO-43P BOARD

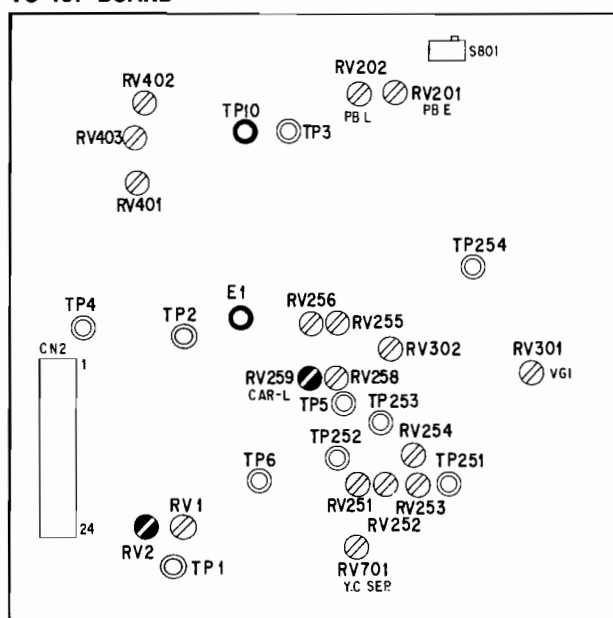

7-4-15. LOW BAND MODE Y FM DEVIATION ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: VO-43P Board


Preparation:

- Adjust as follows while performing the self-recording/play back with a P5-60MP tape.

Test point: TP253(GND: E1)/VO-43P Board

Adjusting point: ●RV258/VO-43P Board

Specification: $A=0.5\pm0.025$ V

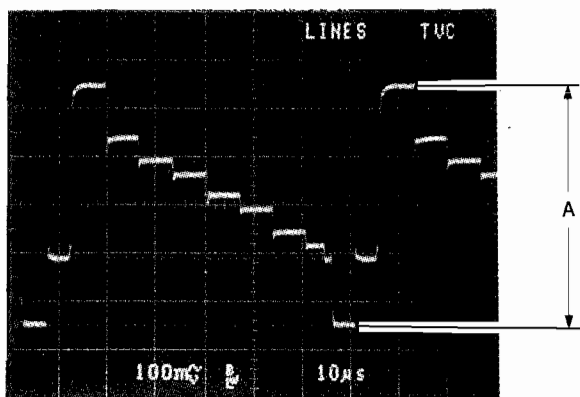


7-4-16. Hi8 MODE Y FM CARRIER ADJUSTMENT

Equipment: Oscilloscope, Frequency counter

To be adjusted: VO-43P Board

Preparation:

- Connect the oscilloscope and frequency counter as follows.

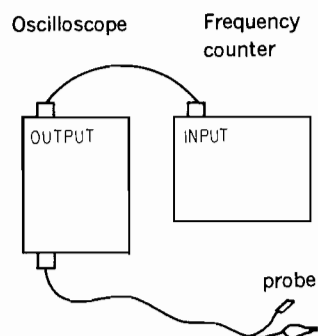

- SELF DIAG switch/side panel→ON
- Insert a E5-60ME tape.
- EE mode

Test point: TP10(GND: E1)/VO-43P Board

Adjusting point: ●RV256/VO-43P Board

Specification: 6.00 ± 0.02 MHz

Note: After the adjustment, set the switches as follows.

- ①SELF DIAG switch/side panel→OFF
- ②POWER switch/side panel→OFF

7-4-17. Hi8 MODE Y FM DEVIATION ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: VO-43P Board


Preparation:

- Perform the self-recording/play back with a E5-60ME tape.


Test point: TP253(GND: E1)/VO-43P Board

Adjusting point: ●RV255/VO-43P Board

Specification: $A=0.5\pm0.025$ V

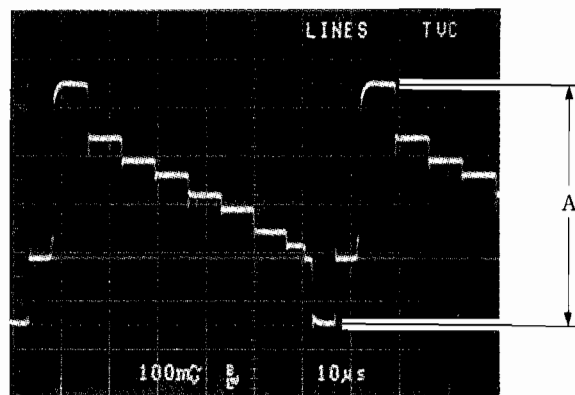

VO-43P BOARD

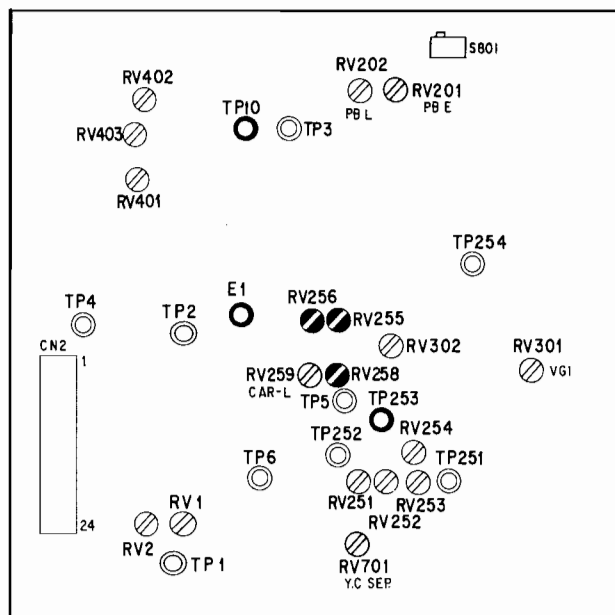

7-4-19. REC CHROMA REC CURRENT ADJUSTMENT

Equipment: Oscilloscope

To be adjusted: VO-43P Board


Preparation:

1. POWER switch/side panel→OFF
2. C425, C426, C429/VO-43P→Delete
3. POWER switch/side panel→ON
4. Insert a E5-60ME tape.
5. REC mode


Test point: TP101/SBX-1508 Board

Adjusting point: RV402/VO-43P Board

Specification: Chroma level A= 40 ± 2 mV

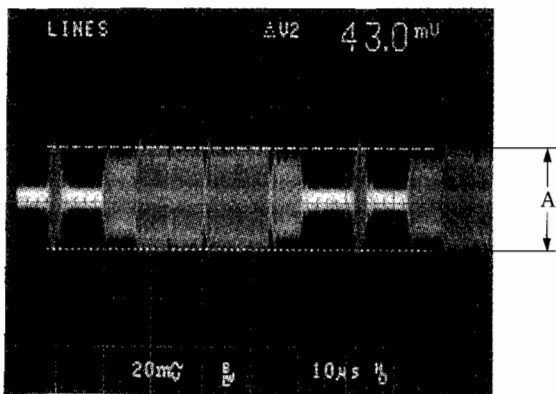


Note : After the adjustment, return C425, C426 and C429/VO-43P to normal position.

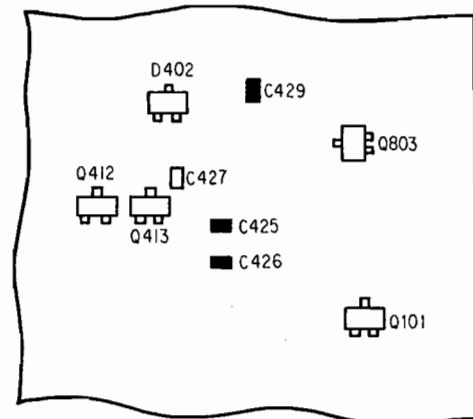


VO-43P B-SIDE

SBX-1508 BOARD

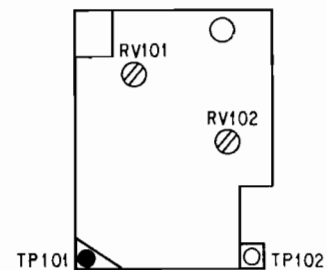


VO-43P BOARD

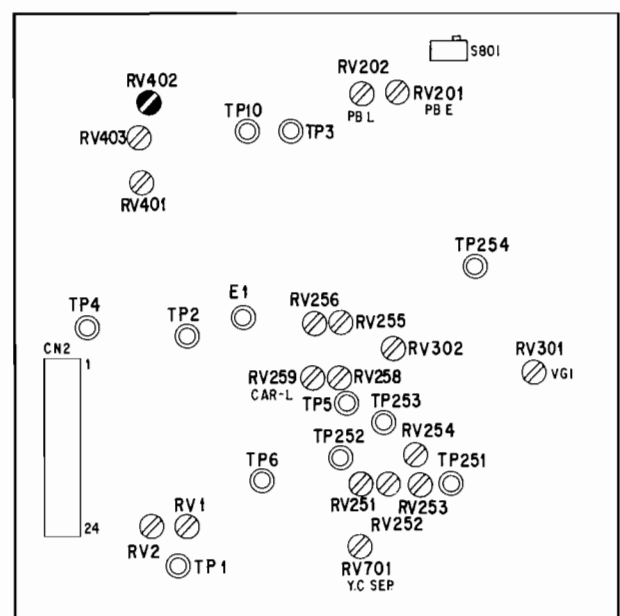

7-4-20. REC AFM REC CURRENT ADJUSTMENT

Note : Do not use the probe of 10: 1 in this adjustment because the signal level of TP101 is low. Connect directly oscilloscope through 100 ohms resistor as shown in the figure.

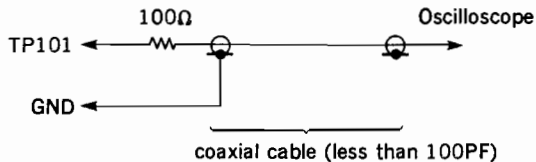

Equipment : Oscilloscope

To be adjusted : VO-43P Board


Preparation :

1. POWER switch/side panel→OFF
2. C426, C427, C429/VO-43P→Delete
3. POWER switch/side panel→ON
4. Insert a E5-60ME tape.
5. REC mode


Test point : TP101/SBX-1508 Board

Adjusting point : ●RV401/VO-43P Board

Specification : AFM level A=6±1 mV

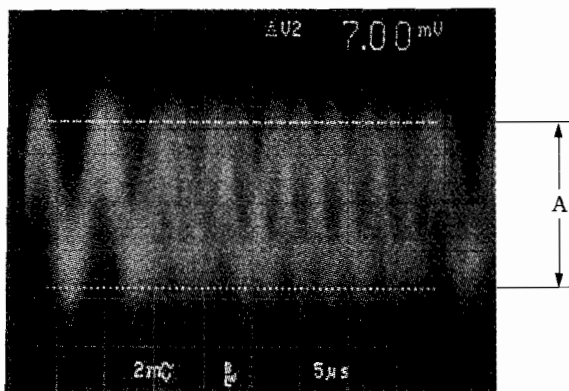


Note : After the adjustment, return C426, C427 and C429/VO-43P to normal position.

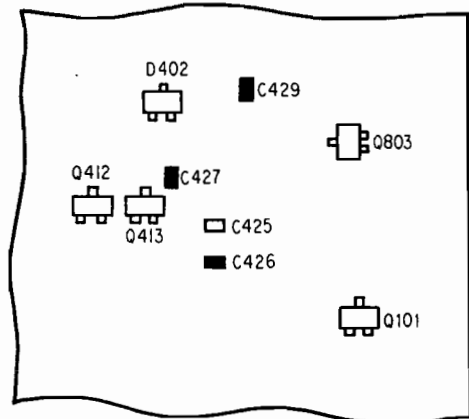


VO-43P B-SIDE

SBX-1508 BOARD

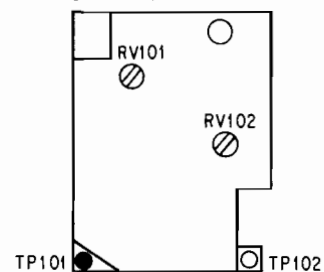

CR-43P BOARD

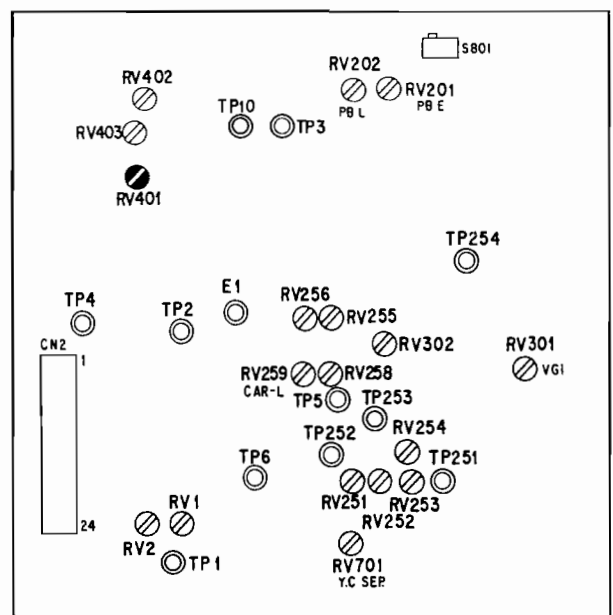

7-4-21. CHROMA CANCEL BALANCE ADJUSTMENT

Equipment : Oscilloscope

To be adjusted: CR-43P Board


Preparation :

- OUTPUT switch/Camera side panel→BARS
- REC mode

Test point: TP8(GND: E101)/CR-43P Board

Adjusting point: ⑦ RV901/CR-43P Board

Specification: Level "A"→Minimum

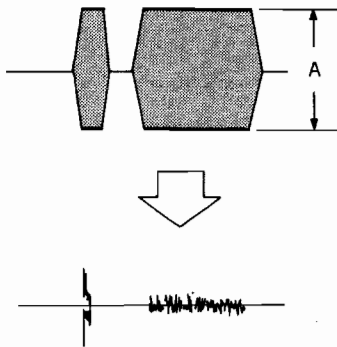

7-4-22. C CORRELATION PHASE ADJUSTMENT 1

Equipment : Oscilloscope

To be adjusted: CR-43P Board


Preparation :

- OUTPUT switch/Camera side panel→BARS
- Connect between these points on the CR-43P Board with shorting clips. TP106/CR-43P→E101/CR-43P
- EE mode

Test point: TP101(GND: E101)/CR-43P Board

Adjusting point : ①RV801, ②CV102/CR-43P Board

Specification: Chroma level→Minimum

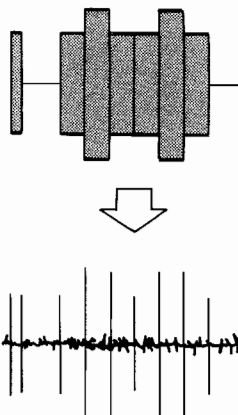

Note : After the adjustment, remove a shorting clip.

7-4-23. C CORRELATION PHASE ADJUSTMENT 2

Equipment: Oscilloscope

To be adjusted: CR-43P Board


Preparation :

- OUTPUT switch/Camera side panel→BARS
- Connect between these points on the CR-43P Board with shorting clips. TP106/CR-43P→E101/CR-43P
- EE mode

Test point: TP102(GND: E101)/CR-43P Board


Adjusting point: ①RV800, ②CV101/CR-43P Board

Specification: Chroma level→Minimum

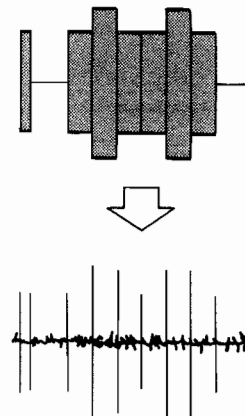

Note : After the adjustment, remove a shorting clip.

CR-43P BOARD

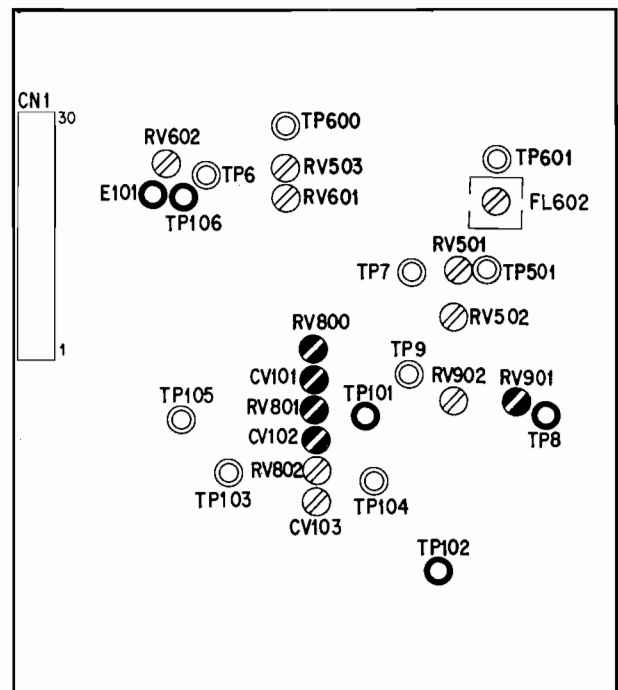

7-4-24. C CORRELATION PHASE ADJUSTMENT 3

Equipment: Oscilloscope

To be adjusted: CR-43P Board


Preparation:

- OUTPUT switch/Camera side panel→BARS
- Connect between these points on the CR-43P Board with shorting clips. TP103/CR-43P→TP104/CR-43P.
TP106/CR-43P→E101/CR-43P
- EE mode

Test point: TP105(GND: E101)/CR-43P Board

Adjusting point: RV802, CV103/CR-43P Board

Specification: Chroma level→Minimum

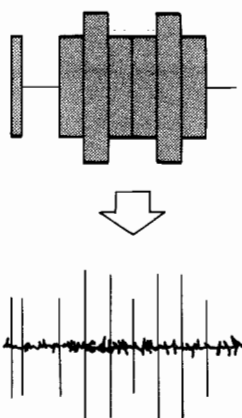

Note : After the adjustment, remove a shorting clip.

7-4-25. EE VIDEO OUT CHROMA LEVEL ADJUSTMENT

Equipment: Vectorscope

To be adjusted: CR-43P Board


Preparation:

- OUTPUT switch/Camera side panel→BARS
- EE mode

Test point: VIDEO OUT/EVW-300P rear panel

Adjustment Procedure

- Adjust RV902/CR-43P Board so that the red beam spot is located in the "R" mark on the vectorscope.

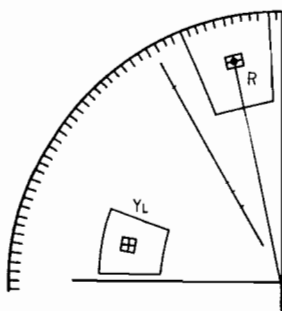

7-4-26. PB CHROMA LEVEL ADJUSTMENT

Equipment: Vectorscope

To be adjusted: VO-43P Board


Preparation:

- Play back the color-bar signal portion of the alignment tape WR5-8CSE.

Test point: VIDEO OUT

Adjustment Procedure

- Adjust RV601/CR-43P Board so that the red beam spot is located in the "R" mark on the vectorscope.

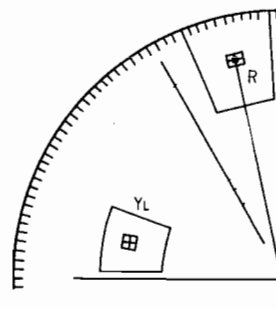

CR-43P BOARD

